



GLB ENTERPRISES
PHONE: 214-884-6243
WWW.GLBFE.COM



T-MAG XC HFJ1020A



T-MAG P-VAN HFJ6370 MINYI

THIS MANUAL DOES NOT COVER THE MAG HFJ1011G, HFJ1011GD, HFJ102DG,
HFJ1020A & HFJ1011H

THIS CATLAOG WAS PREPARED FROM THE BEST
INFORMATION AVAILABLE, WITH PAINSTAKING ATTENTION
TO ACCURACY. HOWEVER, THE ORIGINAL MANUFACTURES
MAKE MANY CHANGES IN SPECIFICATIONS AND MODELS
WITHOUT ANNOUNCEMENT. THERE FORE THESE LISTINGS
MAY NOT BE 100% CORRECT OR COMPLETE.

GLB CONNOT ACCEPT ANY RESPONSIBILITY FOR ANY ERRORS THAT MAY OCCUR.

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 1	CYLINDER HEAD (I)	P.1
FIG. 2	CYLINDER HEAD (II)	P.3
FIG. 3	CYLINDER HEAD (III)	P.5
FIG. 4	CYLINDER BLOCK (I)	P.7
FIG. 5	CYLINDER BLOCK (II)	P.9
FIG. 6	OIL PAN	P.11
FIG. 7	ENGINE MOUNTS (I)	P.13
FIG. 8	ENGINE MOUNTS (II)	P.15
FIG. 9	CRANKSHAFT & CONNECTING ROD (I)	P.17
FIG. 10	CRANKSHAFT & CONNECTING ROD (II)	P.19
FIG. 11	CRANKSHAFT & CONNECTING ROD (III)	P.21
FIG. 12	VALVE TRAIN (I)	P.23
FIG. 13	VALVE TRAIN (II)	P.25
FIG. 14	VALVE TRAIN (III)	P.27
FIG. 15	TIMING COVER (I)	P.29
FIG. 16	TIMING COVER (II)	P.31
FIG. 17	TIMING COVER (III)	P.33
FIG. 18	INTAKE MANIFOLD (I) (CARB)	P.35
FIG. 19	INTAKE MANIFOLD (II)	P.37
FIG. 20	INTAKE MANIFOLD (III)	P.39
FIG. 21	EXHAUST MANIFOLD (I) (CARB)	P.41
FIG. 22	EXHAUST MANIFOLD (II)	P.43
FIG. 23	EXHAUST MANIFOLD (III)	P.45
FIG. 24	OIL PUMP (I) (CARB)	P.47
FIG. 25	OIL PUMP (II)	P.49
FIG. 26	OIL PUMP (III)	P.51
FIG. 27	WATER PUMP	P.53
FIG. 28	RADIATOR HOSE	P.55
FIG. 29	FUEL RAIL	P.57
FIG. 30	CLUTCH & PRESSURE PLATE 5MT	P.59
FIG. 31	CLUTCH & PRESSURE PLATE 4MT	P.61
FIG. 32	TRANSMISSION (I)	P.63
FIG. 33	TRANSMISSION (II)	P.65

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 34	TRANSMISSION HOUSING (5MT)	P.67
FIG. 35	TRANSMISSION HOUSING (4MT)	P.69
FIG. 36	TRANSMISSION CONTROL (5MT)	P.71
FIG. 37	TRANSMISSION CONTROL (4MT)	P.73
FIG. 38	STARTER	P.75
FIG. 39	ALTERNATOR	P.77
FIG. 40	RADIATOR HOSES	P.79
FIG. 41	RADIATOR	P.81
FIG. 42	AIR FILTER	P.83
FIG. 43	EXHUAUST SYSTEM	P.85
FIG. 44	FUEL TANK	P.87
FIG. 45	FUEL LINE	P.89
FIG. 46	GEAR SHIFTER	P.91
FIG. 47	CLUTCH CABLE	P.93
FIG. 48	DRIVE SHAFT	P.95
FIG. 49	BRAKE & CLUTCH BRACKET	P.97
FIG. 50	ACCELRACTOR PEDAL & CABLE	P.99
FIG. 51	STEERING WHEEL & AIR BAG SYSTEM	P.101
FIG. 52	STEERING WHEEL W/O AIR BAG	P.103
FIG. 53	STEERING SHAFT AND JOINT COVER	P.105
FIG. 54	STEERING RACK	P.107
FIG. 55	FRONT STABLILIZER	P.109
FIG. 56	FRONT SUSPENSION FRAME	P.111
FIG. 57	REAR SHOCK AND SPRING	P.113
FIG. 58	FRONT STRUT	P.115
FIG. 59	FRONT HUB & KNUCKE ASM	P.117
FIG. 60	BRAKE CALIPER	P.119
FIG. 61	BRAKE CALIPER (MANDO)	P.121
FIG. 62	REAR BRAKE ASM (DRUM)	P.123
FIG. 63	REAR BRAKE ASM (DRUM-MANDO)	P.125
FIG. 64	REAR AXLE HALF SHAFT	P.127
FIG. 65	REAR AXLE HOUSING & DIFFERENTIAL	P.129

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 66	BRAKE PIPE (TYPE II)	P.131
FIG. 67	BRAKE PIPE (TYPE X)	P.133
FIG. 68	BRAKE PIPE (TYPE X W/ABS)	P.135
FIG. 69	WHEEL SPEED SENSOR (FRONT & REAR)	P.137
FIG. 70	PARKING BRAKE SYSTEM	P.139
FIG. 71	MASTER CYLINDER	P.141
FIG. 72	TIRE & WHEEL	P.143
FIG. 73	SPARE TIRE MOUNTING BRACKET (I)	P.145
FIG. 74	SPARE TIRE MOUNTING BRACKET (II)	P.147
FIG. 75	PCV VALVE	P.149
FIG. 76	DRIVER TOOL & MANUAL JACK	P.151
FIG. 77	ECU (DELPHI)	P.153
FIG. 78	ECU (DELPHI-MT20U)	P.155
FIG. 79	ECU (UASE SYSTEM M7.9.7)	P.157
FIG. 80	IGNITION COIL (DELPHI)	P.159
FIG. 81	IGNITION COIL (DELPHI III)	P.161
FIG. 82	IGNITION COIL (UAES III)	P.163
FIG. 83	WIRING HARNESS (VAN)	P.165
FIG. 84	BATTERY	P.167
FIG. 85	COMBINATION SWITCH, IGNITION SWITCH COLUMN COVER	P.169
FIG. 86	COMBINATION SWITCH, IGNITION SWITCH	P.171
FIG. 87	SIDE TURN SIGNAL LAMP & FOG LAMP	P.173
FIG. 88	REAR FOG LAMP & INTERIOR DOME LAMP	P.175
FIG. 89	TAIL LAMP	P.177
FIG. 90	LICENSE PLATE LAMP	P.179
FIG. 91	STEERING SUPPORT MEMBER	P.181
FIG. 92	DASHBOARD	P.183
FIG. 93	SWITCHES, RELAY & LIGHTER	P.185
FIG. 94	SWITCHES, RELAY & HORN	P.187
FIG. 95	RADIO	P.189
FIG. 96	SPEEDOMETER CLUSTER	P.191

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 97	FRONT WIPER MOTOR & BLADES	P.193
FIG. 98	REAR WIPER MOTOR & BLADES	P.195
FIG. 99	WINDSHIELD WASHER	P.197
FIG. 100	HEATER CONTROL	P.199
FIG. 101	AIR DUCTS	P.201
FIG. 102	HEATER HOSES	P.203
FIG. 103	HEATER BOX W/O A/C	P.205
FIG. 104	HEATER BOX ASM	P.207
FIG. 105	A/C PIPES & HOSES	P.209
FIG. 106	A/C PIPES & HOSES (SINGLE FRONT EVAP STATUS)	P.211
FIG. 107	UPPER EVAP	P.213
FIG. 108	UPPER EVAP ASM	P.215
FIG. 109	FRONT EVAP	P.217
FIG. 110	CONDENSER	P.219
FIG. 111	A/C COMPRESSOR (JSS96-HA1A)	P.221
FIG. 112	A/C COMPRESSOR (SP-10)	P.223
FIG. 113	A/C COMPRESSOR (WXH13-066)	P.225
FIG. 114	CONTROL BOX ASM	P.227
FIG. 115	VAN BODY ASM	P.229
FIG. 116	VAN HEAD LINER	P.231
FIG. 117	EXTERNAL SEALS & TRIM	P.233
FIG. 118	SIDE GLASS (VAN)	P.235
FIG. 119	A-PILLAR TRIM	P.237
FIG. 120	CENTER-PILLAR TRIM (DELUXE)	P.239
FIG. 121	CENTER-PILLAR TRIM (STANDARD)	P.241
FIG. 122	QUARTER TRIM & REAR END TRIM (DELUX)	P.243
FIG. 123	QUARTER TRIM & REAR END TRIM (STANDARD)	P.245
FIG. 124	FRONT FLOOR	P.247
FIG. 125	REAR FLOOR	P.249
FIG. 126	FRONT DOOR ASM	P.251
FIG. 127	FRONT DOOR TRIM	P.253

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 128	FRONT DOOR LOCKS & HANDLES	P.255
FIG. 129	SLIDING DOOR COMPONENTS	P.257
FIG. 130	SLIDING DOOR STOPPER	P.259
FIG. 131	SLIDING DOOR WINDOW	P.261
FIG. 132	SLIDING DOOR LOCKS & HANDLE	P.263
FIG. 133	REAR HATCH DOOR	P.265
FIG. 134	REAR HATCH DOOR LOCK	P.267
FIG. 135	WINDSHIELD GLASS	P.269
FIG. 136	FRONT BUMPER	P.271
FIG. 137	REAR BUMPER VAN	P.273
FIG. 138	FRONT GRILL	P.275
FIG. 139	FRONT PAD DASH PANEL	P.277
FIG. 140	COWL COVER	P.279
FIG. 141	WIND SHIELD PANEL	P.281
FIG. 142	FRONT SEATS	P.283
FIG. 143	MIDDLE SEATS	P.285
FIG. 144	3RD ROW SEAT	P.287
FIG. 145	HOOD	P.289
FIG. 146	CONSOLE	P.291
FIG. 147	SPLASH BOARD (MUD FLAP)	P.293
FIG. 148	SAFETY BELT	P.295
FIG. 149	MIRRORS	P.297
FIG. 150	PLUG INSTALL	P.299
FIG. 151	TOW BAR	P.301

FIGURE 1 CYLINDER HEAD (I)

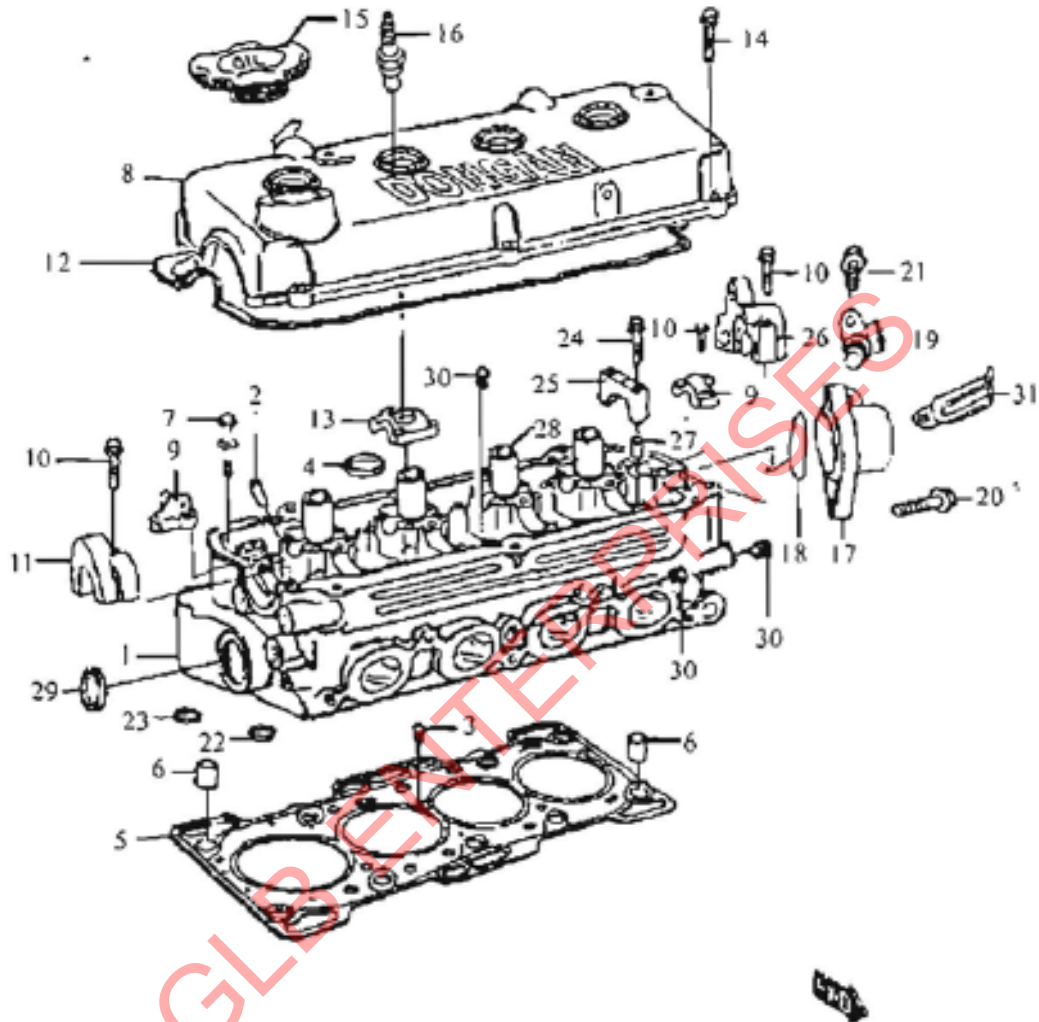


FIGURE 1 CYLINDER HEAD (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER CAP	465Q-16MB/D-1003001	1	HFJ6370K
2	VALVE GUIDE	462Q-16M-1003002-A	16	
3	ORIFICE	465Q-16M-1003006	1	
4	FREEZE PLUG	462-1000251	3	
	CYLINDER HEAD			
5	GASKET	465Q-16MC/D-1000800	1	
6	SET COLLAR	4621000015	2	
7-1	SCREW	465Q-16M-1000215	10	
7-2	WASHER	465Q-16M-1000214	10	
8	VALVE COVER	465Q-16MC/D-1007930	1	
	ROCKER ARM SHAFT			
9	END PLATE	465-16M-1003024	2	
10	SCREW	465-16M-1003220	16	
	#1 CAMSHAFT BEARING			
11	COVER	465-16M-1003021	1	
12	VALVE COVER GASKET	465-16M-B/D-1000071	1	
	ROCKER ARM SHAFT			
13	COVER	465-16M-1003028	4	
14	SCREW	465-16M-1000830	5	
15	OIL CAP	462-1009800-B	1	
16	SPARK PLUG	468Q-L-3707950	4	
	CAMSHAFT REAR			
17	COVER	468Q-L-3707950	4	
18	RUBBER GASKET	465-16M1003010	1	
	CAMSHAFT POSITION			
19	SENSOR	465Q-2D3-3700820	1	OLD #465-16M-3700820
20	SCREW	462-100814	2	
21	SCREW	462-1000810	1	
22	EXHAUST VALVE SEAT	465-16M-1003005-C	8	
23	INTAKE VALVE SEAT	465-16M-1003004	8	
24	SCREW	4654-16M-1003805	13	
	#2 CAMSHAFT BEARING			
25-1	COVER	465-16M-1003023	1	
	#3 CAMSHAFT BEARING			
25-2	COVER	465-16M1003024	1	
	#4 CAMSHAFT BEARING			
25-3	COVER	465-16M-1003025	1	
	#5 CAMSHAFT BEARING			
25-4	COVER	465-16M-1003026	1	
	#6 CAMSHAFT BEARING			
26	COVER	465-16M-100320	1	
27	SET COLLAR	465-16MB-1003031	12	
28	SPARK PLUG SLEEVE	462-1000252	4	
29	BOWL PLUG	465-16M-1003224	1	
30	SCREW PLUG	462-1000860	4	
31	POT HOOK	462-1000860	1	

FIGURE 2 CYLINDER HEAD (II)

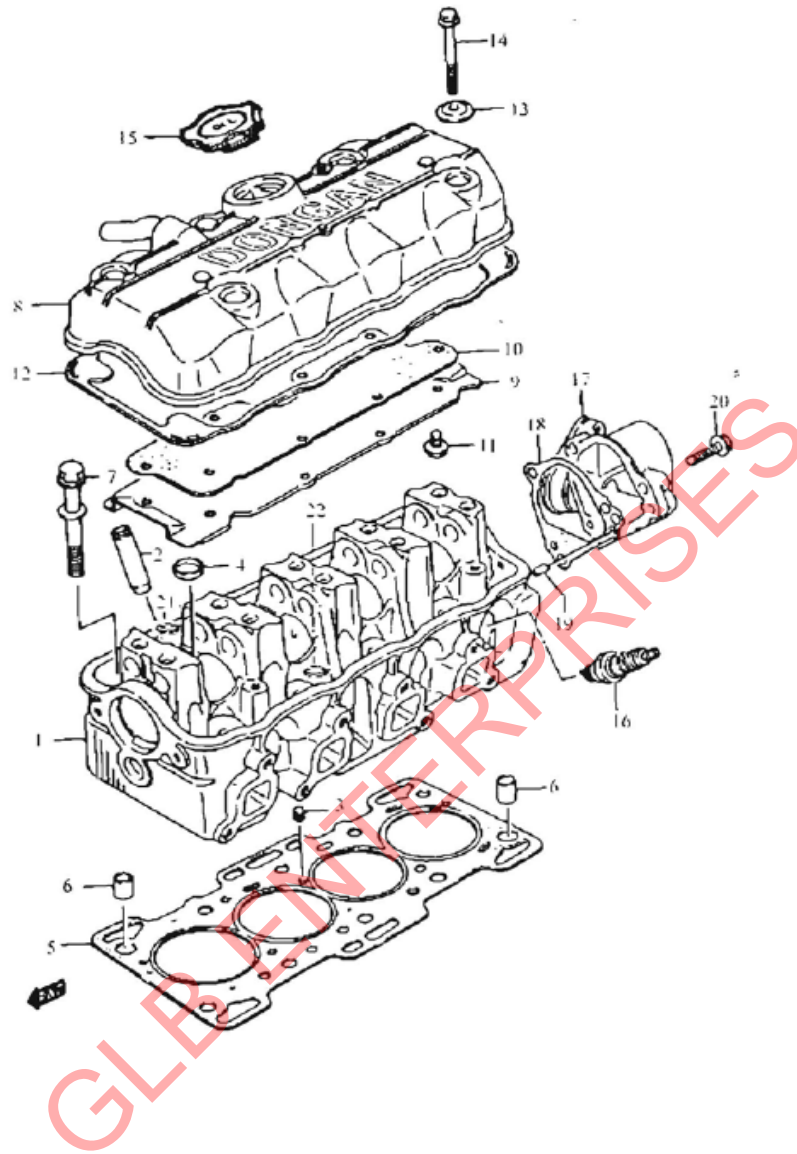


FIGURE 2 CYLINDER HEAD (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER HEAD CAP	465Q-1A/D-1003001	1	HFJ6370G, HFJ6370H
2	VALVE GUIDE	462-1003002-01	8	
3	ORIFICE	462-1003006-A	1	
4	FREEZE PLUG	462-1000251	5	
5	CYLINDER HEAD GASKET	465Q-100800	1	
6	SET COLLAR	462-1000015	2	
7-1	SCREW	462-1000215-B	10	
7-2	WASHER	462-1000214	10	
8	VALVE COVER	465Q-1A/D-1007801	1	
9	VALVE COVER CLAP BOARD	462-1007015	1	
10	VALVE COVER CLAP BOARD GASKET	462-1007016	1	
11	SCREW	462-1000228	8	
12	VALVE COVER GASKET	465-1000071-A/01	1	
13	VALVE COVER HOLD DOWN WASHER	462-1007802	4	
14	VALVE COVER BOLT	462-1000216	4	
15	OIL CAP	462-1009800-B	1	
16	SPARK PLUG	462-1A/D-3707950	4	
17	CONNECTION SEAT	465Q-1003011	1	
18	CONNECTION SEAT GASKET	462-1003010-01	1	
19	DOWEL PIN	6X10111H GB4661-89	2	
20	SCREW	462-1000244	3	
21	EXHAUST VALVE SEAT	462-1A-1003004	4	
22	INTAKE VALVE SEAT	462-1003005	4	

FIGURE 3 CYLINDER HEAD (III)

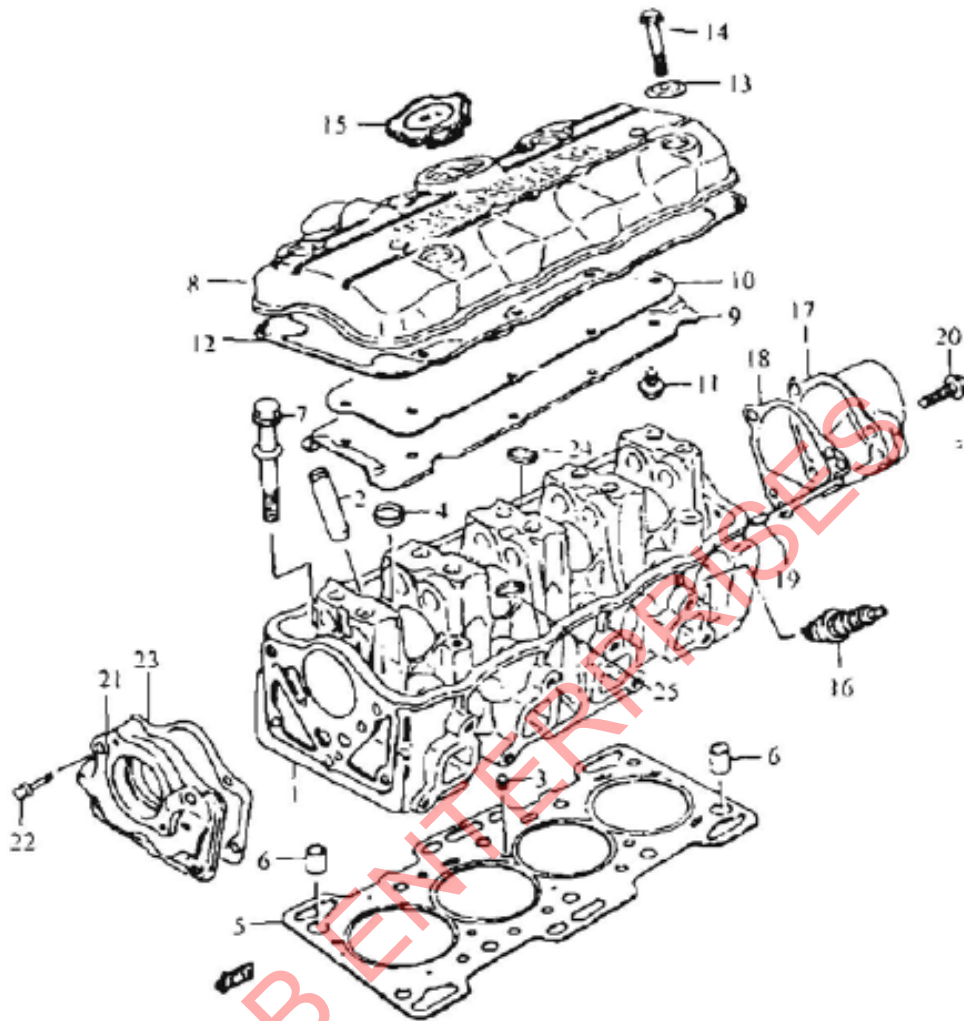


FIGURE 3 CYLINDER HEAD (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER CAP	462-1A/D-1003001/01	1	HFJ6370F
2	VALVE GUIDE	462-1003002-01	8	
3	ORIFICE	462-1003006-A	1	
4	FREEZE PLUG	462-1000251	4	
5	CYLINDER HEAD GASKET	462-1000800	1	
6	DOWEL PIN	462-1000015	2	
7-1	SCREW	462-1000215-BB	10	
7-2	WASHER	462-1000214	10	
8	VALVE COVER	462-1007093-B/B2	1	
9	VALVE COVER CLAP BOARD	462-1007015	1	
10	VALVE COVER CLAP BOARD GASKET	462-1007016	1	
11	SCREW	462-10000228	8	
12	VALVE COVER GASKET	462-1000071-A	1	
13	VALVE COVER HOLD DOWN WASHER	462-1007802	8	
14	VALVE COVER BOLT	462-1000216	4	
15	OIL CAP	462-1009800-B	1	
16	SPARK PLUG	462-1A/D-3707950	4	
17	CAMSHAFT REAR COVER	462-1A/D-1003011	1	
18	CAMSHAFT REAR COVER GASKET	462-1003010-01	1	
19	DOWEL PIN	462-1003007	2	
20	SCREW	462-10000237	3	
21	CAMSHAFT FRONT BEARING COVER	462-1003009	1	
22	SCREW	462-1000233	5	
23	CAMSHAFT FRONT BEARING COVER GASKET	462-+1003008-01	1	
24	INTAKE VALVE SEAT	462-1003004	4	
25	EXHAUST VALVE SEAT	462-1003005	4	

FIGURE 4 CYLINDER BLOCK

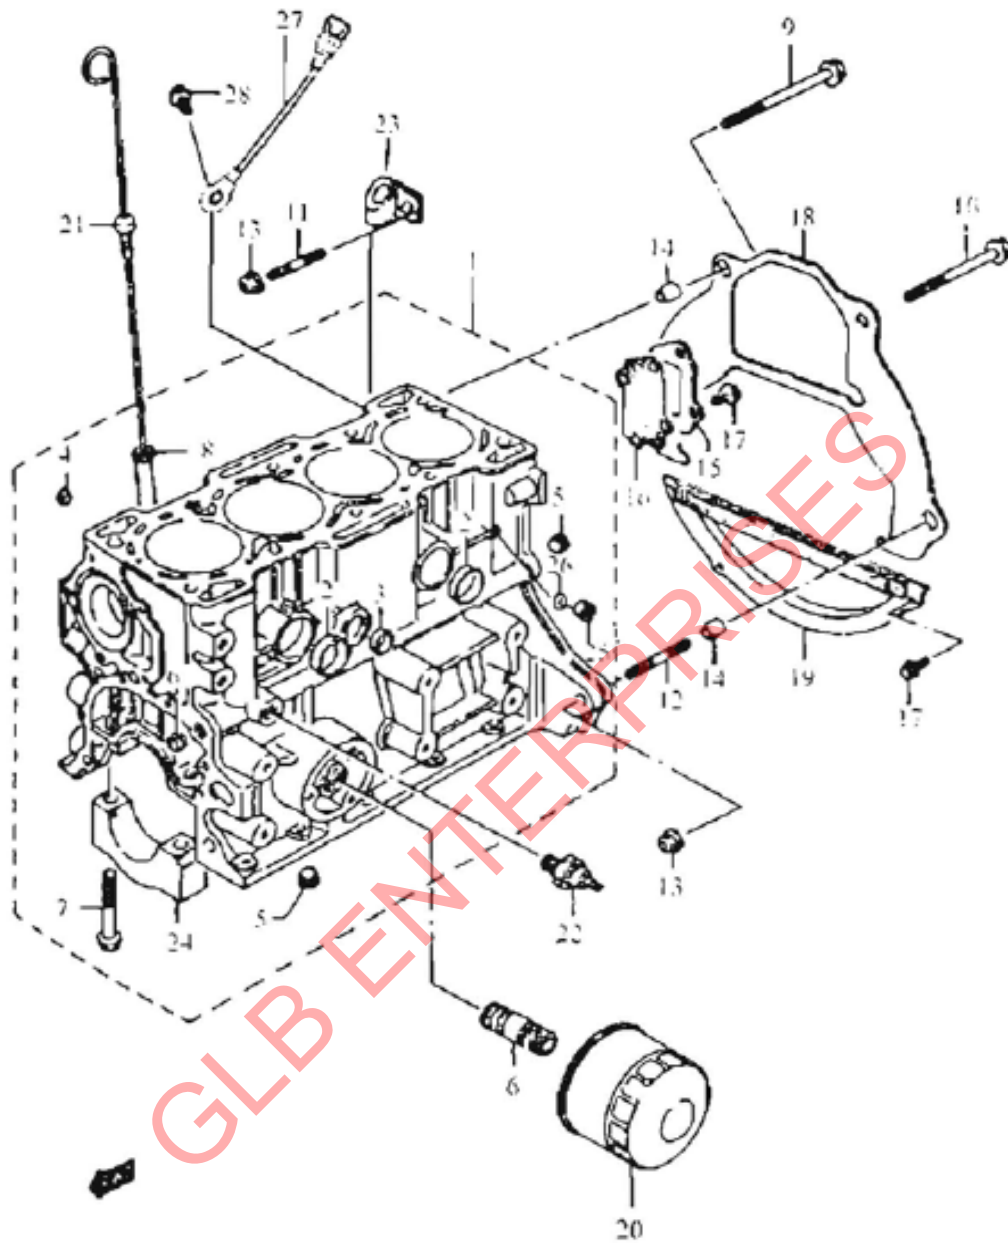


FIGURE 4 CYLINDER BLOCK (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER BLOCK	465Q-16MC/D-1002900-B	1	HFJ6370G, HFJ6370H, HFJ6370K
2	FREEZE PLUG	462-1000252	3	
3	FREEZE PLUG	462-1000251	2	
4	PIPE PLUG	462-1002005-B	1	
5	PIPE PLUG	462-1000250	3	
6	OIL FILTER CONNECTOR	465Q-1000022-C	1	
7	SCREW	462-1002201-01	10	
8	DIPSTICK TUBE	465Q-1A/D-1002810	1	
9-1	SCREW	465Q-2/D-1000242	1	
9-2	WASHER	462-1000247	1	
9-3	SPRING WASHER	10GB93-87	1	
10-1	SCREW	465Q-1A2/D-1000242	1	
10-2	WASHER	462-1000247	1	
10-3	SPRING WASHER	10GB93-87	1	
11	STUD BOLT	BS10-1700204	1	
12	STUD BOLT	BS10-1700205	1	
13-1	NUT	462-1000212	2	
13-2	WASHER	462-1000247	2	
14	DOWEL PIN	462-1000015	2	
15	WATER JACKET COVER	462-1002014	1	
16	WATER JACKET COVER GASKET	462-1002013	1	
17	SCREW	462-1000228	4	
18	TRANSMISSION UPPER PLATE	465Q-1000054	1	
19	TRANSMISSION LOWER PLATE	462-1701811-A	1	
20	OIL FILTER	1012010D2	1	
21	OIL DIPSTICK	465Q-16MC/D-1002008	1	
22	OIL PRESSURE SENSOR	465Q-3810950	1	
23	TUBE CLAP	462-10000840	1	
24-1	CRANKSHAFT BEARING CAP #1	465Q-16MC/D-1002008	1	
24-2	CRANKSHAFT BEARING CAP #2	465Q-16MC/D-1002009	1	
24-3	CRANKSHAFT BEARING CAP #3	465Q-16MC/D-1002010	1	
24-4	CRANKSHAFT BEARING CAP #4	465Q-16MC/D-1002011	1	
24-5	CRANKSHAFT BEARING CAP #5	465Q-16MC/D-1002012	1	
25	WATER JACK SCREW PLUG	462-1002203	1	
26	WATER JACK SCREW PLUG GASKET	462-1002801	1	
27	KNOCK SENSOR	465Q-16MC/D1-3752800	1	
28	SCREW	GB5786-86 M10X1.25X30	1	

FIGURE 5 CYLINDER BLOCK (II)

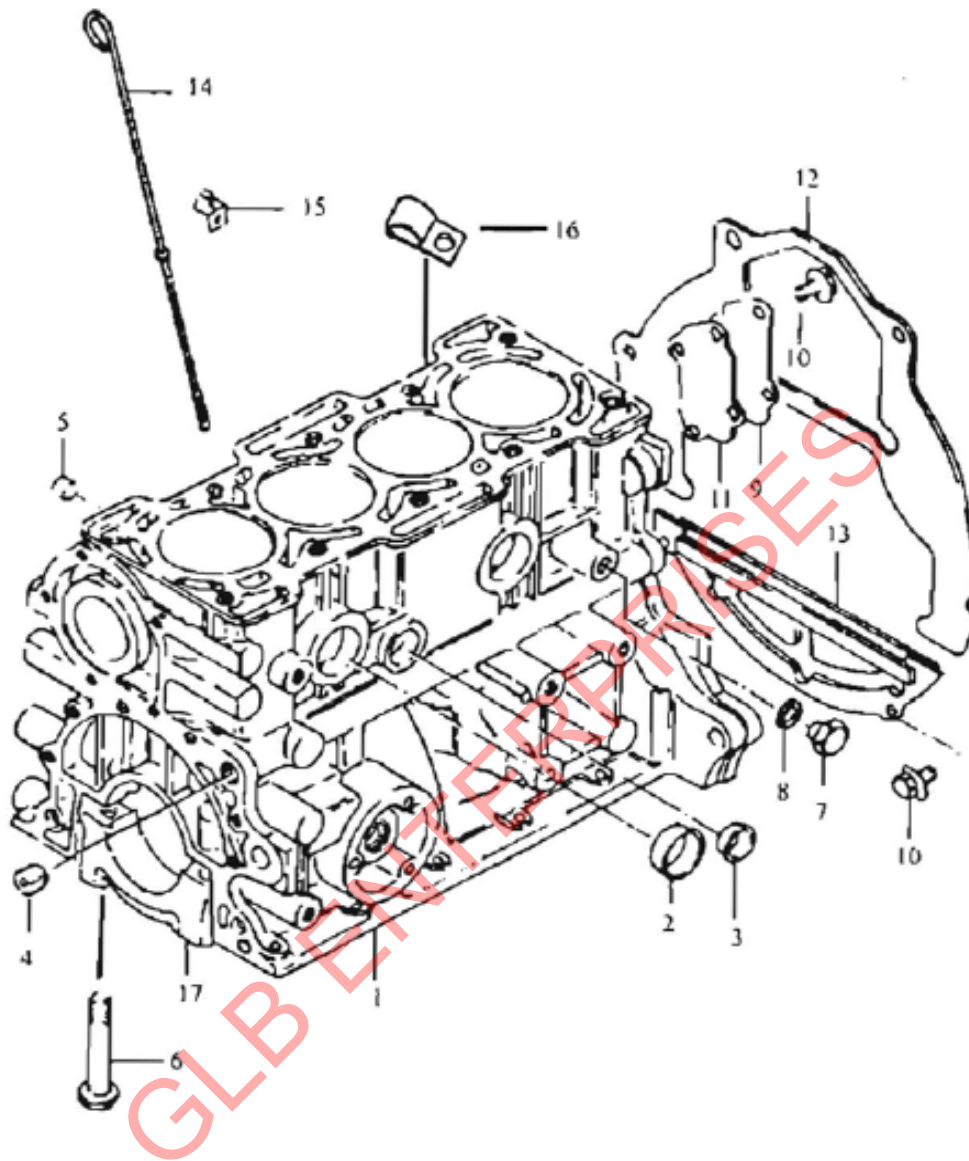


FIGURE 5 CYLINDER BLOCK (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER BLOCK ASM	462-1A-1002900	1	HFJ6370F
2	462-100252	FREEZE PLUG	3	
3	462-1000251	FREEZE PLUG	2	
4	462-1000250	PIPE PLUG	3	
5	462-1002005-13	PIPE PLUG	1	
6	462-1002201-01	MAIN CAP BOLT	10	
7	462-1002203	WATER JACKET PLUG	1	
8	462-1002801	WASHER WATER JACKET COVER	1	
9	462-1002014	PLATE	1	
10	462-1000228	SCREW	6	
11	462-1002013	WATER JACKET COVER GASKET	1	
12	462-1000054	TRANSMISSION UPPER COVER	1	
13	462-1701811-A	TRANSMISSION LOWER COVER	1	
14	462-1009802	OIL DIPSTICK	1	
15		DIPSTICK TUBE BRACKET	1	
16	462-1000840	CLAMP	1	
17	462-1002008-01	MAIN BEARING CAP #1	1	
	462-1002009-01	MAIN BEARING CAP #2	1	
	462-1002010-01	MAIN BEARING CAP #3	1	
	462-1002011-01	MAIN BEARING CAP #4	1	
	462-1002012-01			

GLB ENTERPRISES

FIGURE 6 OIL PAN

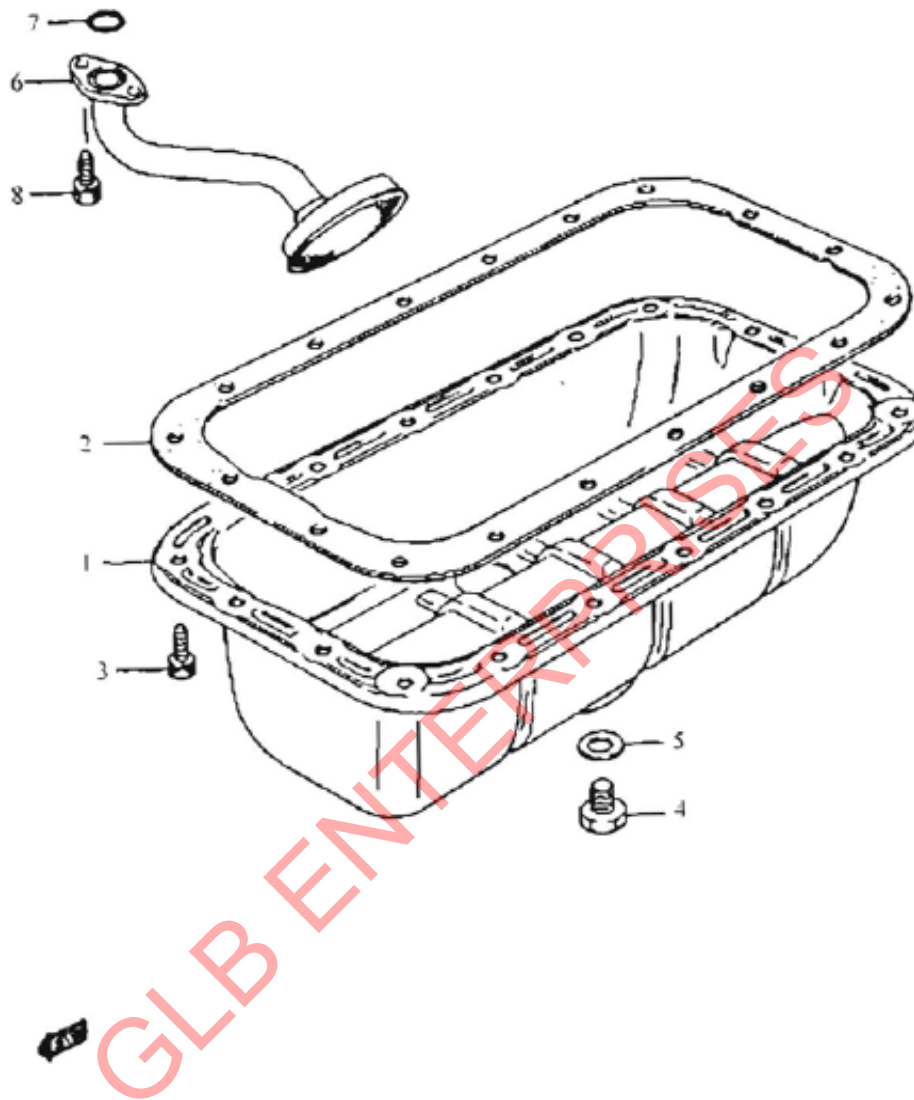


FIGURE 6 OIL PAN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	462-1009801-C	OIL PAN	1	HFJ6370F, HFJ6370G, HFJ6370H, HFJ6370K
2	462-1000021-A	OIL PAN GASKET	1	
3	462-100801	BOLT	18	
4	462-1009202-A	DRAIN PLUG	1	
5	462-1009203	DRAIN PLUG GASKET	1	
6	462-1010950	OIL PUMP SCREEN	1	
7	462-1000078	O'RING	1	
8	462-1000233	BOLT	2	

GLB ENTERPRISES

This diagram shows an exploded view of a mechanical assembly. The main component is a long, curved bracket (10) with several mounting points. At one end, there is a small rectangular component (1) with a circular feature. Above this, a larger rectangular plate (7) is shown with various mounting points. To the right of the bracket, there are several circular components (11, 12, 13, 14) and a small cylindrical component (15). The diagram includes numerous callouts for individual parts, numbered 1 through 15, indicating their positions relative to the main assembly.

FIGURE 7 ENGINE MOUNTS (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
	FRONT ENGINE MOUNT			
1	CUSHION	465Q-1001802	2	HFJ6370H, HFJ6370K
2	WASHER	Q40110	2	
3	LOCK WASHER	Q40510	2	
4	NUT	Q343C10	2	
	FRONT ENGINE MOUNT			
5	COVER LH	465Q-1000070	1	
	FRONT ENGINE MOUNT			
6	RH ASM	465Q-0001800	1	
	FRONT ENGINE MOUNT			
7	LH ASM	465Q-1001801	1	
8	BOLT	462-1000253	4	
9	LOCK WASHER	GB859-87 8	4	
	ENGINE CROSS			
10	MEMBER	AC10010100	1	
11	BOLT	Q/2A-CJ-89 M10X1.25X55	4	
	LOWER BUFFER			
12	CUSHION	HFJ1001006CA	4	
13	BUSHING	HFJ1001007CA	4	
	TOP BUFFER STOPPER			
14	ASM	HFJ1001010DA	4	
15	BOLT	462-1000209	4	
16	BOLT	Q/2A-CJ-178 M8X28X8.8	2	
17	REAR MOUNT BRACKET	HFJ1001011CA	1	
18	REAR MOUNT CUSHION	465Q-1001805	1	
19	LOCK WASHER	10GB9387	2	
20	NUT	462-1000212	2	
	REAR ENGINE			
21	MOUNTING BRACKET	465Q-1000069	1	

FIGURE 8 ENGINE MOUNTS (II)

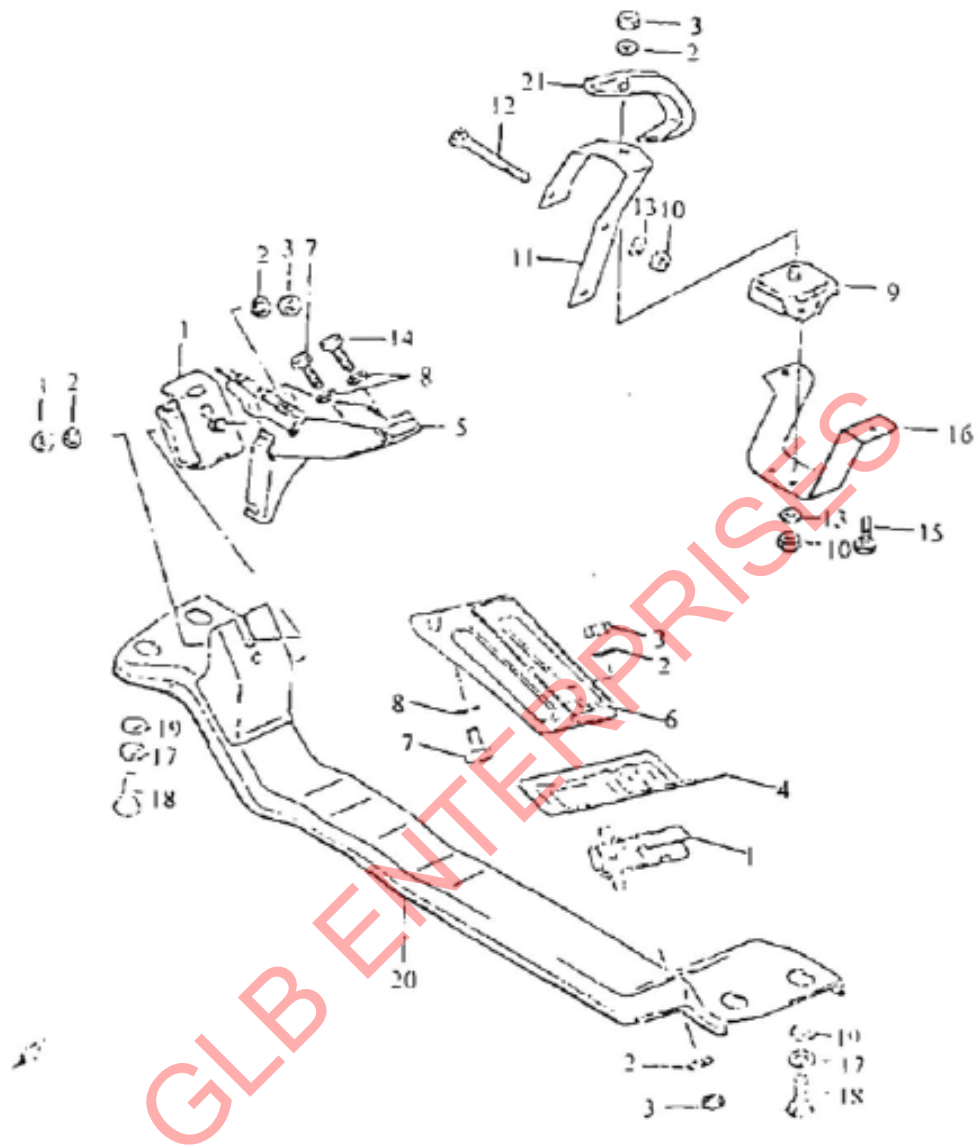


FIGURE 8 ENGINE MOUNTS (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT ENGINE MOUNT CUSHION	462-1001802	2	HFJ6370F, HFJ6370G
2	LOCK WASHER	GB93-87 10	5	
3	NUT	462-1000212	5	
4	FRONT ENGINE MOUNT COVER LH	462-1000070	1	
5	FRONT ENGINE MOUNT BRACKET RH	462-1A/D-1001800	1	
6	FRONT ENGINE MOUNT BRACKET LH	462-1001801-B	1	
7	BOLT	462-1000253	3	
8	LOCK WASHER	GB859-87 8	4	
9	REAR MOUNT CUSHION	462-1001805	1	
10	NUT	GB6170-86-M8	3	
11	REAR MOUNTING BRACKET	462-1000069	1	
12	BOLT	462-1000213	1	
13	WASHER	GB93-87 8	2	
14	BOLT	462-1000815	1	
15	BOLT	A/2Q-CJ-178 M8X28.8X8	2	
16	REAR MOUNT BRACKET	HFJ1001005FA	1	
17	WASHER	Q40510	4	
18	BOLT	Q/2AM46 M10X1.25X25	4	
19	WASHER	Q40110	4	
20	ENGINE CROSS MEMBER	AC10010200	1	

FIGURE 9 CRANKSHAFT & CONNECTING ROD (I)


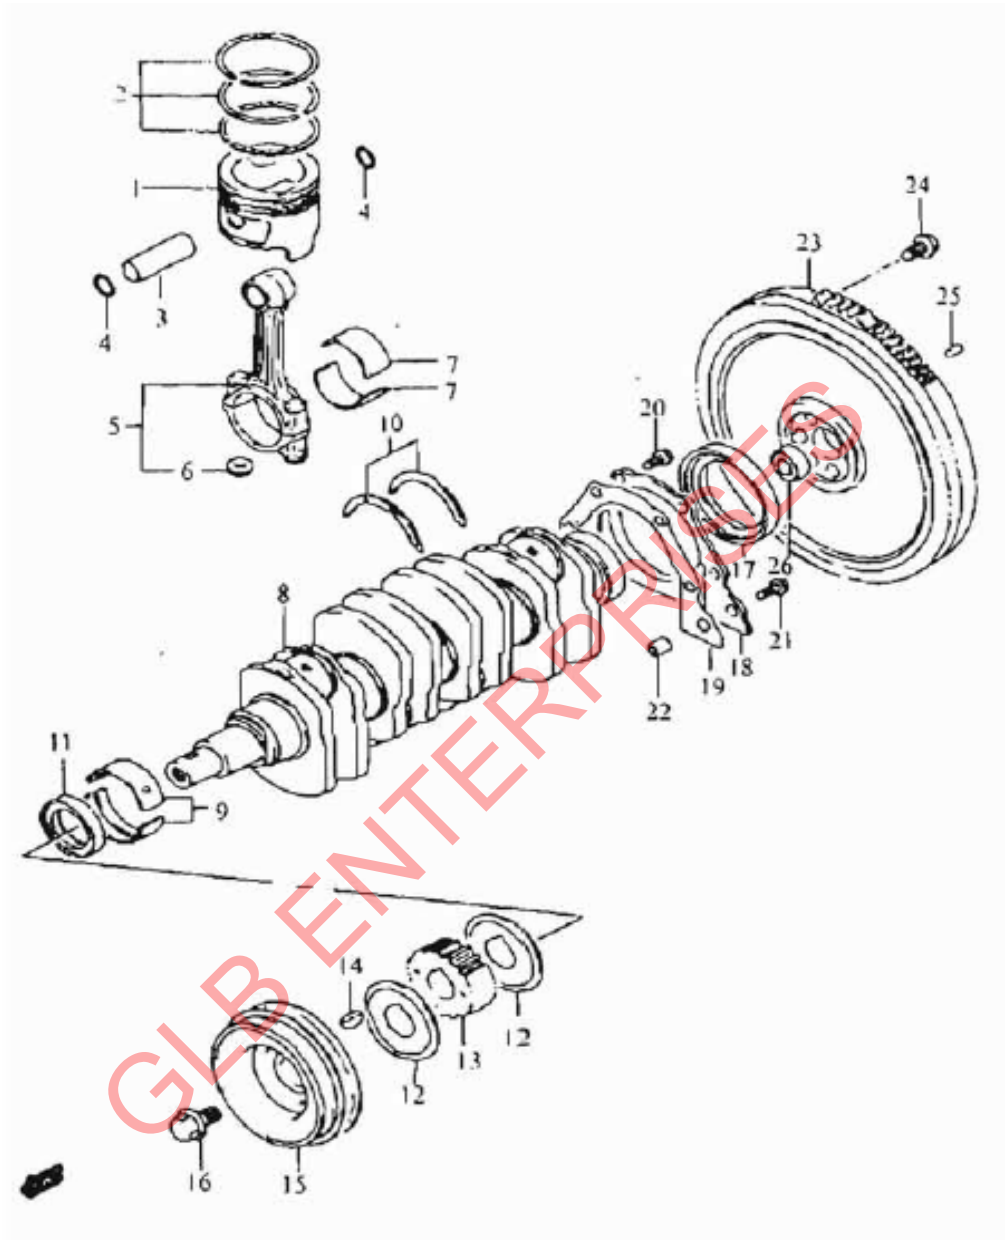


FIGURE 9 CRANKSHAFT & CONNECTING ROD (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NO.1 PISTON RING	462-1004009-01	4	HFJ6370F
	NO.2 PISTON RING	462-1004010-01	4	
	OIL RING	462-1004903-01	4	
2	PISTON	462-1A-1004008	4	
3	PISTON PIN	462-1004001	4	
4	PISTON PIN LOCK RING	462-1004002	8	
5	CONNECTING ROD ASM	462-1004900-B/01	4	
6	CONNECTING ROD BOLT	462-1004003-01	8	
	CONNECTING ROD NUT	462-1004201-01	8	
7-8	ROD BEARING	462-1004201-01	8	
9	CRANKSHAFT	465Q-1005001-B2/02	1	
10	MAIN BEARING	462-1002006	10	
11	CRANKSHAFT THRUST BEARING	462-1002007	2	
12	OIL SEALING CUP ASM	462-1006900-A	2	
13	CRANKSHAFT DRIVE GEAR	462-100033	1	
14	WOODRUFF KEY	462-1000031	1	
15	CRANKSHAFT PULLEY	462-1000038	1	
16	BOLT	462-1000227	1	
17	REAR MAIN SEAL	462-1005901-A	1	
18	CRANKSHAFT REAR MAIN SEAL BRACKET	462-1002015	1	
19	GASKET		1	
20	BOLT	462-1002202	4	
21	BOLT	462-1000221	2	
22	DOWEL PIN	462-1000017	2	
	FLYWHEEL W/RING			
23	GEAR	462-1A/D-1005803	1	
24	BOLT	462-1005201-A	6	
25	ROLL PIN	1011B GB4661	1	
26	PILOT BEARING	GB/T276-94	1	6000DDUR

FIGURE 10 CRANKSHAFT & CONNECTING ROD (II)

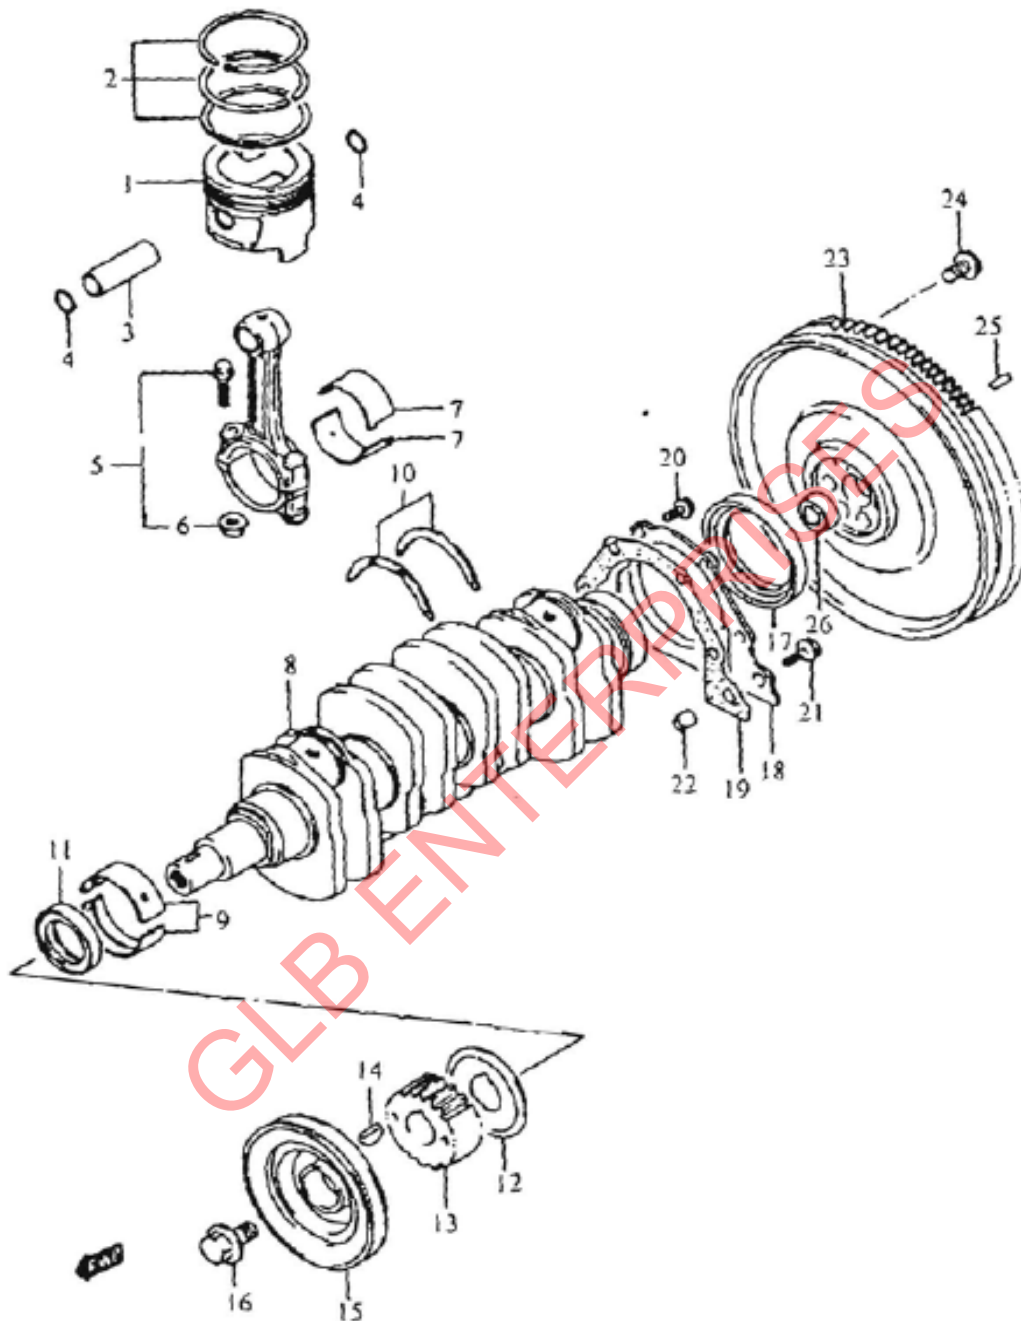

THIS FIGURE IS AVAILABLE TO THE HFJ6370G & HFJ6370H MINYI VAN

Copyright © GLB2014 R.26

FIGURE 10 CRANKSHAFT & CONNECTING ROD (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PISTON	465Q-1004008-01	4	
2	PISTON RING #1	465Q-1004009-01	4	
	PISTON RING #2	465Q-1004016-01	4	
	PISTON OIL RING	465Q-1004903-01	4	
3	PISTON PIN	465Q-1004001	4	
4	PISTON PIN SNAP RING	462-1004002	8	
5	CONNECTING ROD	462-1004900-01/B	4	DA465Q
		465Q-1A-1004900-01	4	DA465Q-1A
5-2	CONNECTING ROD BOLT	462-1004003-01	8	
6	CONNECTING ROD NUT	462-1004201-01	8	
7	ROD BEARING	462-1004004	8	
8	CRANKSHAFT	465-Q1005001-B2/02	1	DA465Q
		465Q-1A-1005001	1	DA465Q-1A
9	MAIN BEARING	462-1002006	10	
10	MAIN BEARING THRUST WASHER	462-1002007	2	
11	FRONT CRANKSHAFT SEAL	462-1006900-A	1	
12	RETAINING RING	462-1000033	1	
13	CRANKSHAFT TIMING GEAR	465Q-1000034	1	
14	WOODRUFF KEY	462-1000031	1	
15	CRANKSHAFT PULLEY	462-1000038	1	DA465
		465Q-5-1000038-A	1	DA465Q-1A
16	BOLT	462-1000227	1	
17	REAR MAIN SEAL	462-1005901-A	1	
18	REAR MAIN SEAL BRACKET	462-1002015	1	
19	GASKET	462-1002016-01	1	
20	BOLT	462-1002202	4	
21	BOLT	462-1000221	2	
22	DOWEL PIN	462-1000017	2	
23	FLYWHEEL W/RING GEAR	462-1005803	1	
24	BOLT	462-1005201-A	6	
25	ROLL PIN	1011B GB4661	1	
26	PILOT BEARING	GB/T276-94	1	6000DDUR

THIS FIGURE IS AVAILABLE TO THE HFJ6370G & HFJ6370H MINYI VAN

FIGURE 11 CRANKSHAFT & CONNECTING ROD (III)

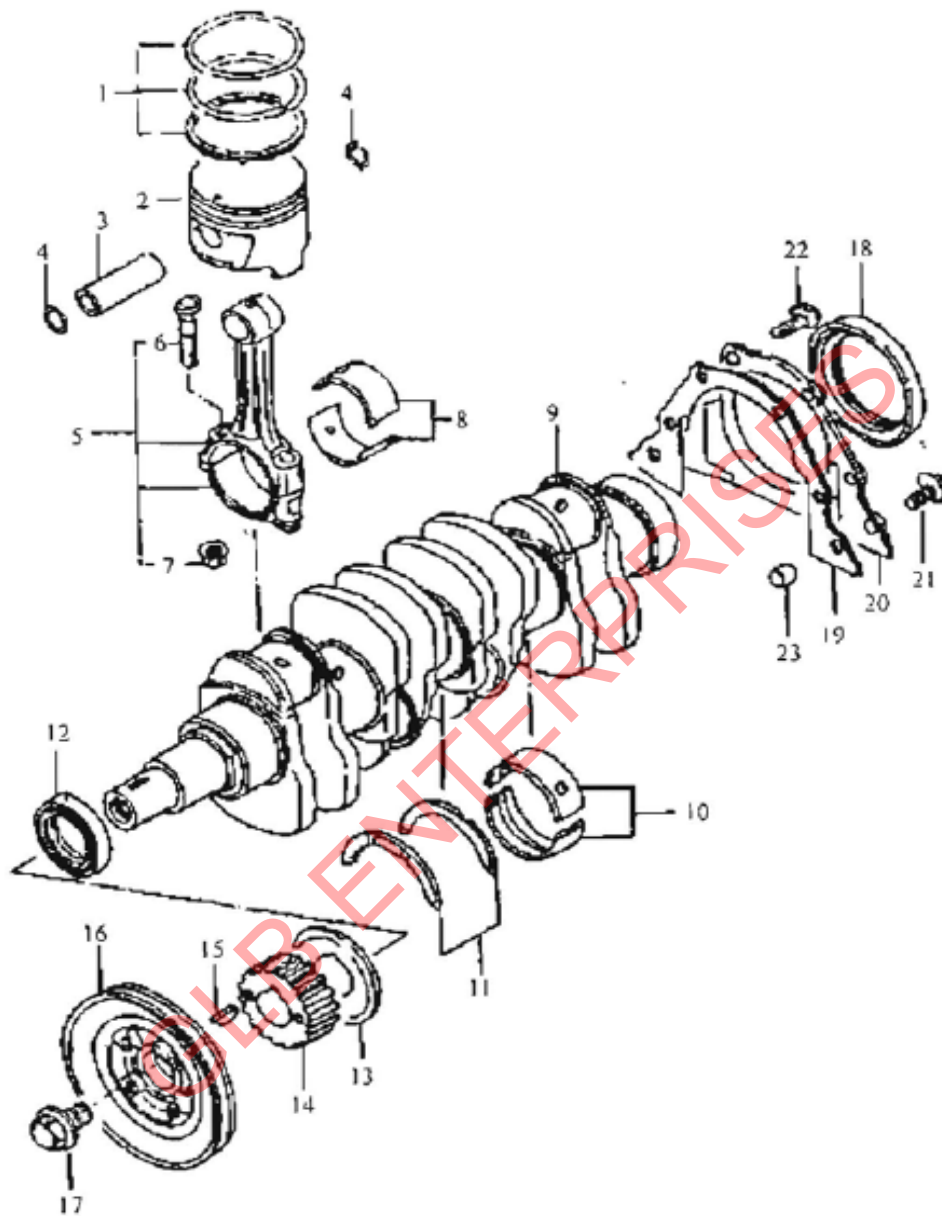


FIGURE 11 CRANKSHAFT & CONNECTING ROD (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PISTON RING #1	462-1004009-01	4	HFJ6370F
	PISTON RING #2	462-1004010-01	4	
	PISTON OIL RING	462-1004903-01	4	
2	PISTON	462-1A-1004008	4	
3	PISTON PIN	462-1A-1004008	4	
4	PISTON PIN SNAP RING	462-1004002	8	
5	CONNECTING ROD	462-1004900-B/01	4	
6	CONNECTING ROD BOLT	462-1004003-01	8	
7	CONNECTING ROD NUT	462-1004201-01	8	
8	ROD BEARING	462-1004004	8	
9	CRANKSHAFT	465Q-1005001-B2/02	1	
10	MAIN BEARING	462-1002006	10	
11	MAIN BEARING THRUST WASHER	462-1002007	2	
12	FRONT CRANKSHAFT SEAL	462-1006900-A	1	
13	RETAINING RING	462-1000033	1	
14	CRANKSHAFT TIMING GEAR	462-1000034-01	1	
15	WOODRUFF KEY	462-1000031	1	
16	CRANKSHAFT PULLEY	462-1000038	1	
17	BOLT	462-1000227	1	
18	REAR MAIN SEAL	462-1005901-A	1	
19	GASKET	462-1002016-01	1	
20	REAR MAIN SEAL BRACKET	462-1002015	1	
21	BOLT	462-1002202	2	
22	BOLT	462-1000221	4	
23	ROLL PIN	462-1000017	2	

FIGURE 12 VALVE TRAIN (I)

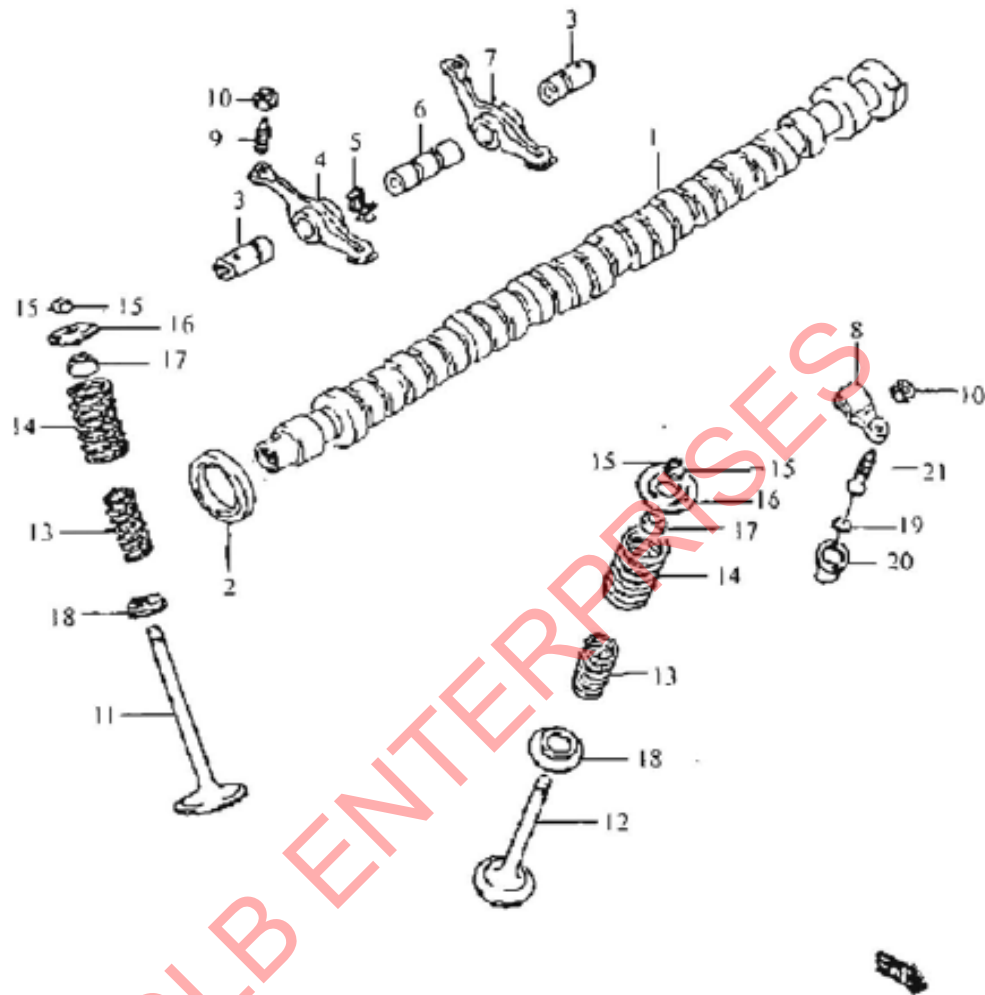


FIGURE 12 VALVE TRAIN (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CAMSHAFT	465Q-16MC/D1-1006810	1	HFJ6370K
2	FRONT CAMSHAFT SEAL	462-1006900-A	1	
3	FRONT & REAR ROCKER SHAFT	465Q-16M-1007033	2	
4	#1 INTAKE ROCKER ARM	465Q-16M-1007820	4	
5	RING	465Q-16M-1007040	5	
6	MID ROCKER ARM SHAFT	465Q-16M-1007034	3	
7	#2 INTAKE ROCKER ARM	465Q-16M-1007821	4	
8	EXHAUST ROCKER ARM CAP ASM	465Q-16M-1007822	8	
9	INTAKE VALVE ADJUSTING SCREW	465Q-16M-1007038	8	
10	NUT	465Q-16M-1007201	16	
11	INTAKE VALVE	465Q-16M-1007009	8	
12	EXHAUST VALVE	465Q-16M-1007010	8	
13	INNER VALVE SPRING	465Q-16M-1007037	16	
14	OUTER VALVE SPRING	465Q-16M-1007036	16	
15	VALVE KEEPER	465Q-16M-1007014	32	
16	VALVE SPRING RETAINER	465Q-16M-1007013	16	
17	VALVE STEM SEAL	465Q-16M-1007011	16	
18	VALVE SPRING SEAT	465Q-16M-1007011	16	
19	SNAP RING	465Q-16MB/D-1003003	8	
20	ADJUSTING SCREW SEAT	465Q-16MB/D-1003030	8	
21	EXHAUST VALVE ADJUSTING SCREW	465Q-16M-1007039	8	

FIGURE 13 VALVE TRAIN (II)

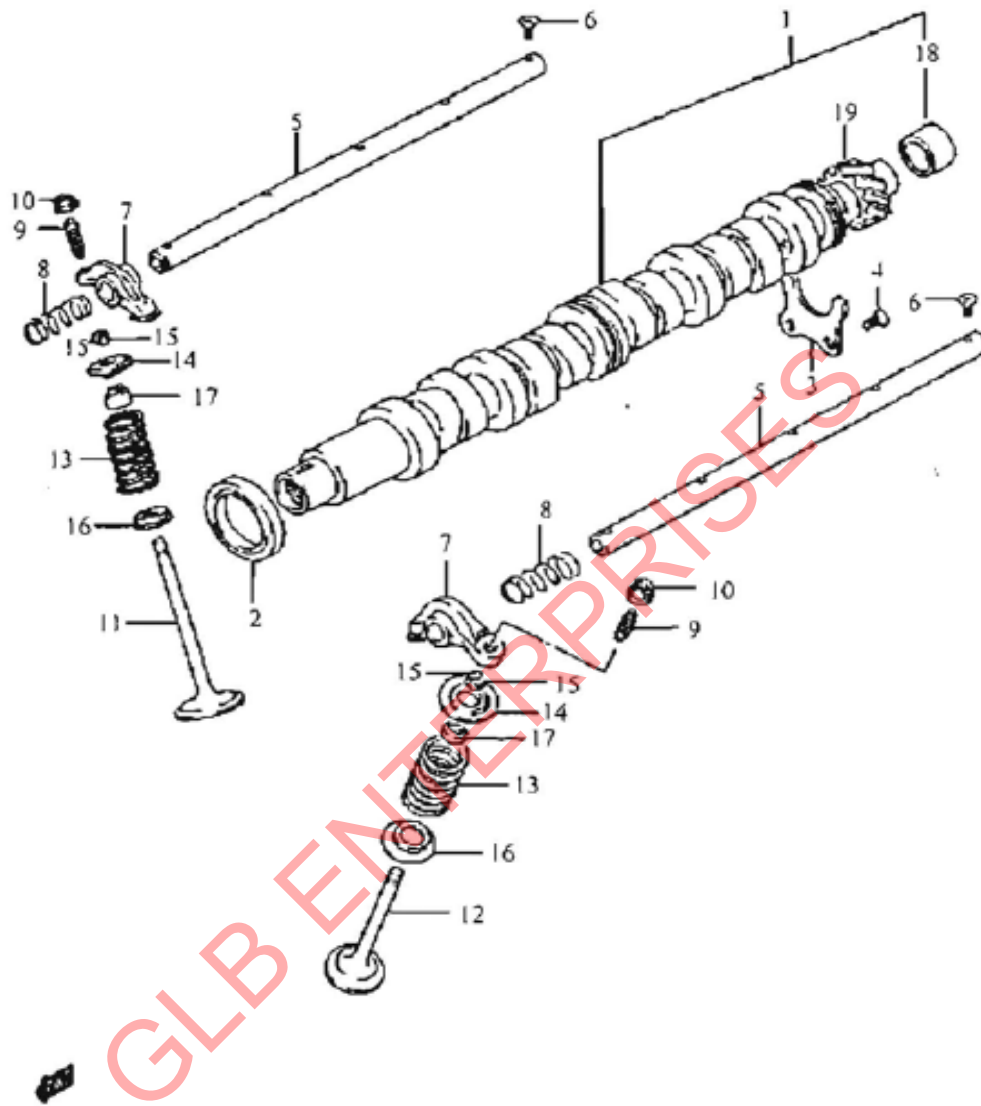


FIGURE 13 VALVE TRAIN (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CAMSHAFT ASM	465Q-1006801-B	1	HFJ6370G & HFJ6370H
2	FRONT CAMSHAFT SEAL	462-1006900-A	1	
	CAMSHAFT THRUST			
3	SPACER	462-1003013	1	
4	SCREW	462-1003206	2	
	ROCKER ARM SHAFT			
5	LH/RH	462-1007901	2	
6	SCREW	462-1003205	10	
7	ROCKER ARM	462-1007900	8	
	ROCKER ARM SHAFT			
8	SPRING	462-1007008	8	
	VALVE ADJUSTING			
9	SREW	462-1007001	8	
10	NUT	462-1007201	8	
11	INTAKE VALVE	462-1007009	4	
12	EXHAUST VALVE	462-1007010	4	
13	VALVE SPRING	462-1007012	8	
14	VALVE SPRING SEAT	462-1007013	8	
15	VALVE KEEPER	462-1007014	16	
	VALVE SPRING LOWER			
16	SEAT	462-1007011	8	
17	VALVE STEM SEAL	462-1007902-01	8	
	DISTRIBUTOR LOCK			
18	SET	465Q-1006004-01	1	
19	DISTRIBUTOR GEAR	462-1006002	1	

FIGURE 14 VALVE TRAIN (III)

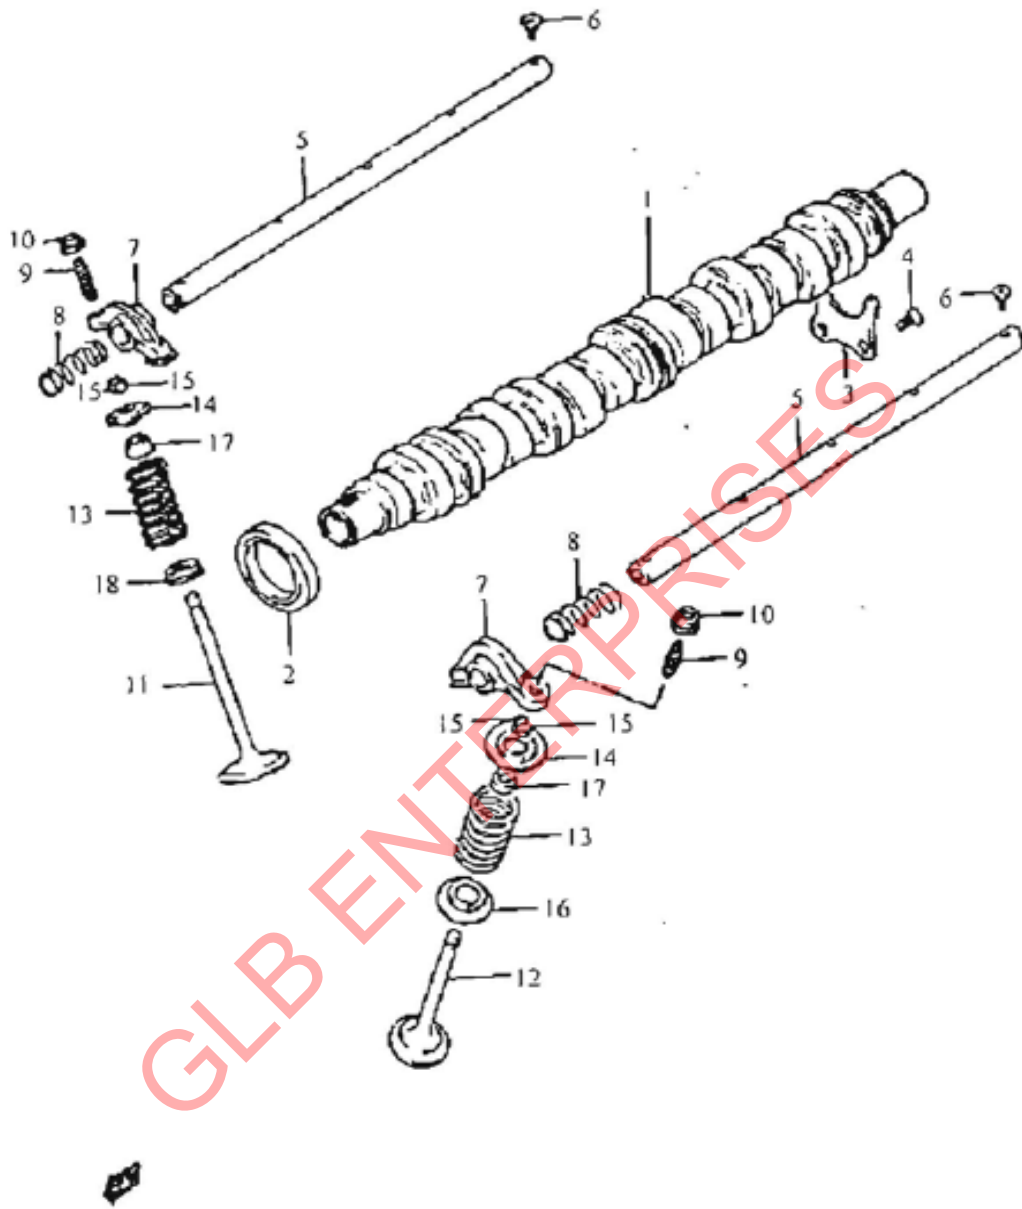


FIGURE 14 VALVE TRAIN (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CAMSHAFT	462-1006001/01	1	HFJ6370F
2	FRONT CAMSHAFT SEAL	462-1006900-A	1	
	CAMSHAFT THRUST		1	
3	SPARCER	462-1003013		
4	SCREW	462-1003206	2	
5	ROCKER ARM SHAFT	462-1007901	2	
6	SCREW	462-1003205	10	
7	ROCKER ARM	462-1007900	8	
	ROCKER ARM SHAFT		8	
8	SPRING	462-1007008		
	VALVE ADJUSTING		8	
9	SCREW	462-1007001		
10	NUT	462-1007201	8	
11	INTAKE VALVE	462-1007009	4	
12	EXHAUST VALVE	462-1007010	4	
13	VALVE SPRING	462-1007013	8	
	VALVE SPRING		8	
14	RETAINER	462-1007013		
15	VALVE KEEPER	462-1007014	16	
16	VALVE SPRING SEAT	462-1007011	8	
17	VALVE STEM SEAL	462-1007902-01	8	

FIGURE 15 TIMING COVER (I)

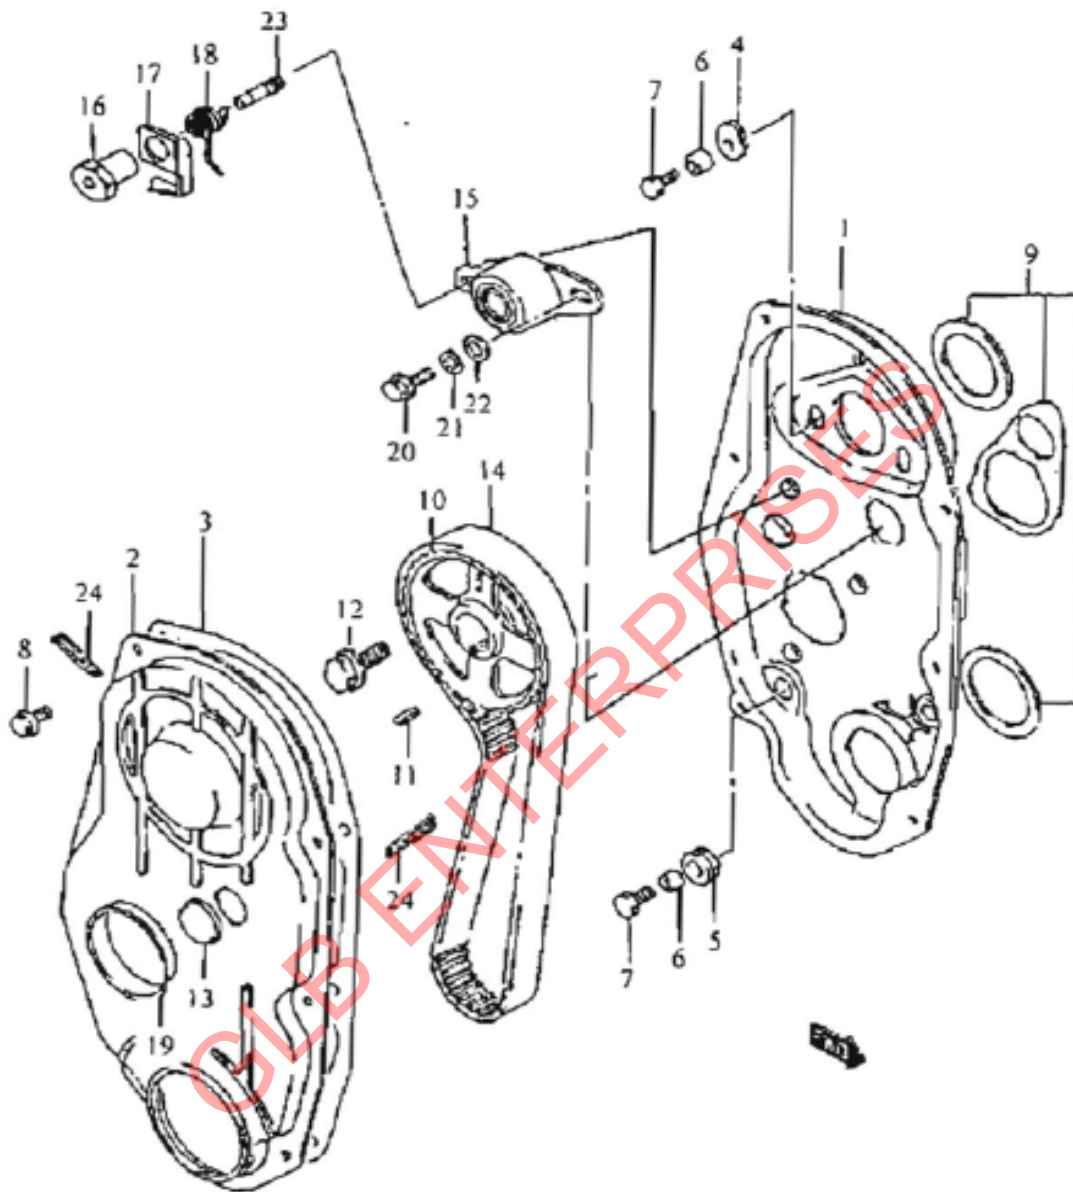


FIGURE 15 TIMING COVER (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INNER TIMING COVER	465Q-16MC/D-1000803	1	HFJ6370K
2	OUTER TIMING COVER	465Q-16MC/D-1000012	1	
3	TIMING COVER GASKET	465Q-16MC/D-1000036	1	
4	RUBBER GASKET	465Q-16MC/D-1000036	2	
5	RUBBER GASKET	462-1000025-A	2	
6	BUSHING	462-1000027	4	
7	SCREW	465Q-1000804	4	
8	SCREW	462-1000228	6	
9	GASKET	465Q-16M-1000123	1	
		465Q-16M-1000124	2	
10	CAMSHAFT GEAR	465Q-16MC/D-1000032	1	
11	WOODRUFF KEY	462-1000031	1	
12	CAMSHAFT GEAR BOLT	462-1000227	1	
13	BLIND PLUG CAP OUTER	462-1000010	1	
14	TIMING BELT	465Q-16MC/D-1000035	1	88ZA19
15	TENSIONER	465Q-16MC/D-1000910	1	
16	STUD BOLT	462-1000030	1	
17	SPRING BRACKET	462-1000029	1	
18	TIMING BELT TENSIONER SPRING	462-1000028	1	
19	OUTER COVER PLUG GASKET	462-1000011-A	1	
20	SCREW	462-1000224-B	1	
21	LOCK WASHER	GB859-87 8	1	
22	SEAL	462-1000226	1	
23	STUD BOLT	4162-1307201	1	
24	POT HOOK	462-1000860	1	

FIGURE 16 TIMING COVER (II)

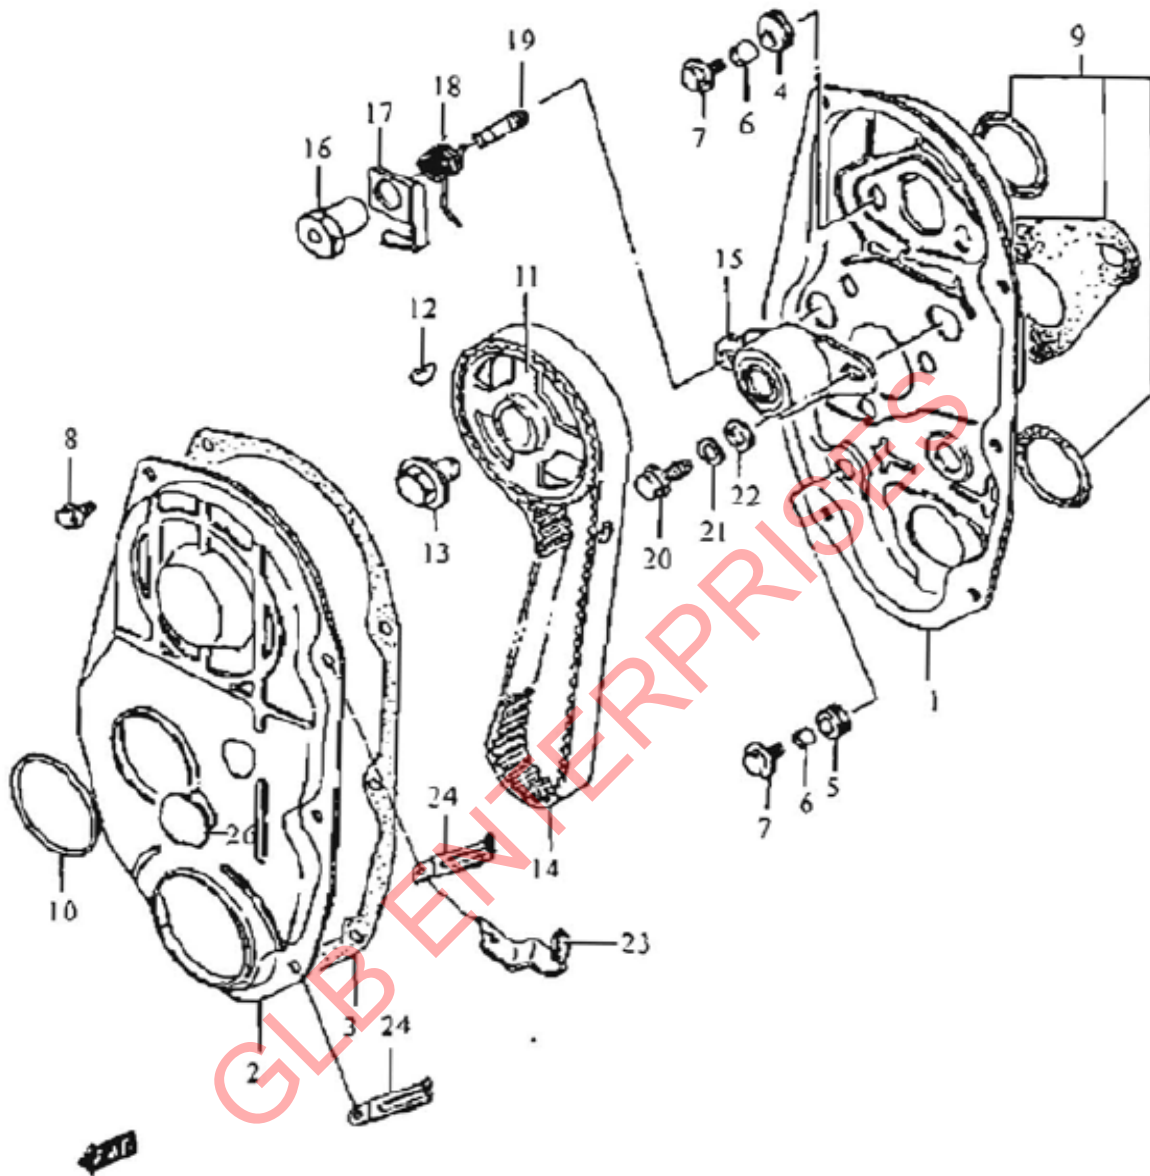


FIGURE 16 TIMING COVER (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INNER TIMING COVER	465Q-1000803	1	HFJ6370G
		465Q-1A-1000803	1	HFJ6370H
2	OUTER TIMING COVER	462-100900	1	DA462-1A
		465Q-1A-100900	1	DA465Q-1A
3	TIMING COVER GASKET	462-100036	1	DA462-1A
		465Q-1A-1000036	1	DA465Q-1A
4	RUBBER GASKET	462-1000025-A	2	
5	RUBBER GASKET	462-1000026-A	2	
6	BUSHING	462-1000027	4	
7	BOLT	465Q-1000804	4	
8	BOLT	462-1000228	6	
9	GASKET	462-1000004	2	
		462-1000005	1	
		462-1000006	1	
10	OUTSIDE RUBBER PLUG GASKET	462-1000011-A	1	
11	CAMSHAFT GEAR	465Q-1000032	1	DA462-1A
		465Q-1A-1000032	1	DA465Q-1A
12	WOODRUFF KEY	462-1000031	1	
13	CAMSHAFT GEAR BOLT	462-1000227	1	
14	TIMING BELT	465Q-1000035	1	DA465Q, 88ZA19
		465Q-1A-1000035A	1	DA465Q-1A, 90ZA19
15	TIMING BELT TENSIONER	462-1000901-03	1	
16	STUD BOLT	462-1000030	1	
17	TENSIONER SPRING BRACKET	462-1000029	1	
18	TENSION SPRING	462-1000028	1	
19	STUD BOLT	462-1307201	1	
20	BOLT	4162-1000224-B	1	
21	LOCK WASHER	GB93-878	1	
22	GASKET	462-1000226	1	
23	POT HOOK	465Q-1000073	1	
24	POT HOOK	462-1000860	2	
26	OUTER BLIND PLUG	462-1000011-A	1	

FIGURE 17 TIMING COVER (III)

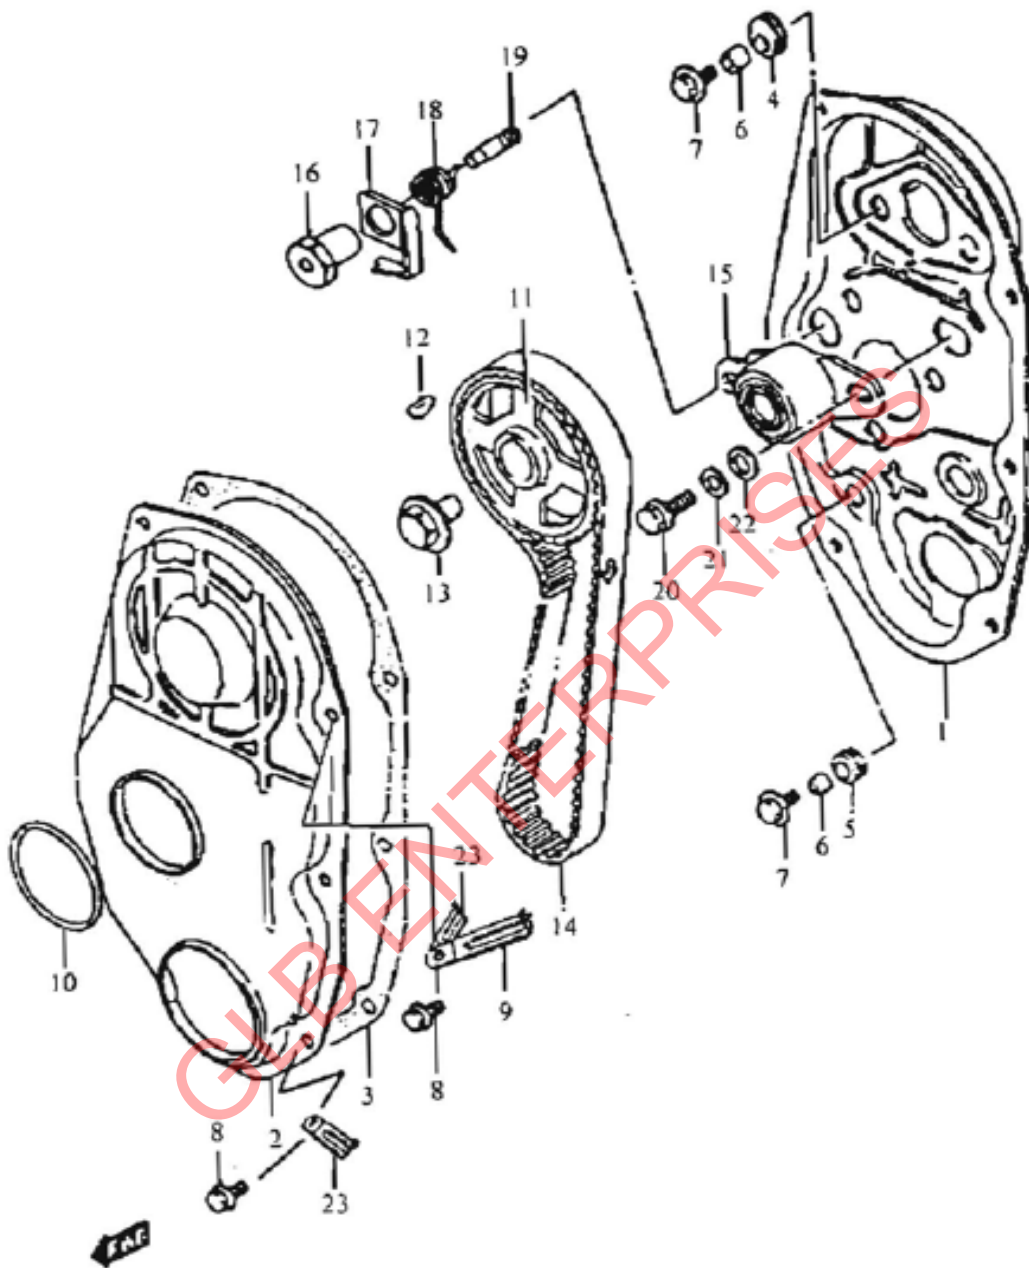


FIGURE 17 TIMING COVER (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INNER TIMING BELT COVER	462-1000803	1	HFJ6370F
2	OUTER TIMING BELT COVER	462-1000900	1	
3	TIMING COVER GASKET	462-1000036	1	
4	RUBBER GASKET	462-1000025-A	1	
5	RUBBER GASKET	462-1000026-A	1	
6	BUSHING	462-1000027	4	
7	BOLT	462-1000804	4	
8	BOLT	462-1000228	6	
9	POT HOOK	462-1000850	1	
10	OUTER COVER RUBBER GASKET	462-1000011-A	1	
11	CAMSHAFT GEAR	462-1000032-01	1	
12	WOODRUFF KEY	462-1000031	1	
13	CAMSHAFT GEAR BOLT	462-1000227	1	
14	TIMING BELT	462-100035	1	88ZA19
15	TENSIONER	462-1000901-03	1	
16	STUD BOLT	462-1000030	1	
17	TENSION SPRING BRACKET	462-1000029	1	
18	TENSION SPRING	462-1000028	1	
19	STUD BOLT	462-1307201	1	
20	BOLT	462-1000224-B	1	
21	LOCK WASHER	GB93-87 8	1	
22	GASKET	462-1000226	1	
23	POT HOOK	462-1000860	2	

FIGURE 18 INTAKE MANIFOLD (I)

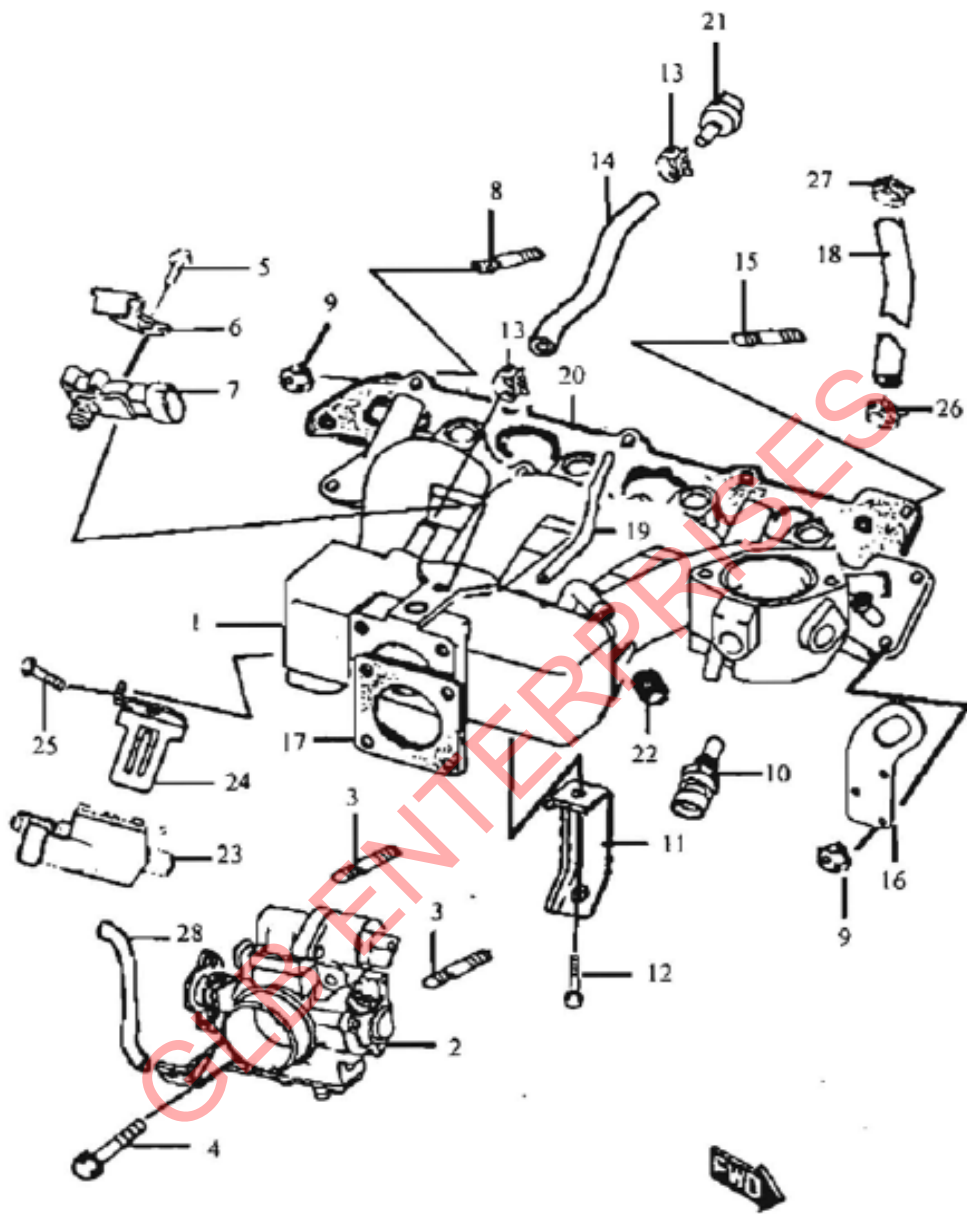


FIGURE 18 INTAKE MANIFOLD (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD ASM	465Q-16MC/D1-1008800	1	HFJ6370K
2	CARBURETOR	465Q-16MC/D1-1107950	1	
3	STUD BOLT	465Q-1A/D-1008201	2	
4	BOLT	462-1000218	2	
5	SCREW	GB65-86 M5X8	1	
	LOCK WASHER	GB859-87 5	1	
6	INTAKE PRESSURE SENSOR STATOR	465Q-16MC/D1-1000111	1	
7	INTAKE PRESSURE & TEMPERATURE SENSOR	465Q-16MC/D1-1100850	1	
8	STUD BOLT	465Q-16M-1003201	8	
9	NUT	GB6187-86 M6	11	
10	COOLANT TEMPERATURE SENSOR	462-1A/D-1300800	1	
11	INTAKE MANIFOLD BRACKET	465Q-16MC/D-1000094	1	
12	BOLT	462-1000810	1	
13	HOSE CLAMP	465Q-16MB/D-1000092	2	
14	PCV TUBE (RUBBER)	465Q-16MC/D-1000085	1	
15	STUD BOLT	465Q-16MB/D-100320	3	
16	ENGINE FRONT SHACKLE	465Q-16MC/D-1000047	1	
17	CARBURETOR MOUNTING GASKET	465Q-1A/D-1000048	1	
18	TUBE	465Q-1A/D-1000079	1	
19	VACUUM TUBE	465Q-1A/D-1000064	1	
20	INTAKE MANIFOLD GASKET	465Q-16MB/D-1000041	1	
21	PCV VALVE	468QL-1014950	1	
22	CAP	462-7-1008014	1	
23	CANISTER CONTROL VALVE	462-1A/D-1207850	1	
24	CANISTER CONTROL STATOR	462-1A/D-100109-01	1	
25	BOLT	462-1000810	1	
26	HOSE CLAMP	462-1000080	1	
27	HOSE CLAMP	462-1000096	1	
28	HOSE	465Q-16MC/D1-1000113	1	

FIGURE 19 INTAKE MANIFOLD (II)

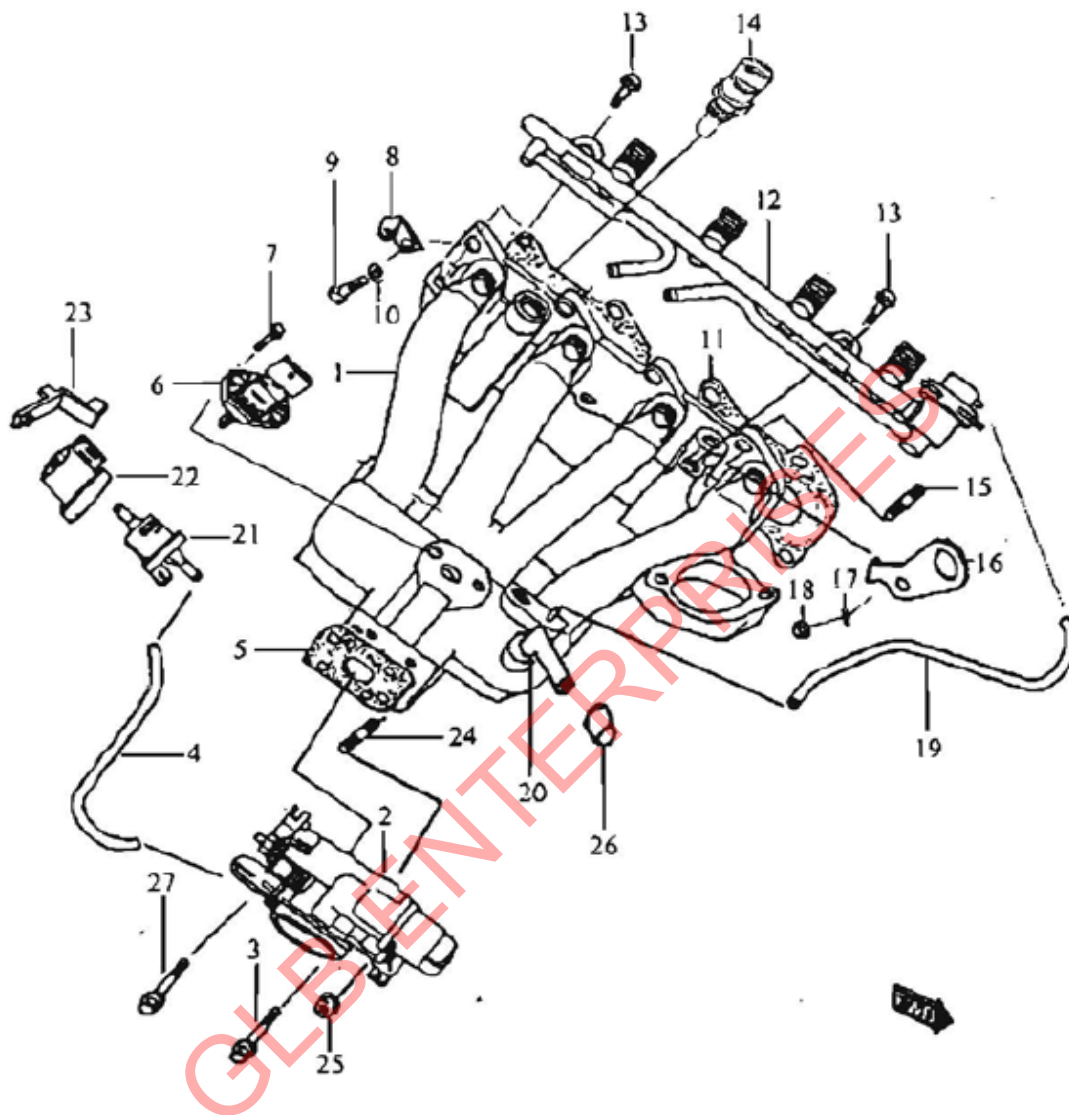


FIGURE 19 INTAKE MANIFOLD (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD ASM	465Q-1A/D-1008800-01/02	1	HFJ6370G, HFJ6370H
2	THROTTLE BODY	465Q-1A/D-1107950	1	
3	BOLT	462-100219	1	
4	HOSE	465Q-1A/D-1000113	1	
5	THROTTLE BODY GASKET	465Q-1A/D-1000048	1	
6	INTAKE TEMPERATURE & PRESSURE SENSOR	465Q-1A/D-1100800	1	
7	BOLT	462-1000233	2	
8	GROUND TERMINAL SPADE	465Q-1000042	1	
9	BOLT	462-1000209	3	
10	LOCK WASHER	GB859-878	3	
11	INTAKE MANIFOLD GASKET	465Q-1A/D-1000041	2	
12	FUEL INJECTOR RAIL ASM	462-1A/D-1104950	1	
13	BOLT	462-1000810	2	
14	COOLANT TEMPERATURE SENSOR	465Q-1A/D-1300800	1	
15	STUD BOLT	465Q-0003201	1	
		465Q-1003202	1	
16	ENGINE FRONT SHACKLE	462-1A/D-1000047	1	
17	LOCK WASHER	GB93-87 8	5	
18	NUT	M8 GB51-76	5	
19	VACUUM HOSE	465Q-1A/D-1000064	1	
20	VACUUM BRAKE	465Q-1A/D-1008003-01	1	
21	CANSITER CONTROL VALVE	465Q-1A/D-1207850	1	
22	CONASITER CONTROL VALVE CAP	465Q-1A/D-1000114	1	
23	CANSITER CONTROL VALVE STATOR	465Q-1A/D-1008870	2	
24	STUD BOLT	465Q-1A/D-1008201	2	
25	NUT	GB6170-86 M6	1	
	LOCK WASHER	GB6859-87 6	2	
26	RUBBER CAP	462-7-1008014	1	
27	BOLT	462-1000218	1	

FIGURE 20 INTAKE MANIFOLD (III)

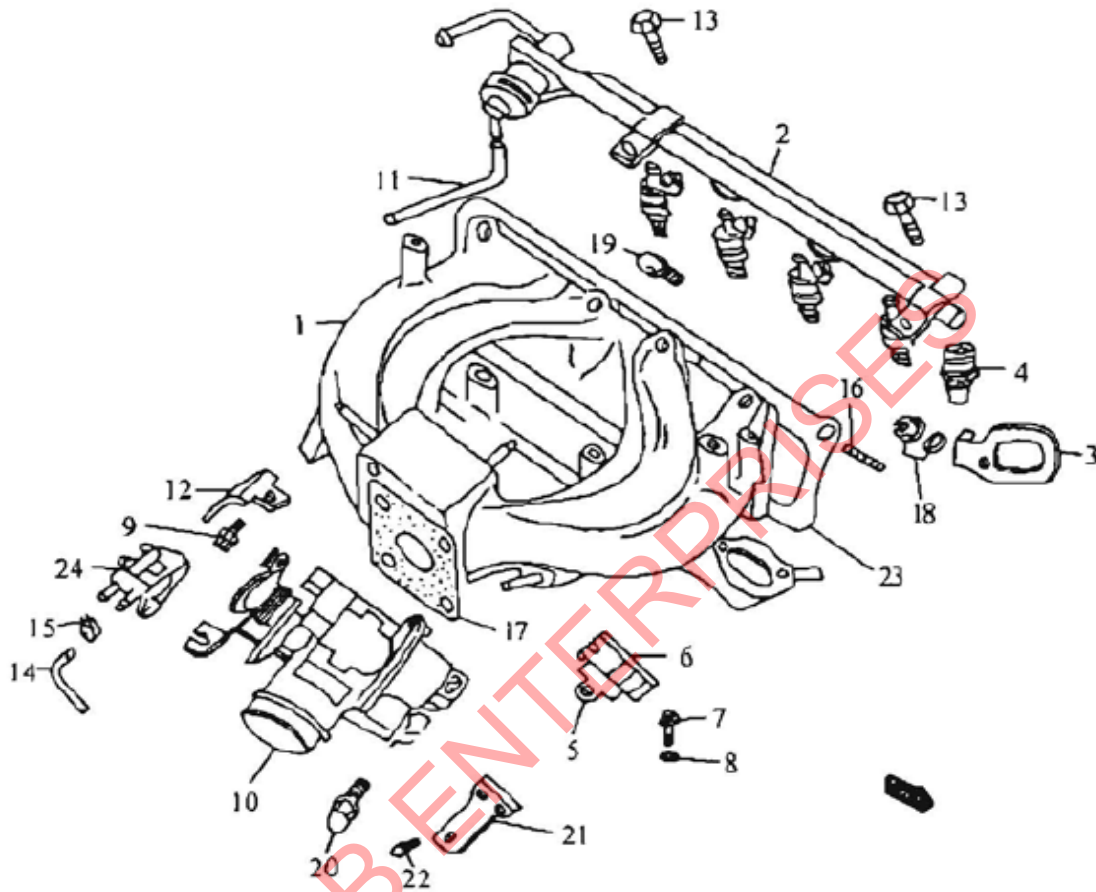


FIGURE 20 INTAKE MANIFOLD (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD ASM	462-1A/D-1008800-01/02	1	HFJ6370F
2	FUEL INJECTOR RAIL ASM	462-1A/D-1104950	1	
3	ENGINE FORNT SHACKLE	462-1A/D-1000047	1	
4	COOLANT TEMPERAURE SENSOR	462-1A/D-13008000	1	
5	INTAKE PRESSURE SENSOR STATOR	462-1A/D-100111	1	
6	INTAKE PRESSURE SENSOR	462-1A/D-1100850	1	
7	BOLT	GB65-85 M5X8	1	
8	LOCK WASHER	GB859-87 5	1	
9	BOLT	462-1000228	1	
10	THROTTLE BODY ASM	462-1A/D-1107950-01	1	
11	VACUUM HOSE	465Q-1A/D-1000064	1	
12	CANISTER CONTORL VALVE STATOR	462-1A/D-1000109-01	1	
13	BOLT	462-1000810	2	
14	HOSE	462-1A/D-1000113	1	
15	HOSE CLAMP	462-1000052	1	
16	STUD BOLT	465Q-0003201	1	
	STUD BOLT	462-1A/D-1000048	1	
17	THROTTLE BODY GASKET	462-1A/D-1000048	1	
18	NUT	M8GB51-76	5	
	LOCK WASHER	GB93-87 8	5	
19	BOLT	462-1000209	3	
	LOCK WASHER	GB859-87 8	3	
20	BOLT	462-1000218	4	
21	INTAKE MANIFOLD BRACKET	462-1A/D-1008312	1	
22	BOLT	462-1000233	2	
23	INTAKE MANILFOLD GASKET	462-1A/D-1000041	2	
24	CONAISTER CONTROL VALVE	462-1A/D-1207850	1	

FIGURE 21 EXHAUST MANIFOLD (I)

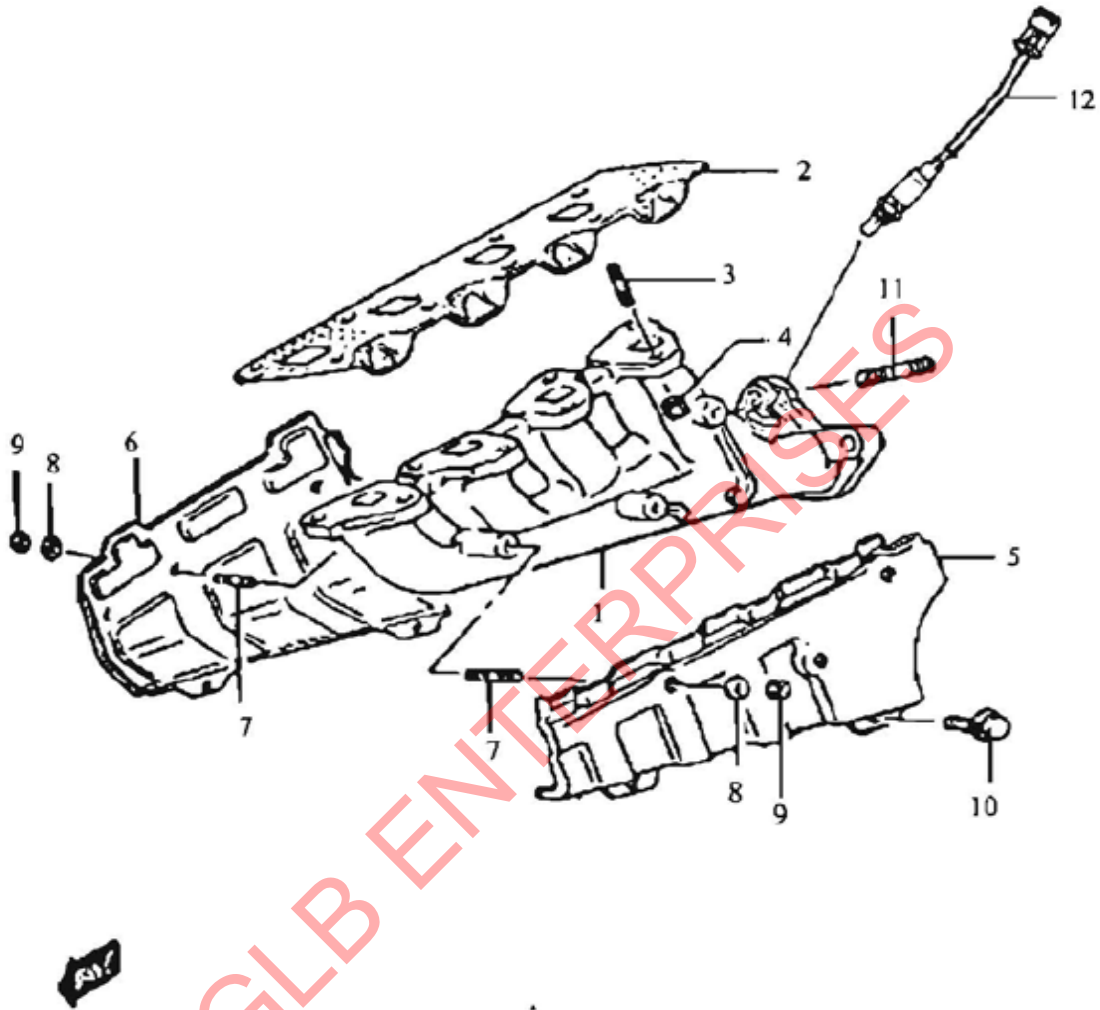


FIGURE 21 EXHAUST MANIFOLD (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST MANIFOLD ASM	465Q-16MC/D-1008810	1	HFJ6370K
2	EXHAUST MANIFOLD GASKET	465Q-16M-1008802	1	
3	STUD BOLT	465Q-16M-1003225	5	
4	NUT	M8GB51-76	8	
5	HEAT SHIELD	465Q-16MC/D-1008820	1	
6	HEAT SHIELD LOWER	465Q-16M-1000821	1	
7	STUD BOLT	462-1008202	6	
8	WASHER	GB97.1-85-6-140HV	6	
9	NUT	GB6170-86-M6	6	
10	BOLT	462-1000228	2	
11	STUD BOLT	462-1008203	3	
12	OXYGEN SENSOR	465Q-16MC/D1-1207800	1	

GLB ENTERPRISES

FIGURE 22 EXHAUST MANIFOLD (II)

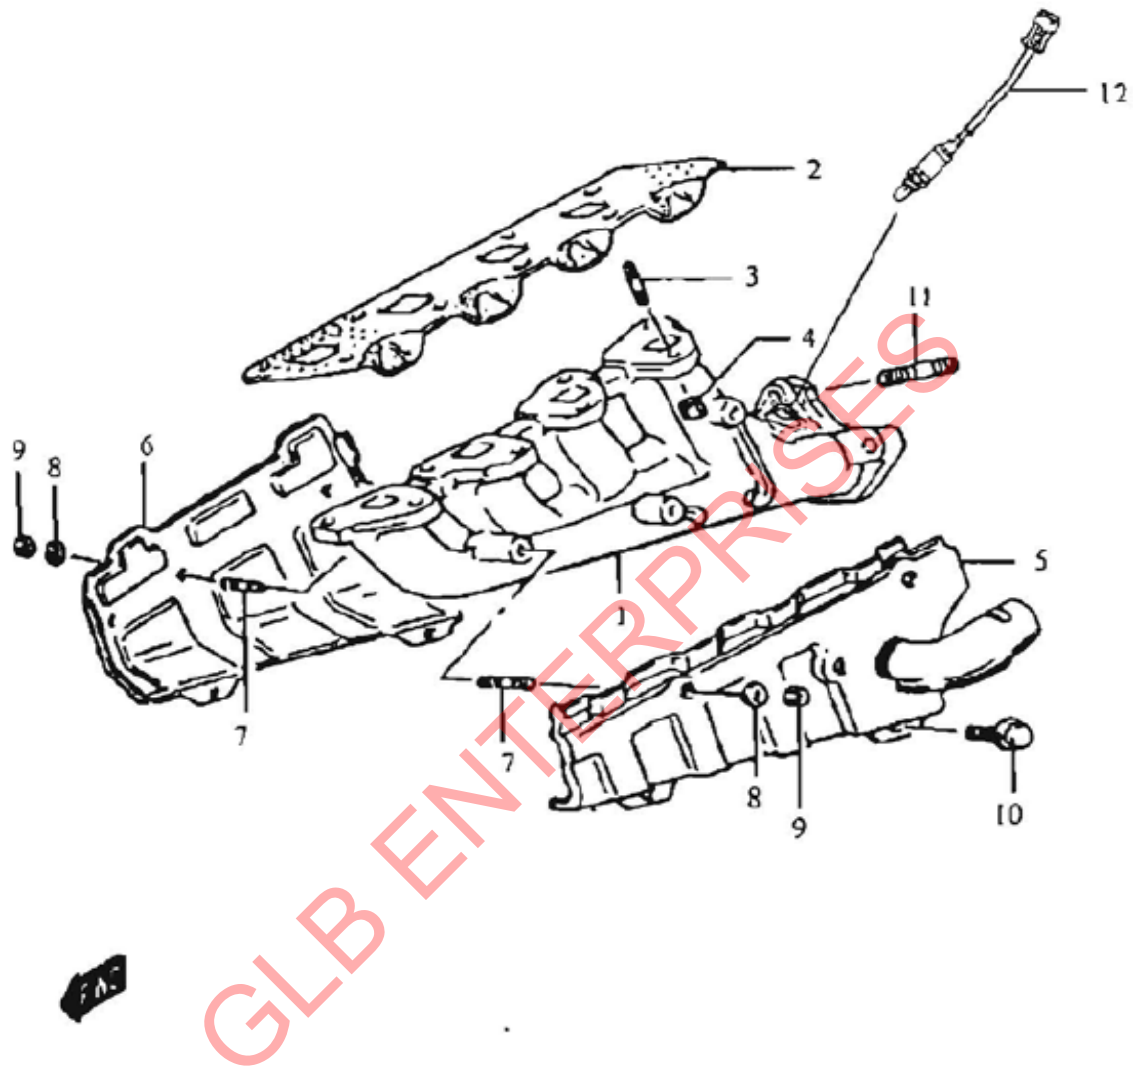


FIGURE 22 EXHAUST MANIFOLD (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST MANIFOLD	465Q-1A/D-1008810	1	HFJ6370G, HFJ6370H
2	EXHAUST MANIFOLD GASKET	462-1A/D-1008802	1	
3	STUD BOLT	465Q-1003201	8	
4	NUT	M8GB51-76	8	
5	HEAT SHIELD	465Q-1008804	1	
6	HEAT SHIELD LOWER	465Q-1000821	1	
7	STUD BOLT	462-1008202	6	
8	WASHER	GB97.1-85-6-140HV	6	
9	NUT	462-1000228	2	
10	BOLT	465Q-1008203	3	
11	STUD BOLT	465Q-1008203	3	
12	OXYGEN SENSOR	465Q-1A/D-1207800	1	

GLB ENTERPRISES

FIGURE 23 EXHAUST MANIFOLD (III)

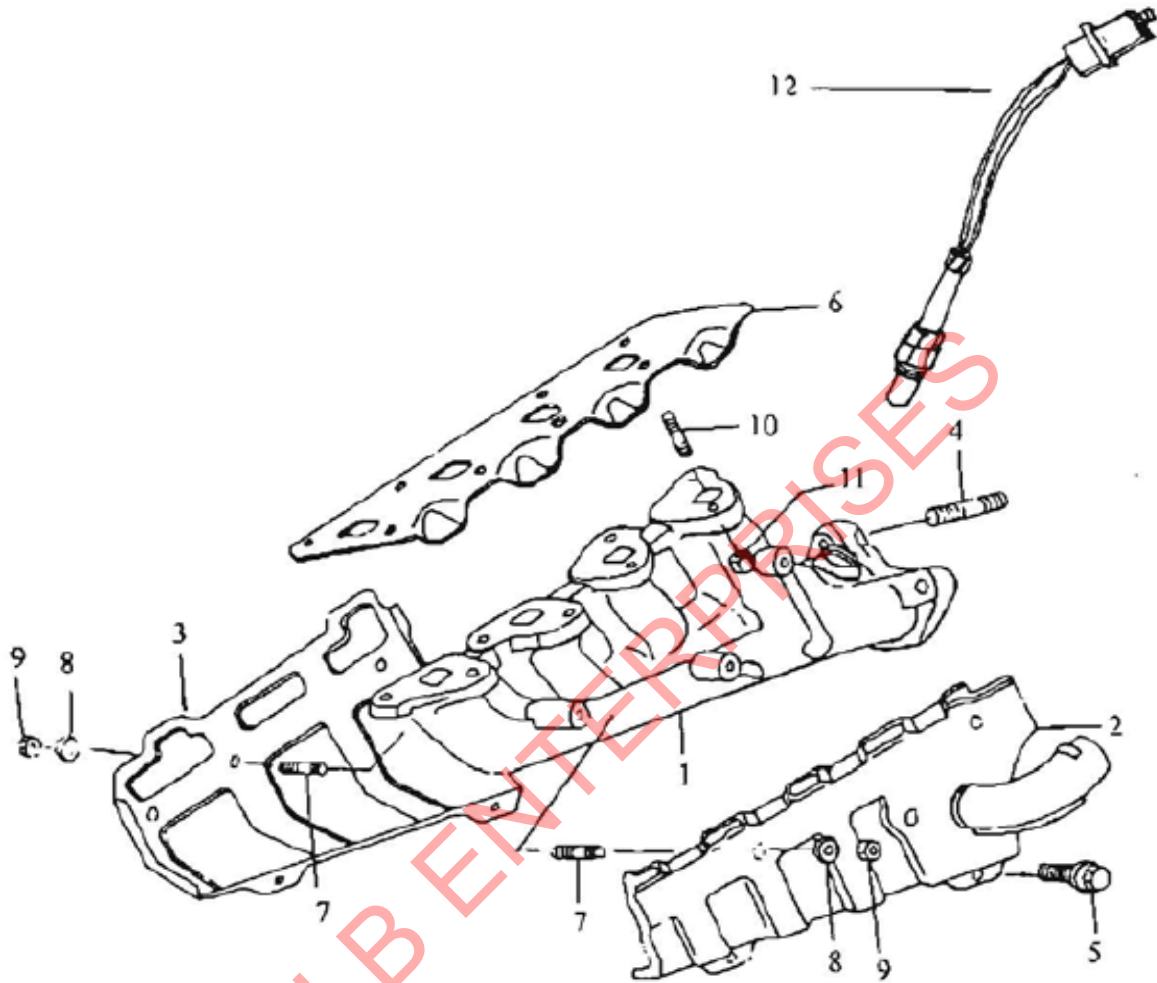


FIGURE 23 EXHAUST MANIFOLD (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST MANIFOLD	465Q-1A/D-1008810/01	1	HFJ6370F
2	HEAT SHIELD	465Q-1008804	1	
3	HEAT SHIELD LOWER	465Q-1000821	1	
4	STUD BOLT	465Q-1008203	3	
5	BOLT	462-1000228	2	
6	EXHAUST MANIFOLD GASKET	462-1A/D-1008802	1	
7	STUD BOLT	462-1008202	6	
8	WASHER	GB97.1-85-6-140HV	6	
9	NUT	GB6170-86-M6	6	
10	STUD BOLT	465Q-1003201	8	
11	NUT	GB6170-86-M8	8	
12	OXYGEN SENSOR	462-1A/D-1207800	1	

GLB ENTERPRISES

FIGURE 24 OIL PUMP (I)

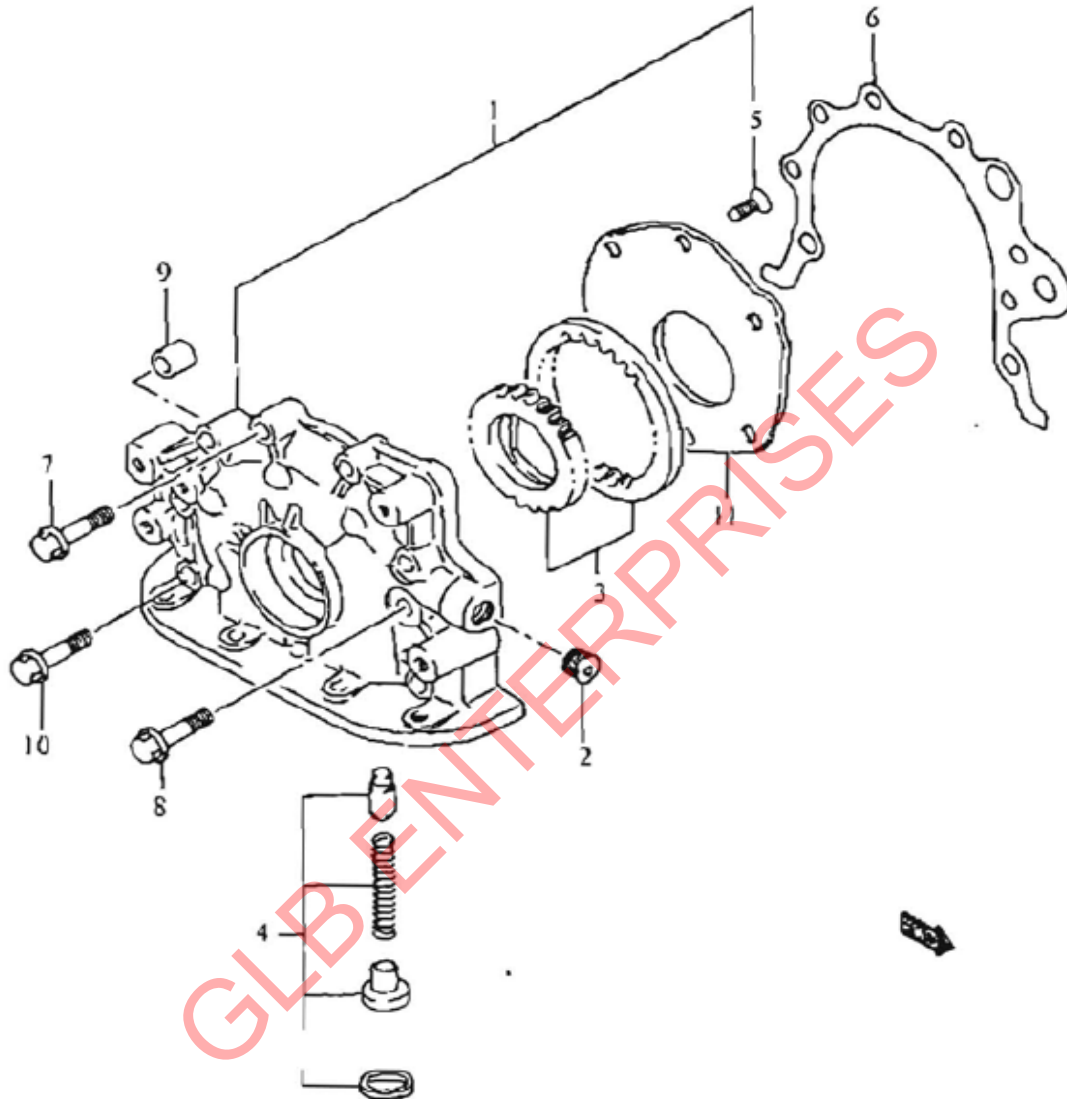


FIGURE 24 OIL PUMP (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PUMP ASM	465Q-16MB-1011950	1	HFJ6370K
2	SCREW PLUG	462-1000250	1	
3	OIL PUMP GEAR OUTER	465Q-16MB-1011006	1	
	OIL PUMP GEAR INNER	465Q-16MB-1011007	1	
	PRESSURE REULATOR			
4	VALVE	465Q-16MB-1011003	1	
	SPRING	465Q-16MB-1011004	1	
	SPRING SEAT	465Q-16MB-1011008	1	
5	SCREW	GB893.1-86-15	6	
	OIL PUMP MOUNTING			
6	GASKET	462-1000018-01	1	
7	BOLT	462-1000217	5	
		462-1000218		
8	BOLT	462-1000017	2	
9	BOLT	462-1000219	2	
10	OIL BACKING PLATE	465Q-16MB-1011002	1	

GLB ENTERPRISES

FIGURE 25 OIL PUMP (II)

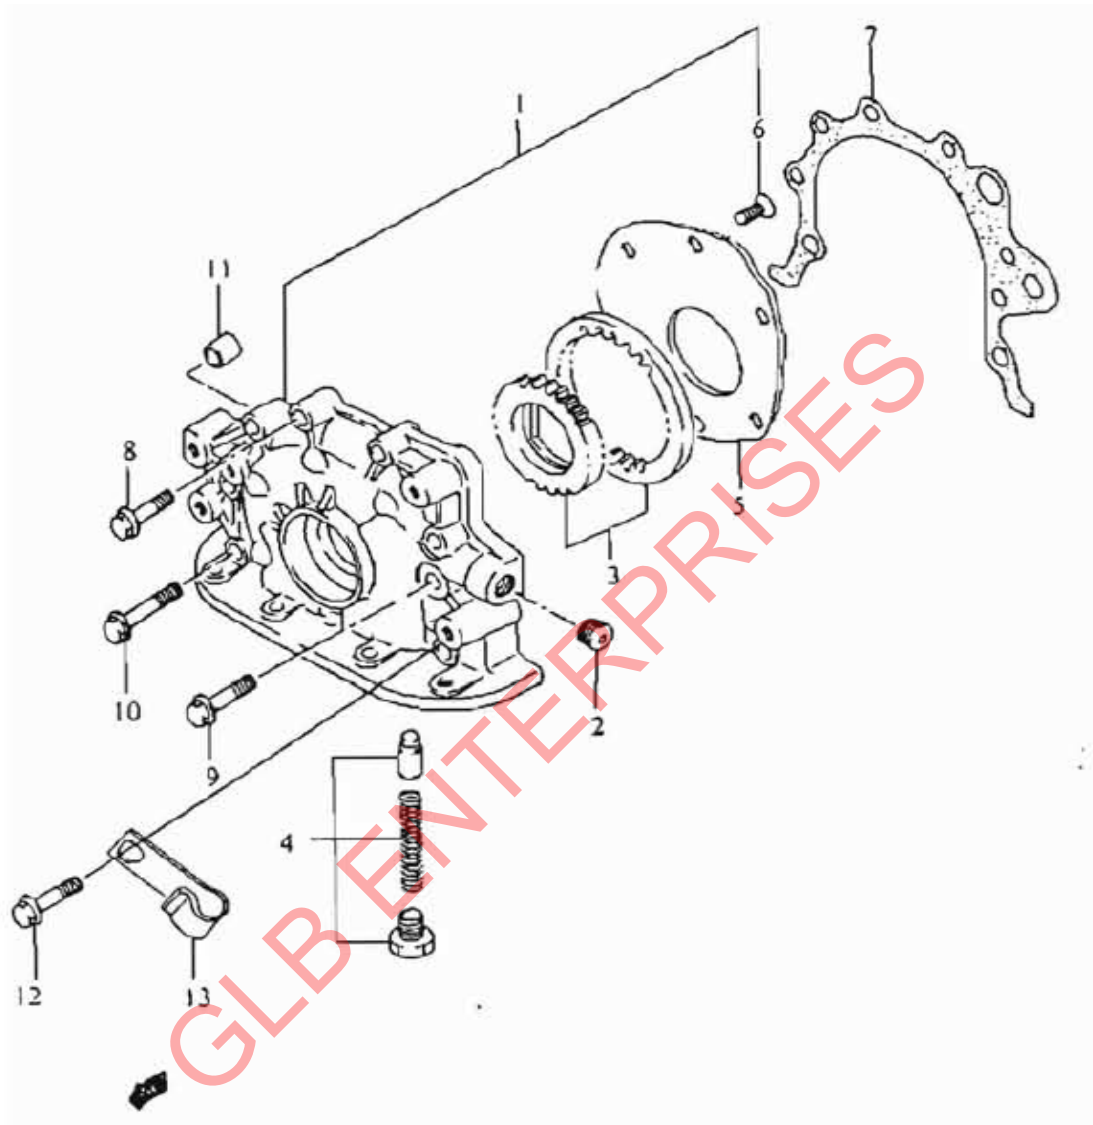


FIGURE 25 OIL PUMP (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PUMP ASM	462-1011950	1	HFJ6370G, HFJ6370H
2	PLUG	462-1000250	1	
3	OIL PUMP GEAR OUTER	462-1011006-01	1	
	OIL PUMP GEAR INNER	462-1011007	1	
	PRESSURE REGULATOR			
4	VALVE	462-1011003	1	
	SPRING	462-1011004	1	
	SPRING SEAT	462-1011005	1	
	OIL PUMP BACKING			
5	PLATE	462-1011002	1	
6	SCREW	462-1003206	6	
	OIL PUMP MOUNTING			
7	GASKET	462-1000018	1	
8	BOLT	462-1000217	5	
9	BOLT	462-1000218	2	
10	BOLT	462-1000219	2	
11	DOWEL PIN	462-1000017	2	
12	BOLT	462-1000812	1	
13	POT HOOK	462-1000020	1	

GLB ENTERPRISES

FIGURE 26 OIL PUMP (III)

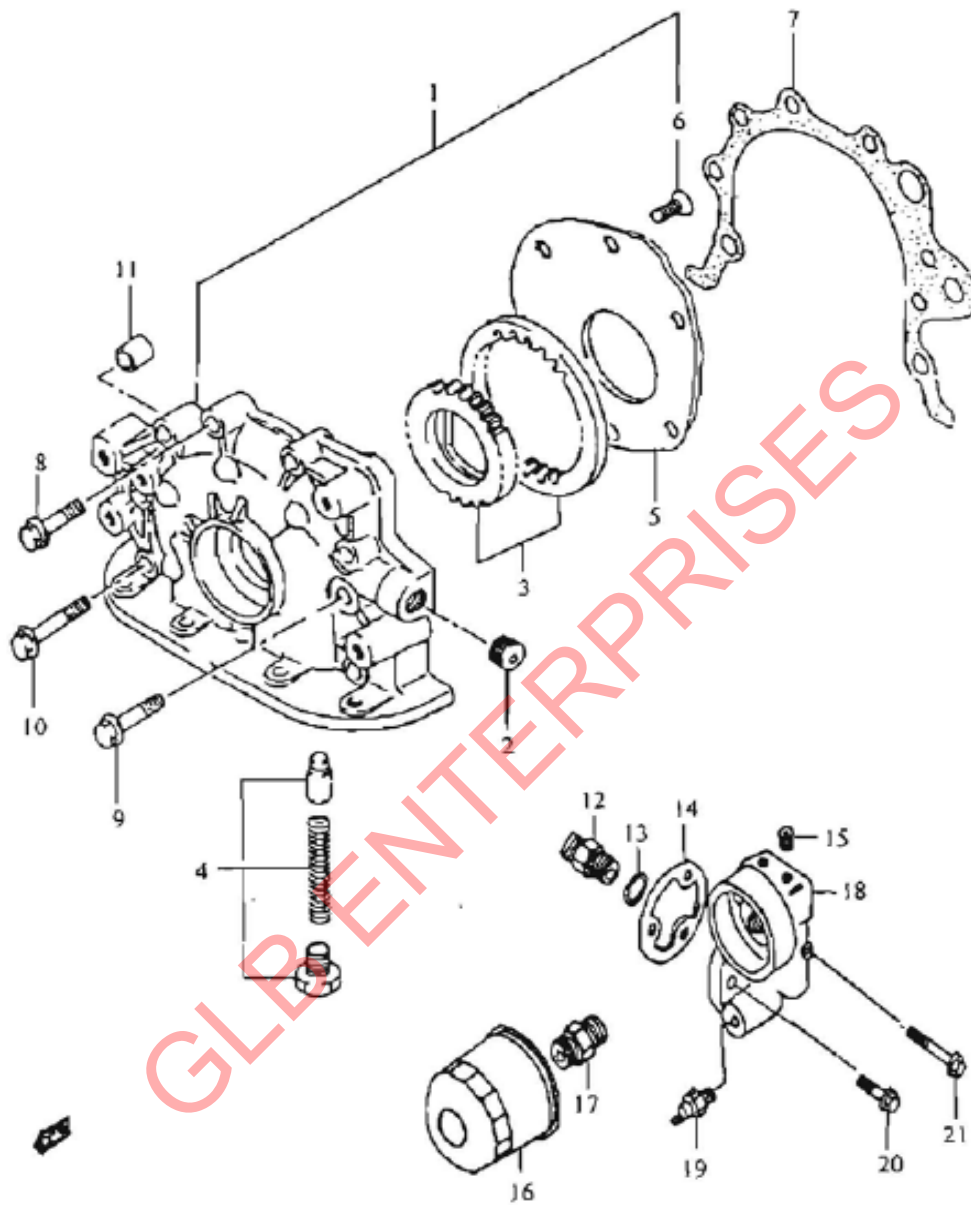


FIGURE 26 OIL PUMP (III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PUMP ASM	462-1011950	1	HFJ6370F
2	SCREW PLUG	462-1000250	1	
3	OIL PUMP OUTER GEAR	462-1011006-01	1	
	OIL PUMP INNER GEAR	462-1011007	1	
4	PRESSURE REGULATOR	462-101103	1	
	SPRING	462-101104	1	
	SPRING SEAT	462-1011005	1	
	OIL PUMP BACKING			
5	PLATE	462-1011002	1	
6	SCREW	462-1003206	6	
	OIL PUMP MOUNTING			
7	GASKET	462-1000018-01	1	
8	BOLT	462-1000217	1	
9	BOLT	462-1000218	5	
10	BOLT	462-1000219	2	
11	DOWEL PIN	462-1000017	1	
	OIL FILTER SEAT			
12	CONNECTOR	462-1000022	1	
13	O'RING	462-1000019	1	
	OIL FILTER SEAT			
14	GASKET	462-1000023-01	1	
15	SCREW PLUG	462-1000250	3	
16	OIL FILTER	1012010D2	1	462-1017950
	OIL FILTER			
17	CONNECTOR	462-1017015-B	1	
19	OIL FILTER SEAT	462-1017016-B	1	
20	BOLT	462-1000222	1	
21	BOLT	462-1000221	2	

FIGURE 27 WATER PUMP

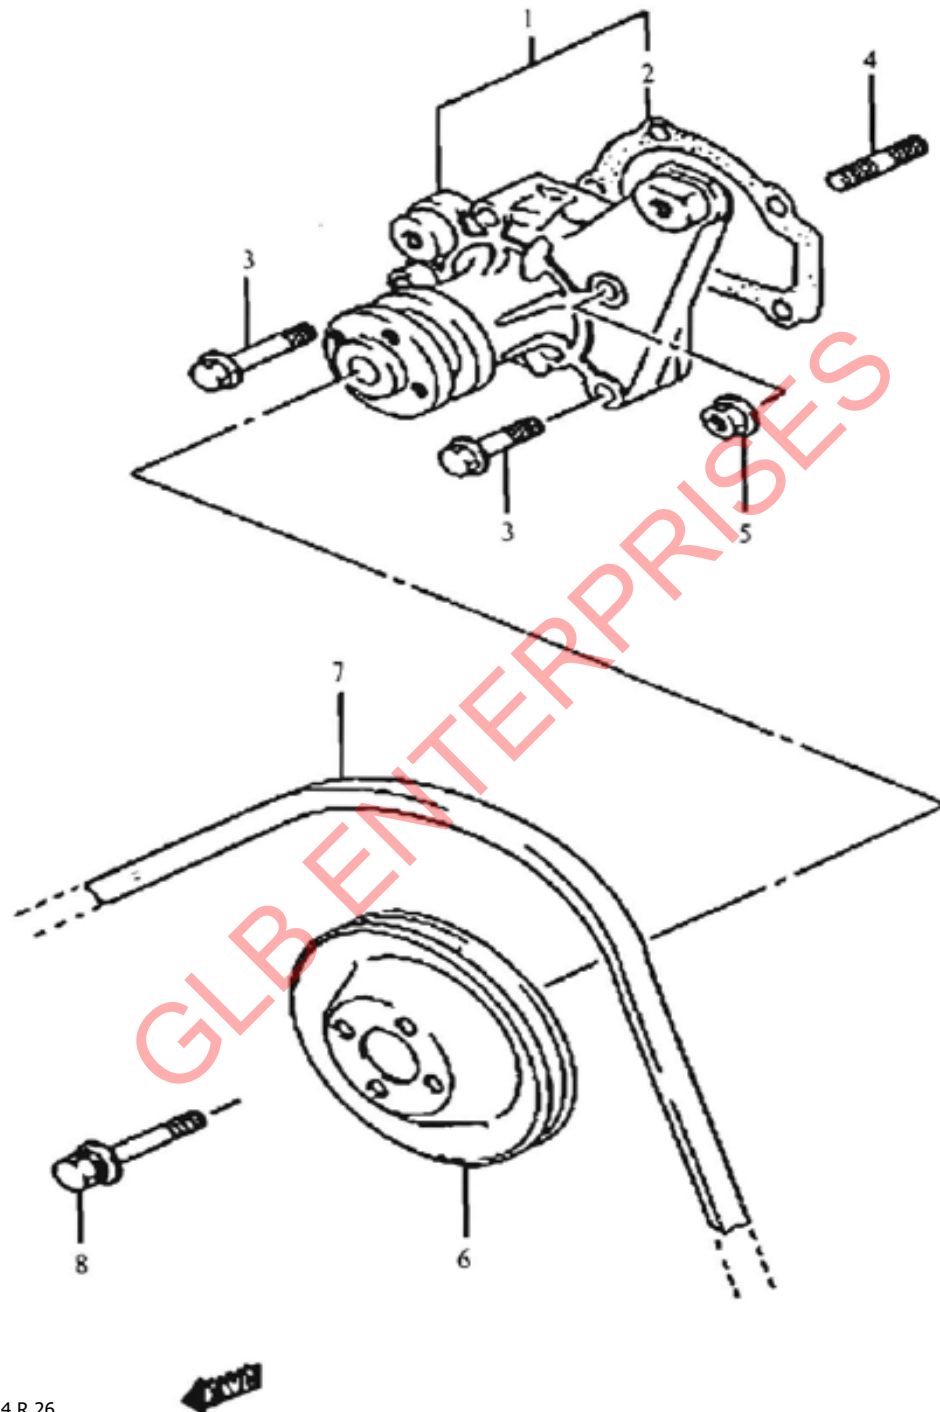


FIGURE 27 WATER PUMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WATER PUMP ASM	1307010A1(Z)	1	462-1307950
2	WATER PUMP GASKET	1000052D	1	462-1000024-01
3	BOLT	462-1000217	3	
4	STUD BOLT	462-1002205	2	
5	NUT	GB6187-86-M6	2	
	LOCK WASHER	GB859-87 6	2	
6	FAN PULLEY	462-1000037	1	
7	FAN BELT	462-1000229-01	1	V-BELT
		465Q-2/D-1000229	1	SERPENTINE BELT
8	PULLEY BOLT	462-1000228	4	

GLB ENTERPRISES

FIGURE 28 RADIATOR HOSE

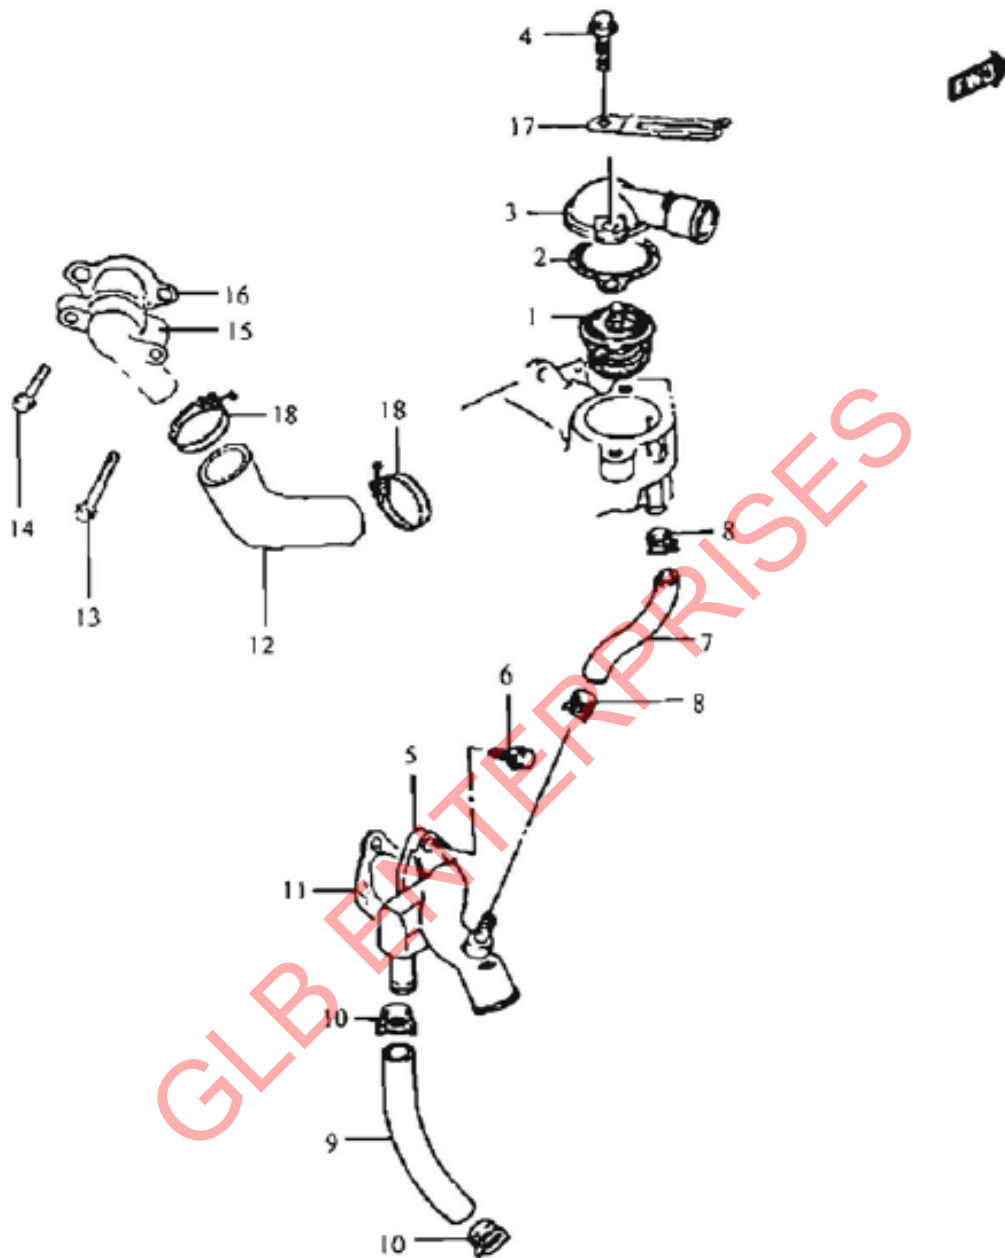


FIGURE 28 RADIATOR HOSE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	THERMOSTAT	462-1306950	1	
2	THERMOSTAT GASKET	1008031D	1	462-1000043-A
3	THERMOSTAT HOUSING	465Q-1000044	1	
4	BOLT	462-1000815	2	
5	INTAKE WATER CANAL SEAT ASM	465Q-1303800	1	
6	BOLT	462-1000814	2	
7	BYPASS HOSE	465Q-16MC/D-1000051	1	
8	CLAMP	462-1000052-01	2	
9	HEATER HOSE	465Q-1000059	1	
10	CLAMP	465Q-1000066-01	2	
11	INTAKE WATER CANAL SEAT GASKET	462-1000050-A	1	
12	INTAKE WATER HOSE	465Q-16MC/D-1300303-B	1	
13	BOLT	462-1700204	1	
14	BOLT	GB5787-86 M8X28	1	
15	WATER PIPE CONNECTOR COVER	465Q-16MC/D-1303005	1	
16	GASKET	465Q-16M-1000121	1	
17	POTHOOK	462-1000830	1	
18	CLAMP	Q67235	2	

FIGURE 29 FUEL RAIL

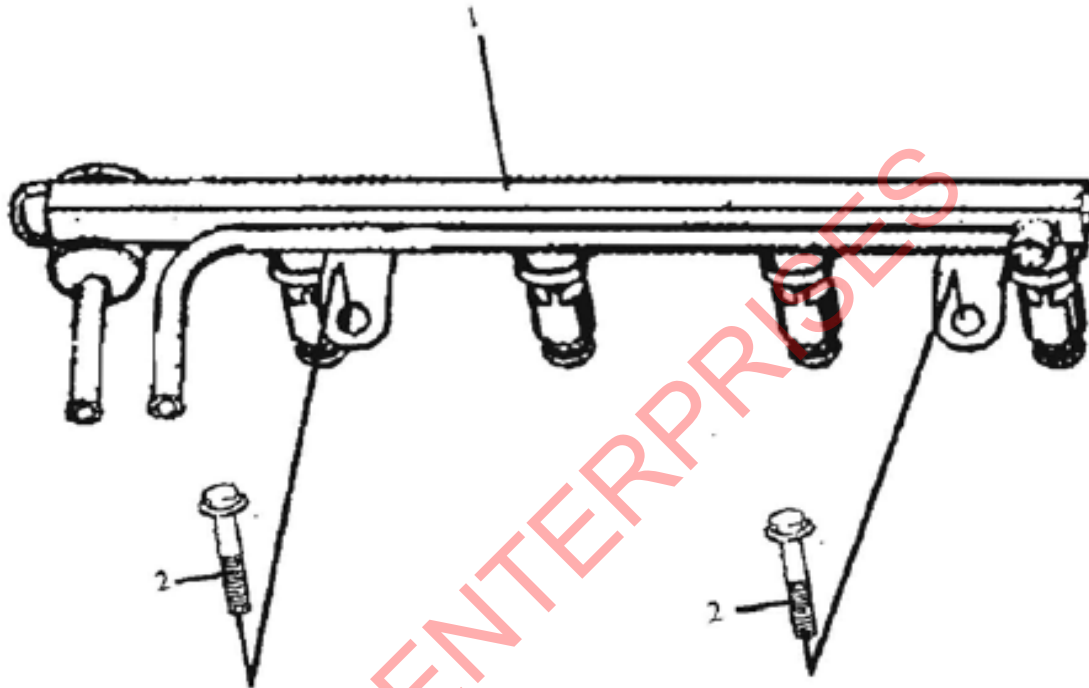


FIGURE 29 FUEL RAIL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL RAIL W/INJECTORS	465Q-16MC/D-1104950	1	HFJ6370K
2	BOLT	462-1000810	2	

GLB ENTERPRISES

FIGURE 30 CLUTCH & PRESSURE PLATE 5MT

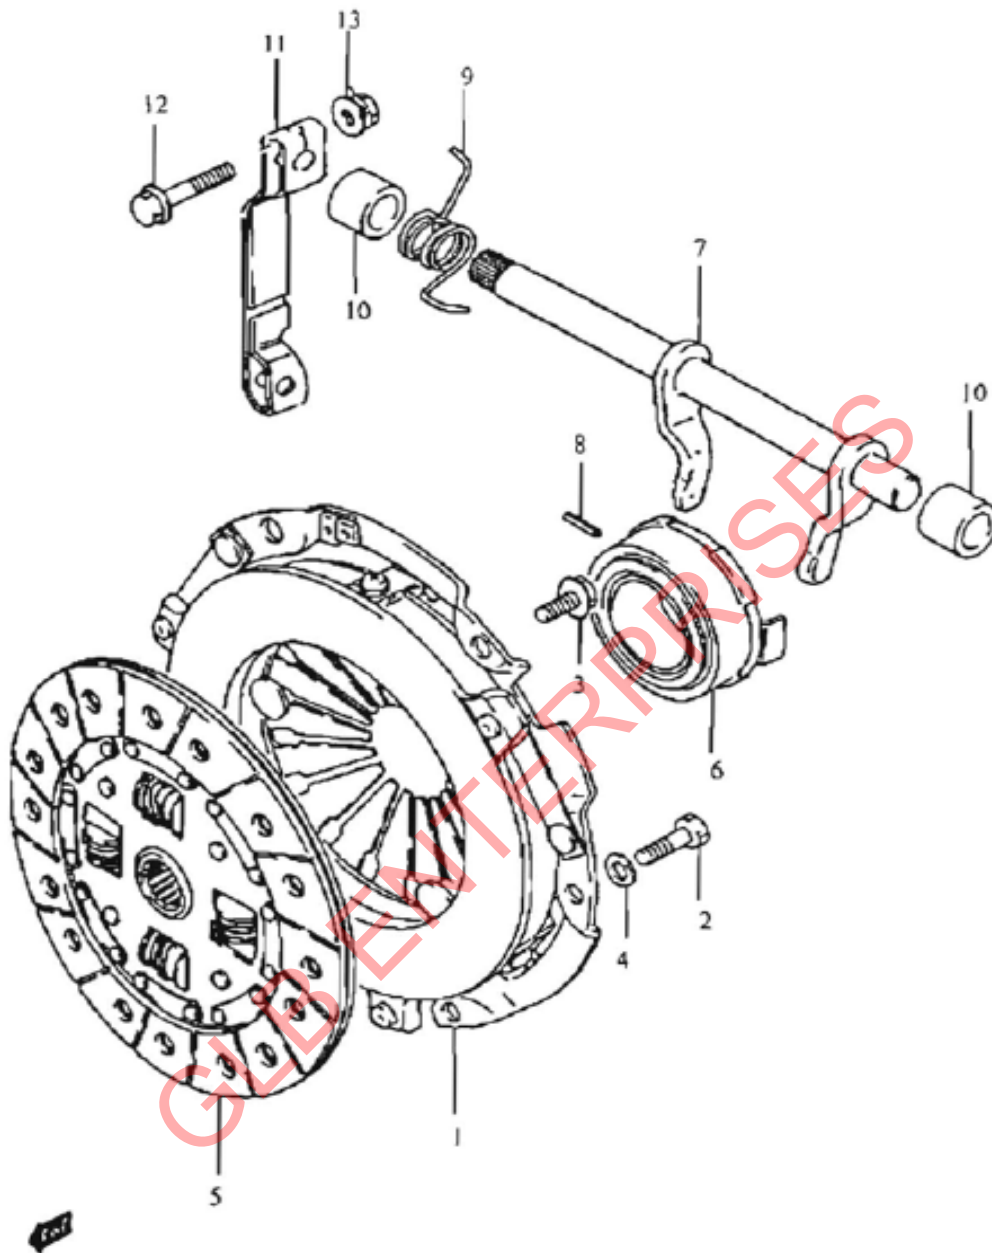


FIGURE 30 CLUTCH & PRESSURE PLATE 5MT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PRESSURE PLATE	1600010D	1	LH11-1601900, HFJ6370K, HFJ6370H
2	LOCATING BOLT	462-1000238	2	
3	BOLT	462-1000810	4	
4	LOCK WASHER	GB93-87 8	2	
5	CLUTCH	1602010D	1	LH10-1601800-01
6	THROW-OUT BEARING	LH10-1601910-01	1	
7	CLUTCH RELEASE SHAFT	LH10-1601840	1	
8	ROLL PIN	GB879-86 3.2	1	
9	RELEASE SHAFT SPRING	LH10-1601022-B	1	
10	CLUTCH RELEASE BEARING BUSHING	LH10-1601021	2	
11	CLUTCH ARM	LH10-1601035-B	1	
12	BOLT	462-1700203	1	
13	NUT	GB6170-86 M8	1	
14	WASHER	GB97.1-85-8-140HV	1	

GLB ENTERPRISES

FIGURE 31 CLUTCH & PRESSURE PLATE 4MT

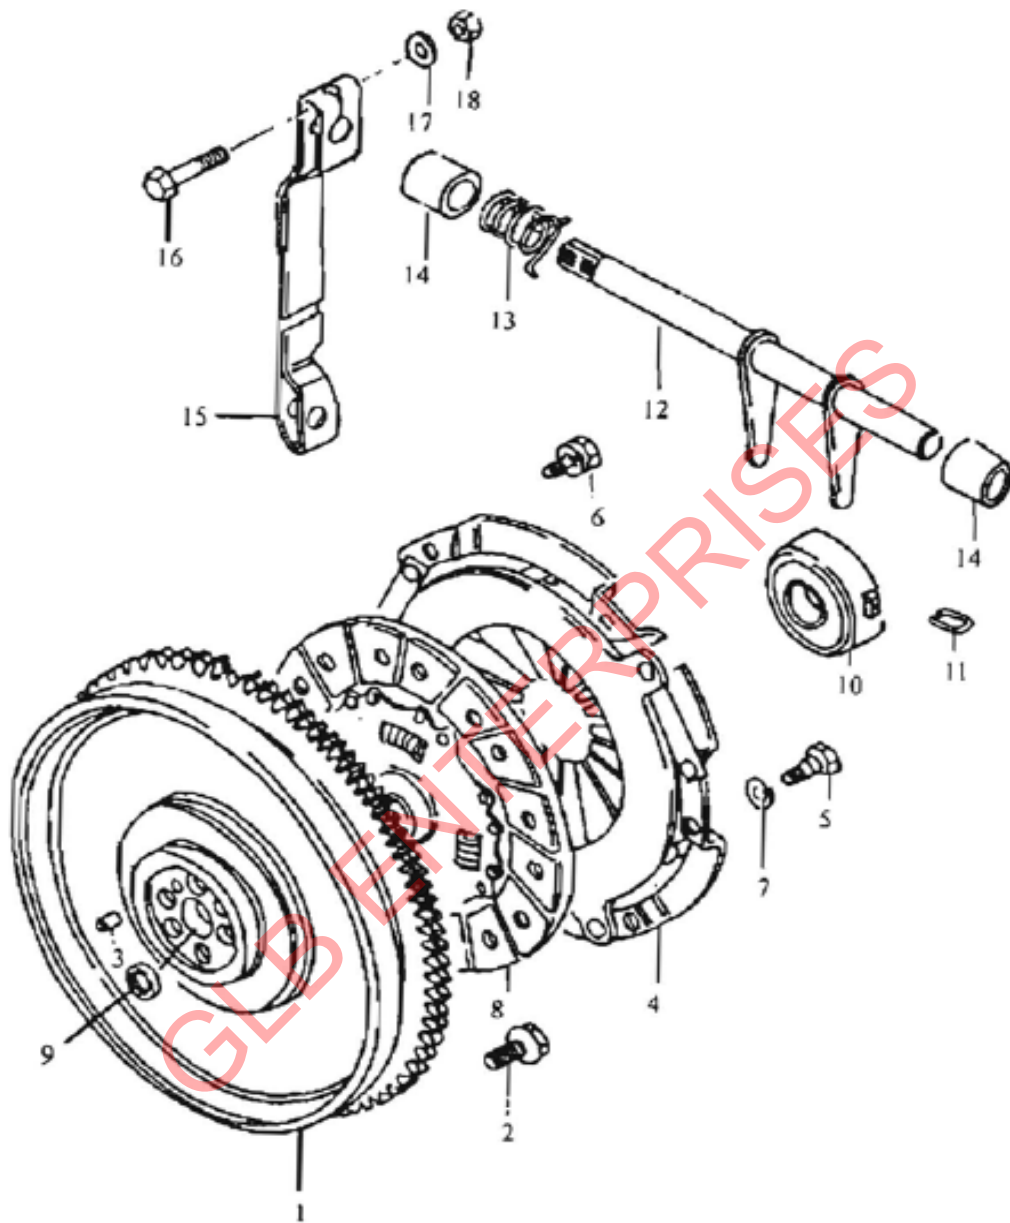


FIGURE 31 CLUTCH & PRESSURE PLATE 4MT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FLYWHEEL ASM	462-1A/D-1005803	1	HFJ6370F, HFJ6370G
2	BOLT	462-1005201-A	6	
3	DOWEL PIN	6X10111B GB4661	1	
4	PRESSURE PLATE	1600010D	1	LH10-1601900-01
5	LOCATING BOLT	462-1000238	2	
6	BOLT	462-1000810	4	
7	LOCK WASHER	GB93-87 8	2	
8	CLUTCH	1602010D	1	LH10-1601800-01
9	PILOT BEARING	GB/T276-94	1	6000DDUR
10	THROW-OUT BEARING	462-1601860	1	48RCT3301
11	SPRING CLIP	462-170013	2	
12	CLUTCH RELEASE SHAFT	462-1601806	1	
13	CLUTCH RELEASE SHAFT SPRING	462-1601022	1	
14	CLUTCH RELEASE BEARING BUSHING	462-1601021	2	
15	CLUTCH ARM	462-1601021	1	
16	BOLT	462-1700205	1	
17	WASHER	462-1000235	1	
18	NUT	GB170-86-M8	1	

GLB ENTERPRISES

FIGURE 32 TRANSMISSION (I)

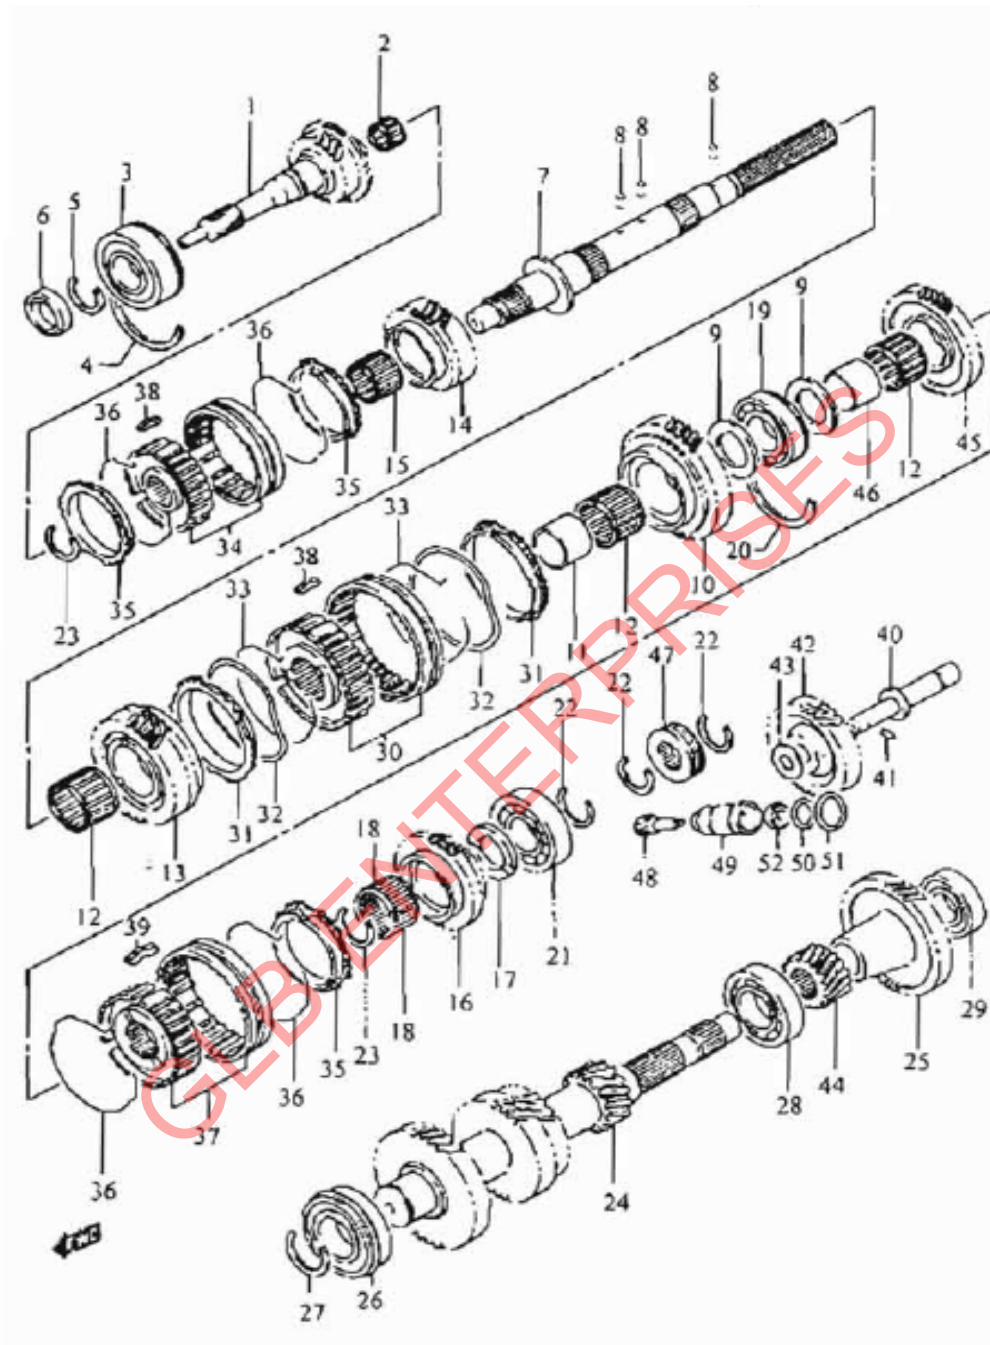


FIGURE 32 TRANSMISSION (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NO.1 SHAFT ASM	BS10-2-1701810	1	HFJ6370K, HFJ6370H
2	ROLLER BEARING	K202617	1	
3	NO.1 SHAFT BEARING	63/28-2RSN/P63	1	
4	"C" CLIP	BS10-2-1701067	1	
5	HOG RING	BS10-2-1701207	1	
6	FRONT OIL SEAL	BS10-1701930	1	
7	NO.2 SHAFT	BS10-2-1701027	1	
8	COLUMN PIN	GB4661 3X5	3	
9	THRUST WASHER	BS10-2-1701034	2	
10	GEAR MAIN SHAFT 1ST	BS10-2-1701044	1	
11	BUSHING	BS10-2-1701065	1	
12	ROLLER BEARING	K354027	3	
13	GEAR MAIN SHAFT 2ND	BS10-2-1701046	1	
14	GEAR MAIN SHAFT 3RD	BS10-2-1701035	1	
15	GEAR MAIN SHAFT 2ND	K303527	1	
16	GEAR MAIN SHAFT 3RD	BS10-2-1701062	1	
17	RETAINING RING	BS10-2-1701063	1	
18	ROLLER BEARING	K27.533.522.7	1	
19	BEARING	6206B/P63	1	
20	"C" CLIP	BS10-1701015	1	
21	BEARING	6305/P63	1	
22	HOG RING	BS10-1701204	3	
23	HOG RING	BS10-1701204	2	
24	MIDDLE GEAR SHAFT GEAR 5 INITIATIVE	BS10-2-1701052	1	
25	GEAR	BS10-2-1701064	1	
26	STOPPING RING	BS10-2-1701066	1	
	MIDDLE SHAFT FRONT BEARING	62/28N/P63	1	
27	HOG RING	BS10-2-1701207	1	
	MIDDLE SHAFT MIDDLE BEARING	62/28/P63	1	
29	BEARING	6304/P63	1	

This diagram shows an exploded view of a mechanical assembly. The components are numbered as follows: 1, 2, 3, 5, 6, 15, 16, 17, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32. The assembly includes a central shaft (5) with multiple gears (16, 26, 30) and other rotating components (20, 22, 24, 27, 29). A pin (32) is shown at the bottom. A red watermark 'GREENPDFS' is overlaid diagonally across the image.

FIGURE 33 TRANSMISSION (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NO.1 SHAFT ASM	BS09-1701810	1	HFJ6370F, HFJ6370G
2	ROLLER BEARING	K17.52215.7	1	
3	HOG RING	462-1701061	1	
4	FRONT OIL SEAL	BS09-1701940	1	
5	NO. 2 SHAFT	BS09-1701027-B	1	
6	GEAR MAIN SHAFT 1ST	BS09-1701044	1	
7	GEAR MAIN SHAFT 1ST BUSHING	BS09-1701029	1	
8	THRUST WASHER	462-1701034	1	
9	GEAR MAIN SHAFT 2ND	BS09-1701046	1	
10	GEAR MAIN SHAFT 3RD	BS09-1701035	1	
11	ROLLER BEARING	K253028	1	
12	BEARING	6304N/P63	2	
13	REVERSE DRIVEN GEAR	BS09-1701031	1	
14	RETAINING RING	462-1701063	4	
15	"C" CLIP	462-1700002	2	
16	MIDDLE GEAR SHAFT	BS09-1701052	1	
17	BEARING	6204/P63	2	
18	RETAINING RING	47GB893 1-86	1	47GB893-76
19	RUBBER PLUG	462-1701809-A	1	
20	OUTER TOOTHED RING	462-1701042	1	
21	LOW-SPEED CONNECTING TOOTHED RING	462-1701043-01	1	
22	LOW-SPEED BAULK RING	462-1701045-A2	2	
23	KEY	462-1701038/01	6	
24	SPRING HOG RING	462-1701041	2	
25	OUTER TOOTHED RING	462-1701039	1	
26	HIGH SPEED CONNECTING TOOTHED RING	BS09-1701057	1	
27	HIGH SPEED BAULK RING	462-1701024-A	2	

FIGURE 34 TRANSMISSION HOUSING (5MT)

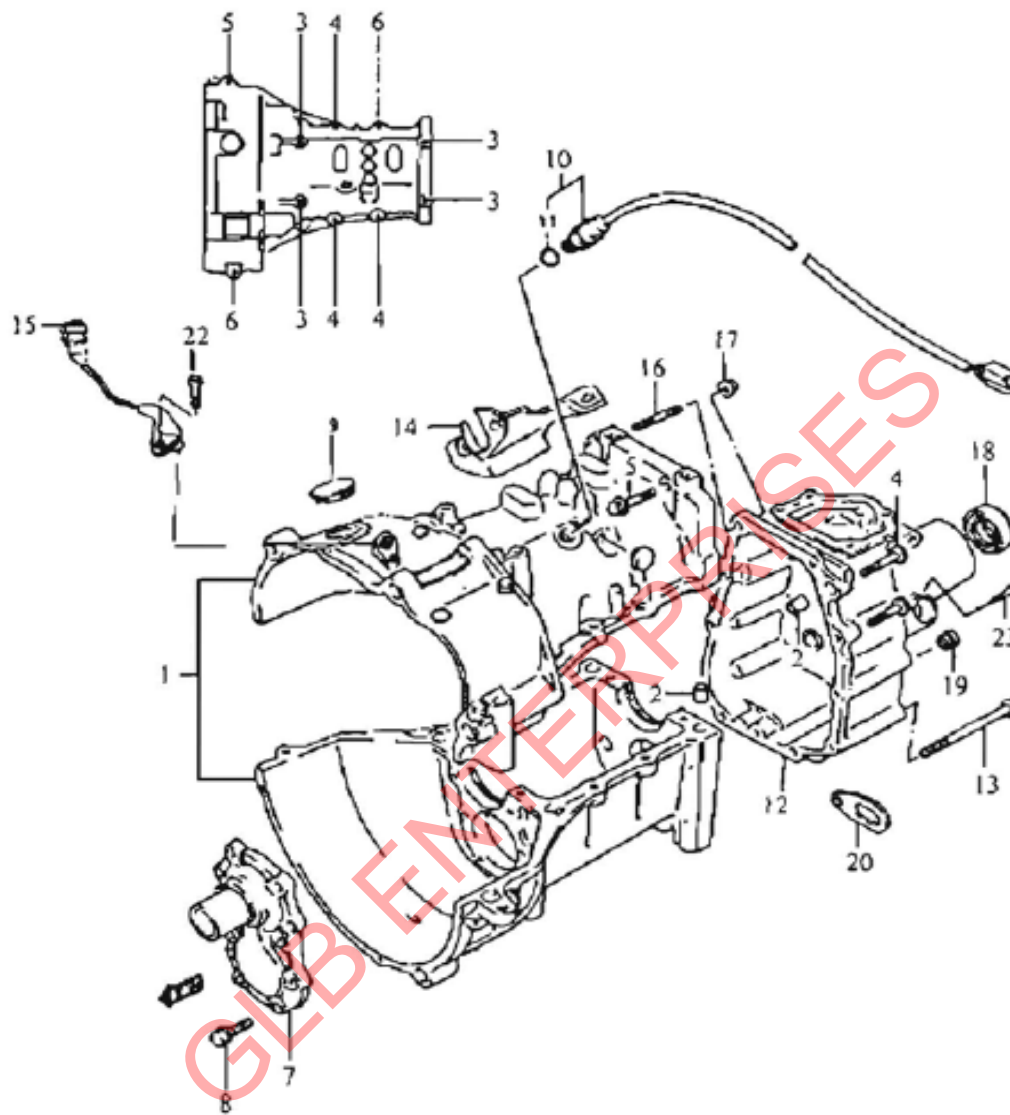


FIGURE 34 TRANSMISSION HOUSING (5MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TRANSMISSION CASE UPPER	BS10-2/D-1701012	1	HFJ6370K, HFJ6370H
	TRANSMISSION CASE LOWER	BS10-2-1701011	1	
2	DOWEL PIN	BS10-1700012	4	
3	BOLT	BS10-1700201	4	
4	BOLT	BS10-2-1700244	8	
5	BOLT	462-1700203	2	
6	BOLT	BS10-1700214	2	
	FRONT END SHIELD ASM	BS10-2-1701940	1	
8	BOLT	BS10-1700208	8	
	INSPECTION HOLE RUBBER CAP	462-1701004	1	
10	BACK UP LAMP SWITCH	465Q-3729950	1	
11	BACK UP LAMP SWITCH O'RING	462-1700010	1	
12	TAIL HOUSING ASM	BS10-2-1701850	1	
13	BOLT	BS10-1700202	3	
14	STAY BRACKET	BS10-2-1700011	1	
	CRANKSHAFT POSITION SENSOR	462-1A/D-3700800	1	
16	STUD BOLT	BS10-17002003	1	
17	NUT	GB6170-86 M8	1	
	SPRING	GB97.1.85-8-140HV	1	
18	TAIL HOUSING SEAL	BS10-2200900-A	1	
19	SCREW PLUG	462-1701206-A	2	
20	POT HOOK	462-1000042	1	
21	RUBBER PLUG	BS10-1700013	1	
22	BOLT	462-1000801	1	
23	BOLT	BS10-2-1701208-A	1	



FIGURE 35 TRANSMISSION HOUSING (4MT)

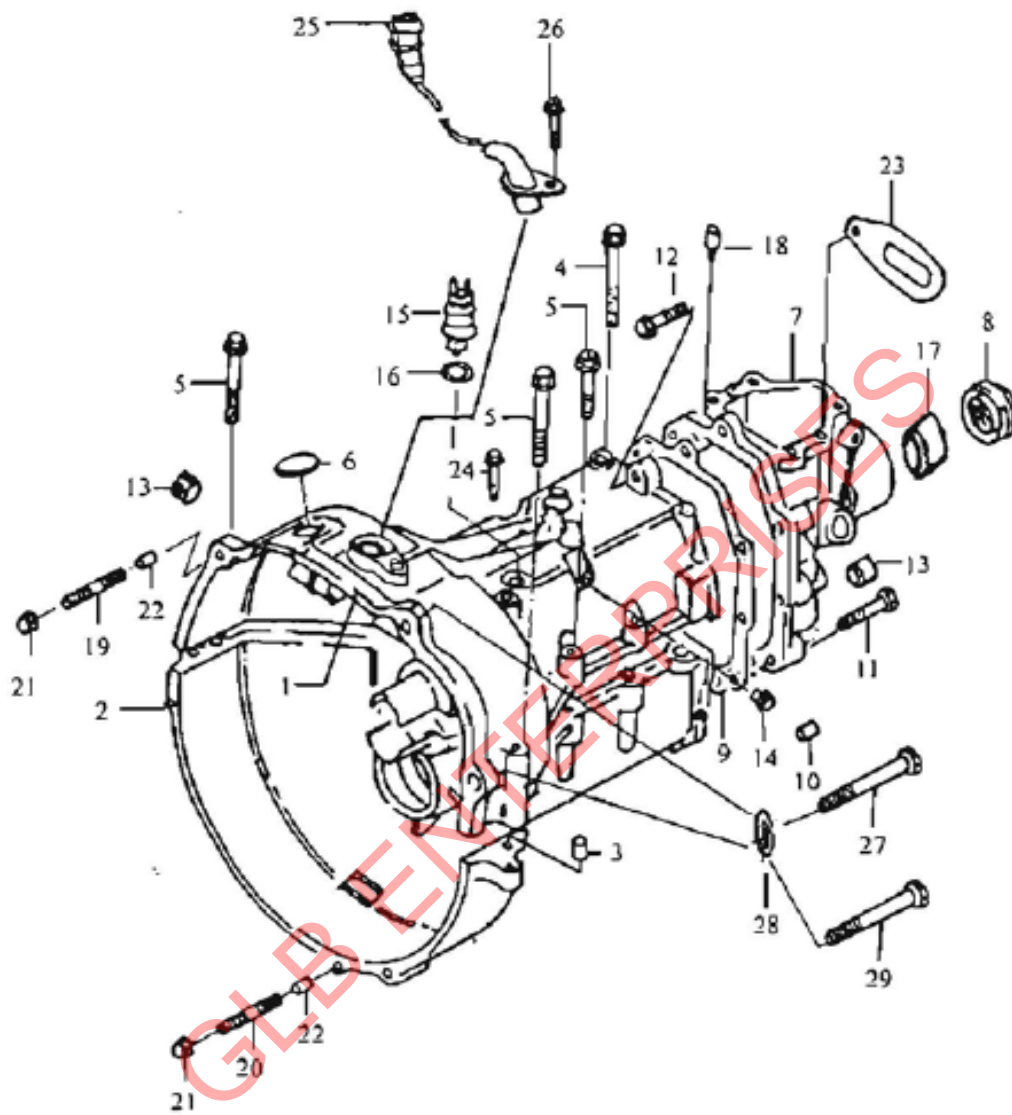


FIGURE 35 TRANSMISSION HOUSING (4MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TRANSMISSION CASE UPPER	BS09/D-1701005	1	HFJ6370F, HFJ6370G
2	TRANSMISSION CASE LOWER	BS09-1701001	1	
3	DOWEL PIN	462-100018	2	
4	BOLT	462-1700202	4	
5	BOLT	462-1700203	4	
6	INSPECTION HOLE RUBBER CAP	462-1701004	1	
7	TAIL HOUSING	462-1701006/01	1	
8	TAIL HOUSING SEAL	462-1701903	1	
9	GASKET	462-1700011	1	
10	DOWEL PIN	462-1700008	2	
11	BOLT	462-1700205	7	
12	BOLT	462-1000244	1	
13	SCREW PLUG	462-1701206-A	2	
14	RUBBER PLUG	462-1701003-A	1	
15	BACK UP LAMP SWITCH	462-3729950	1	3729010DW
16	BACK UP LAMP SWITCH O'RING	462-1700010	1	
17	COPPER BUSHING	462-1701011/01	1	
18	BREATHER VALVE ASM	462-1701804	1	
19	STUD BOLT	462-1701202	1	
20	STUD BOLT	462-1701201	1	
21	NUT	462-1000212	2	
22	DOWEL PIN	462-1000015	2	
23	POT HOOK	462-1000042	1	
24	BOLT	462-1700204	2	
25	CRANKSHAFT POSITION SENSOR	462-1A/D-3700800	1	
26	BOLT	462-1000801	1	
27	BOLT	462-1000241	1	
28	WASHER	462-1000247	2	
29	BOLT	462-1000242	1	

FIGURE 36 TRANSMISSION CONTROL (5MT)

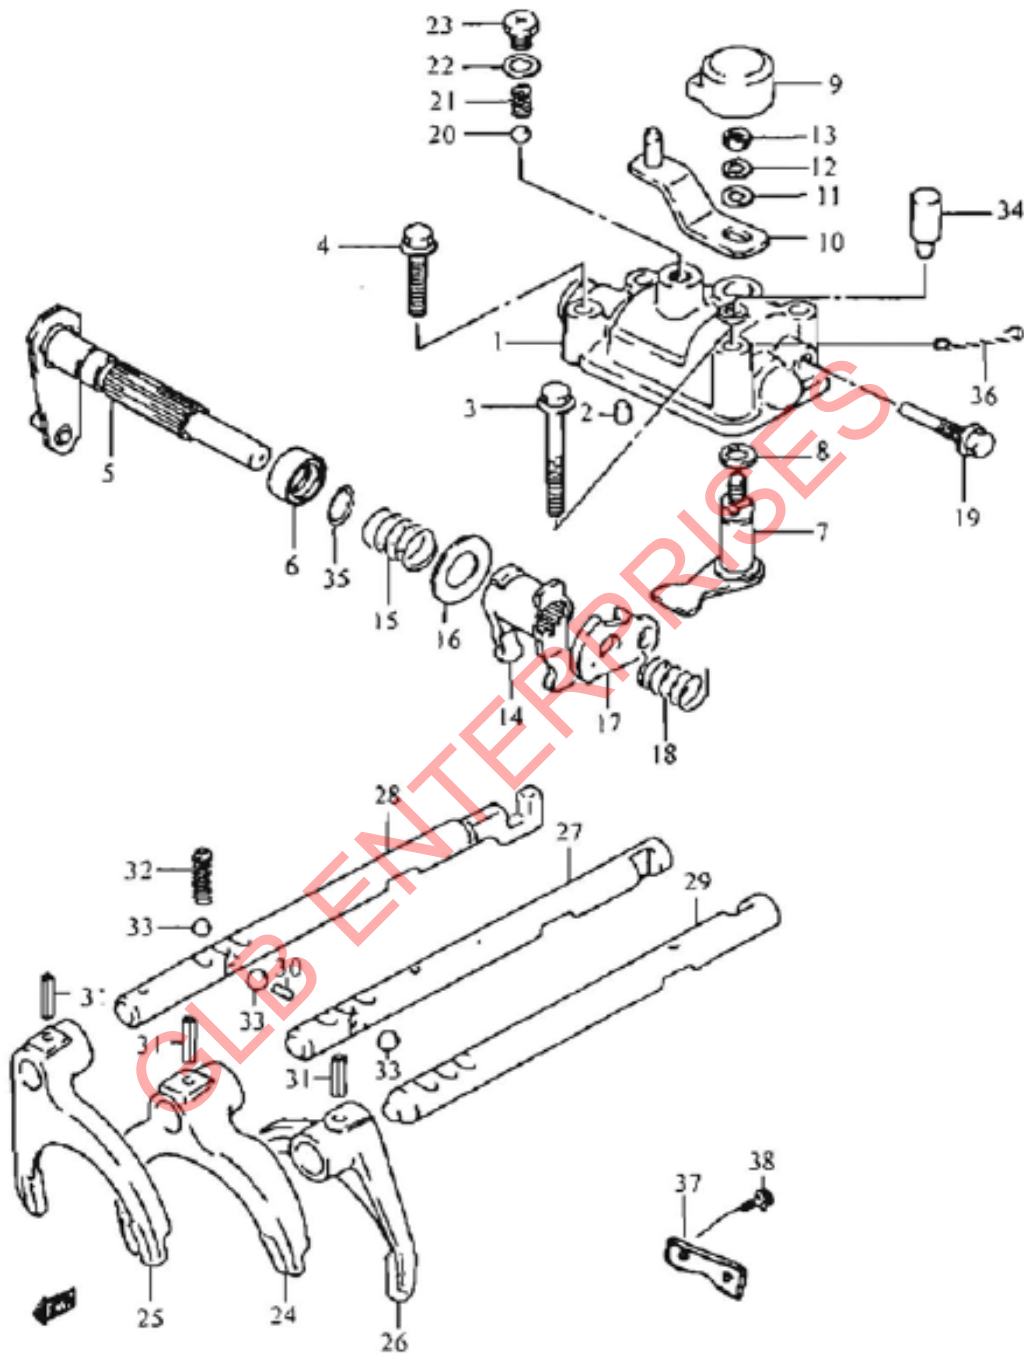


FIGURE 36 TRANSMISSION CONTROL (5MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
----	-------------	----------	-----	------

INFORMATION MISSING
FORM ORGINAIL PARTS
MANUAL FROM MAG
INTERNATIONAL

GLB ENTERPRISES

FIGURE 37 TRANSMISSION CONTROL (4MT)

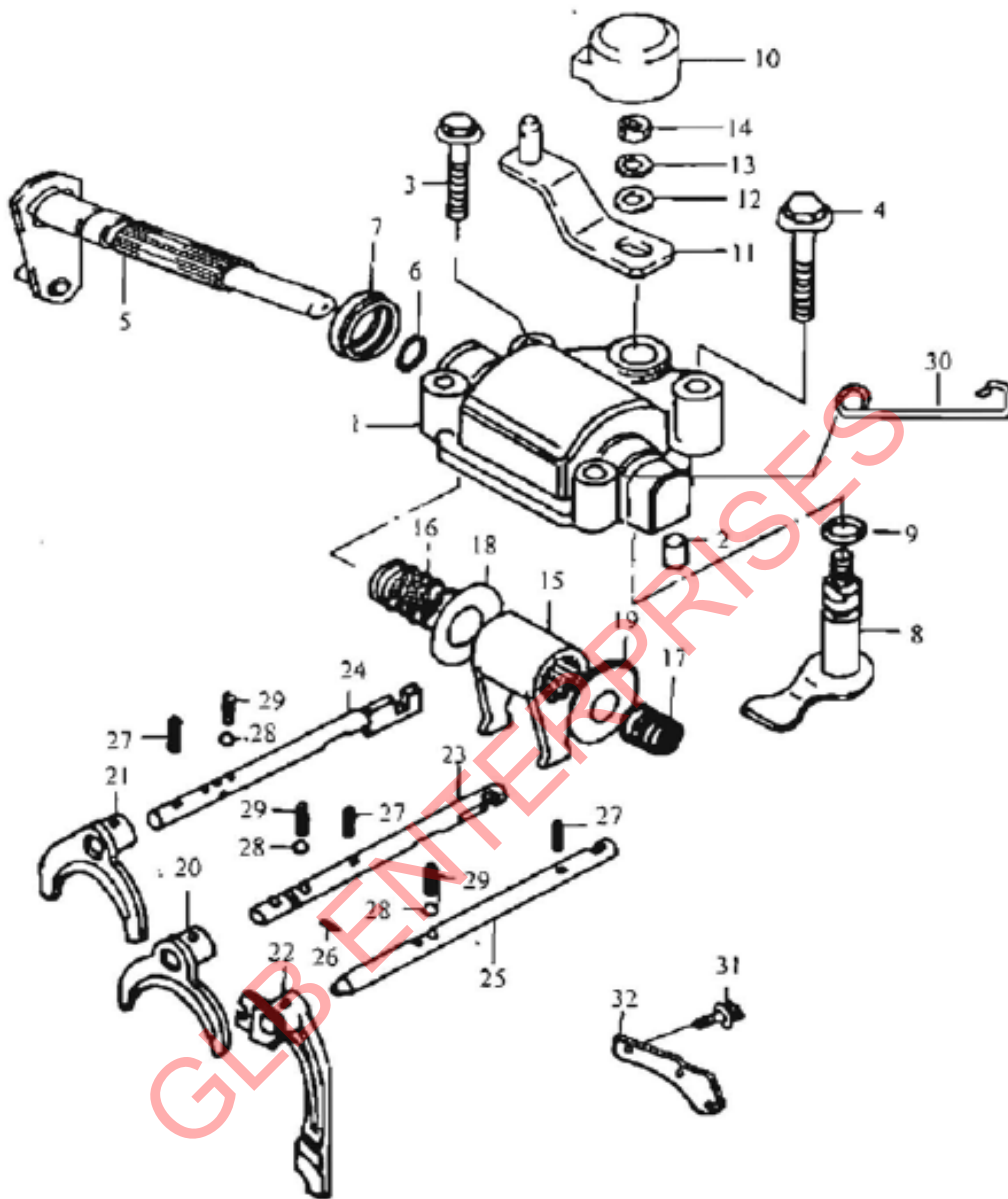


FIGURE 37 TRANSMISSION CONTROL (4MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SHIFT LEVER HOUSING	462-1702014	1	
2	DOWEL PIN	6X10111 BGB4661	1	
3	BOLT	462-1000218	2	
4	BOLT	462-1700203	1	
5	SHIFT HANDLE SHAFT	462-1AB-1702810	1	
6	O'RING	462-1702016	1	
7	RUBBER BUSHING	462-1702015	1	
8	SHIFTING ARM SHAFT ASM	462-1702805	1	
9	O'RING	462-1702020	1	
10	RUBBER CAP	462-1702022	1	
11	SHIFTING ARM ASM	BS10-1702830	1	
12	WASHER	462-1000235	1	
13	LOCK WASHER	GB93-87 8	1	
14	NUT	GB6170-86-M8	1	
15	SHIFTING FORK	462-1702019	1	
16	SPRING	462-1702017	1	
17	SPRING	462-1702018	1	
18	WASHER	462-1702203	1	
19	WASHER	462-1702202	1	
20	GEAR 1 & 2 FORK	462-1702802	1	
21	GEAR 3 & 4 FORK	462-1702801	1	
22	REVERSE FORK	462-1702007-B	1	
23	GEAR 1 & 2 SHAFT ASM	462-1702005	1	
24	GEAR 3 & 4 SHAFT ASM	462-1702800	1	
25	REVERSE FORK SHAFT ASM	462-1702008-B	1	
26	NEEDLE	GB309-84 3X9.8	3	
27	SPRING PIN	462-1702004	3	
28	STEEL BALL	GB308-84 (5/16)	5	
29	SPRING	462-1702002	3	
30	SPEEDOMETER POT HOOK	462-1700014-A	1	
31	BOLT	462-1000810	2	
32	BAFFLE	462-1702006		

FIGURE 38 STARTER

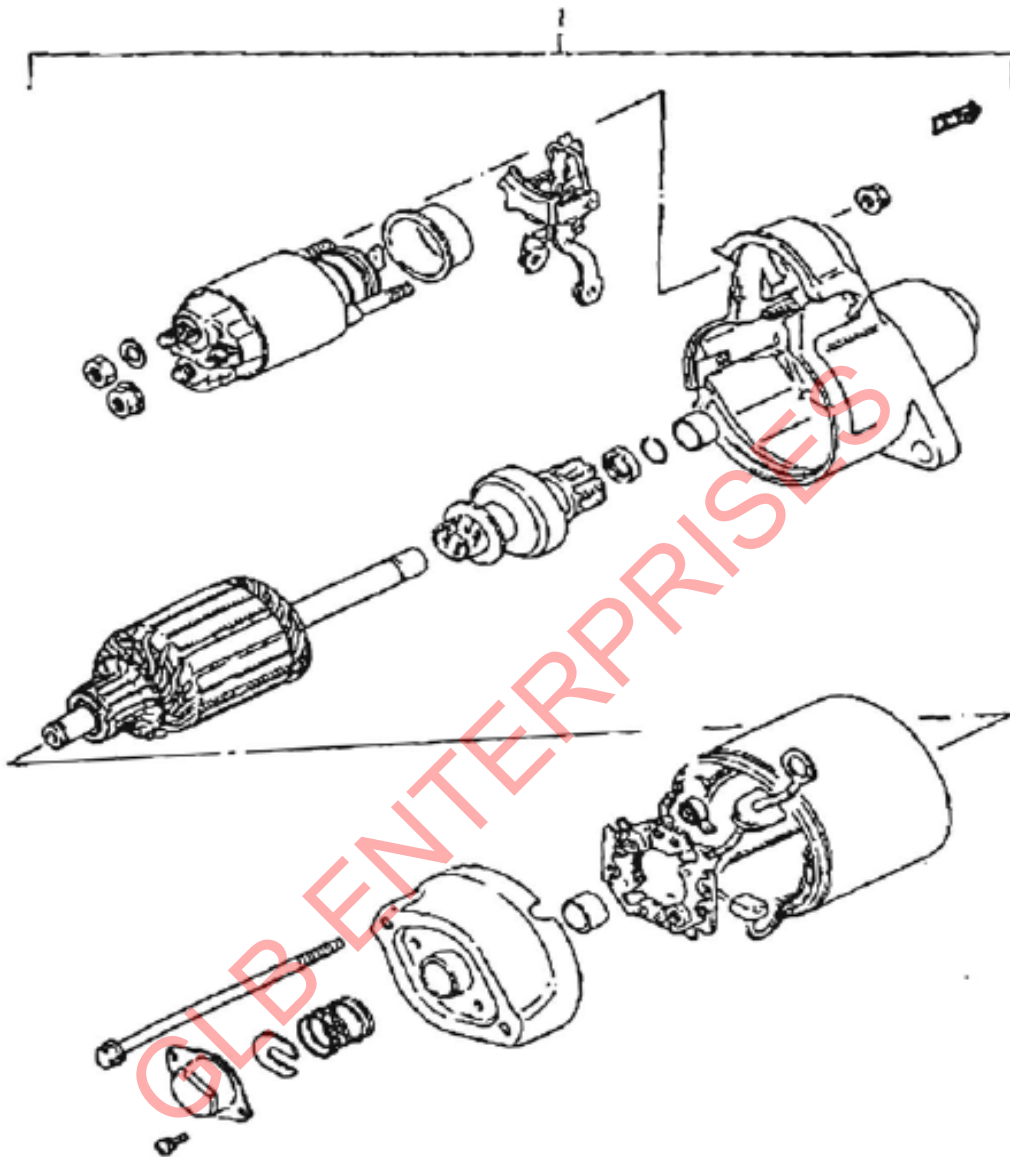


FIGURE 38 STARTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STARTER	462-3708950-01	1	MANUAL TRANSMISSION

GLB ENTERPRISES

FIGURE 39 ALTERNATOR

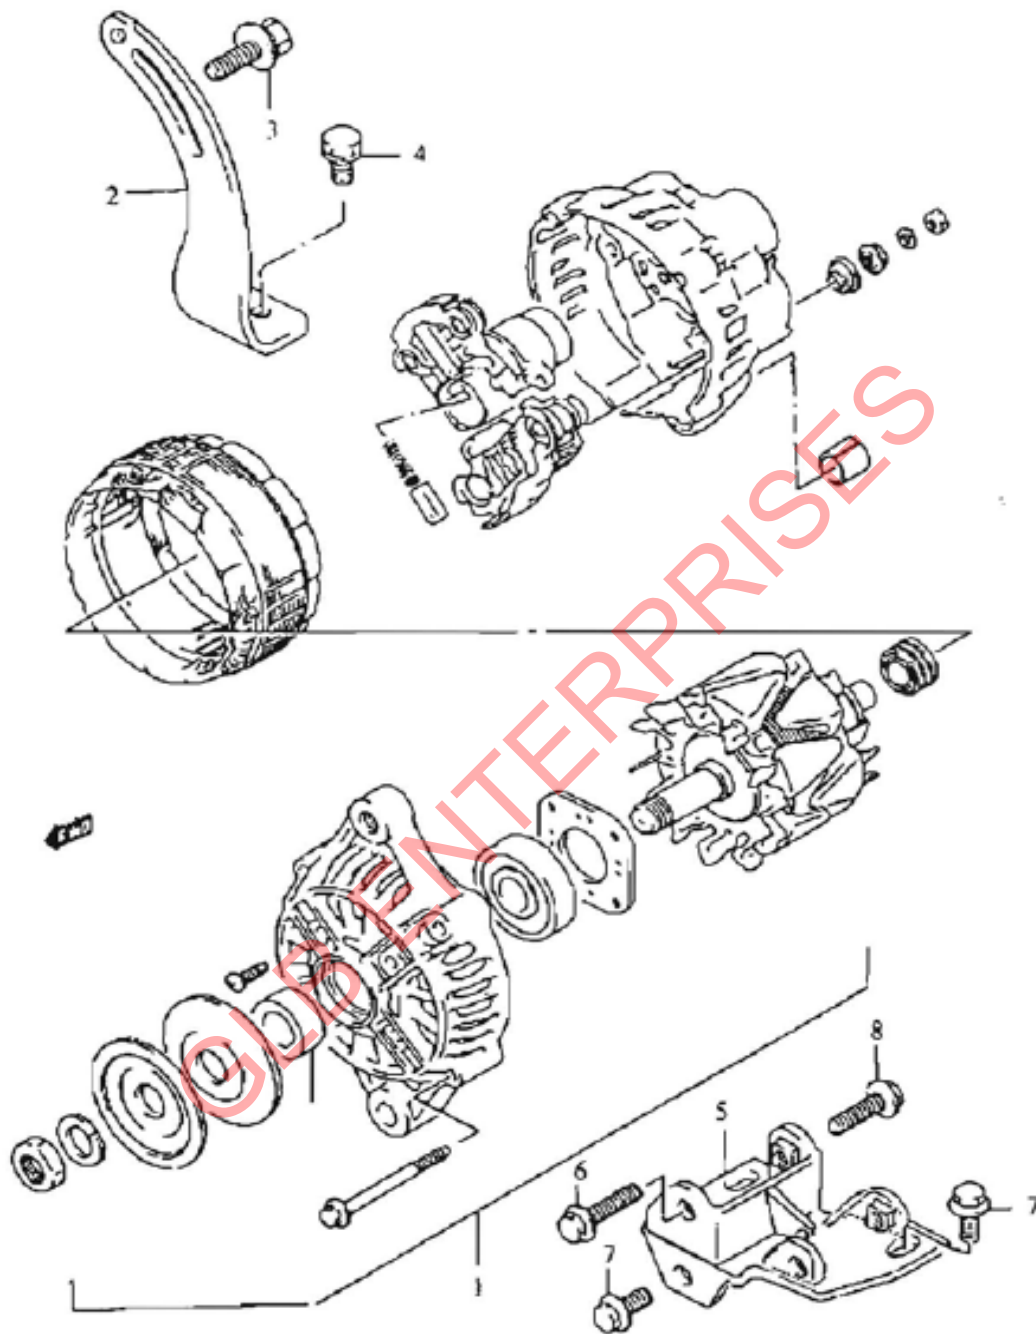


FIGURE 39 ALTERNATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ALTERNATOR ASM	462-1A2DJ-3701950	1	SERPENTINE
2	ALTERNATOR ADJUSTING ARM	465Q-5-1000040	1	DA462-1A
		462-1000040	1	
3	BOLT	462-1000812	1	
	WASHER	462-1000249	1	
4	BOLT	462-1000209	2	
	WASHER	GB859-878	2	
5	ALTERNATOR BRAKET	465Q-5-1000809	1	DA462-1A
		462-1000809	1	
6	BOLT	462-1000812	1	
7	BOLT	462-1000811	3	
8	BOLT	462-1700205	1	



462-1A2DJ-3701950

FIGURE 40 RADIATOR HOSES

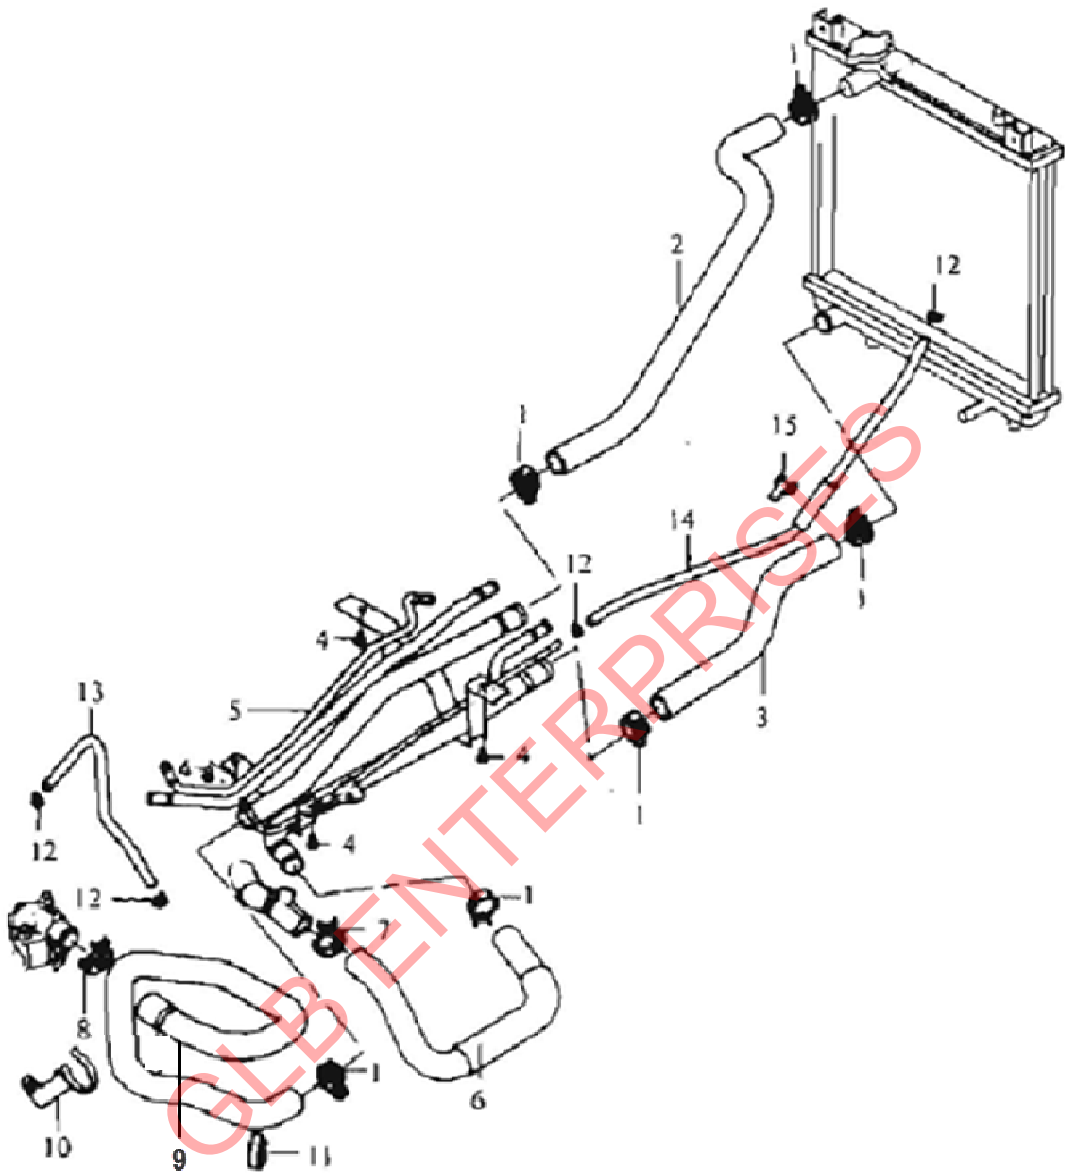


FIGURE 40 RADIATOR HOSES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HOSE CLAMP	Q/2A-CJ-336-28B	6	
2	INLET HOSE (UPPER RADIATOR HOSE)	AC13000005	1	
		AC13000031	1	
3	OUTLET HOSE (LOWER RADIATOR HOSE)	AC13000006	1	
4	BOLT	Q/2A-CJ-36 M6X14	4	
5	FLOOR WATER PIPE	AC13000010	1	
6	INLET HOSE	AC13000007	1	
7	HOSE CLAMP	Q67235	2	
8	HOSE CLAMP	Q67238	1	
9	OUTLET HOSE	AC13000008	1	
		AC13000032	1	
10	CLIP	AC13000015	1	
11	NIP FOR HOSE	AC13000034	1	
12	HOSE CLAMP	Q67112	4	
13	ENGINE TUBE HOSE	AC13000038	1	
		AC13000039	1	
14	TEE HOSE	AC13000030	1	
15	NIP FOR HOSE	AC13000035	1	

GLB ENTERPRISES

FIGURE 41 RADIATOR

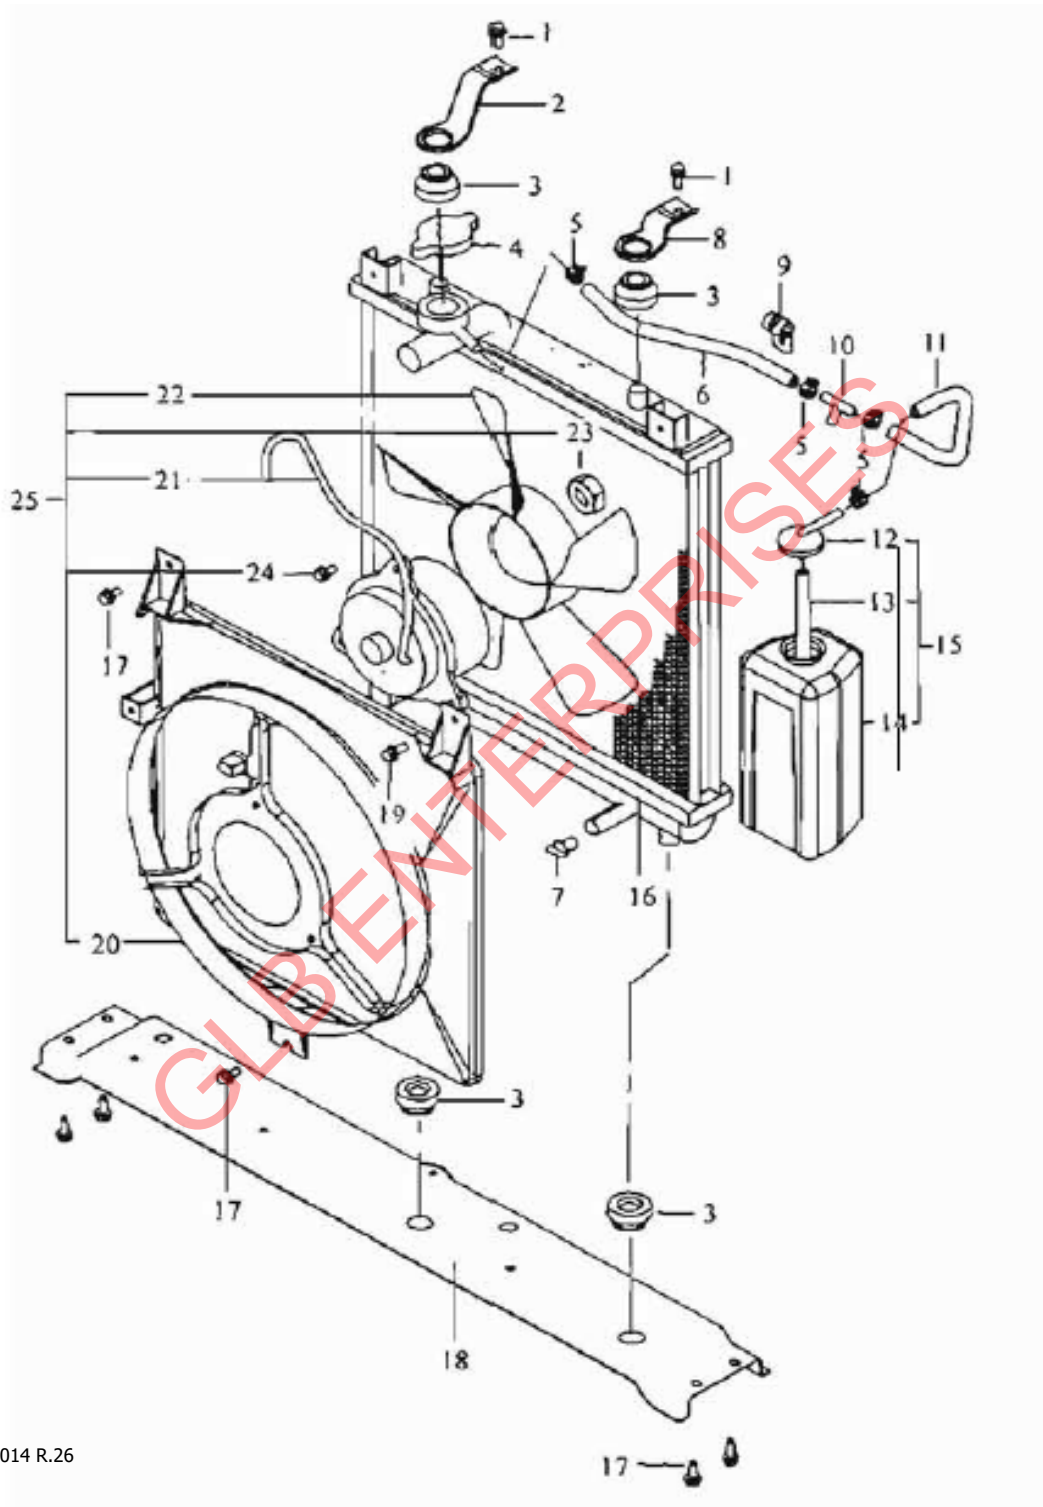


FIGURE 41 RADIATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT	Q/2A-CJ-36 M6X14	2	
	RADIATOR BRACKET			
2	UPPER LH	AC13000023	1	
3	DAMPING COVER	AB13000003	4	
4	RADIATOR CAP	AC13000026	1	HFJ6370K, G, H
		AB13000012	1	HFJ6370F
5	HOSE CLAMP	Q67112	4	
6	OVERFLOW HOSE	AC13000022	1	HFJ6370K, G, H
		AC13000033	1	HFJ6370F
7	DRAIN PLUG	AC13000025	1	
		AB13000015	1	
	RADIATOR BRACKET			
8	UPPER RH	AC13000003	1	
9	HOSE CLIP	AA13000009	1	
10	T-TUBE CONNECTOR	AC13000036	1	
11	OVERFLOW TANK HOSE	AC13000037	1	
12	TANK CAP	AC13000019	1	SEE #15
13	TANK HOSE	AC13000021	1	SEE #15
	RADIATOR OVERFLOW			
14	TANK	AC13000027	1	SEE #15
	RADIATOR OVERFLOW			
15	TANK ASM	AC13000002	1	
16	RADIATOR ASM	AC13000001	1	HFJ6370K, G, H
		AB13000011	1	HFJ6370F
		AC13000060	1	
17	BOLT	Q/2A-CJ-274 M6X16	4	
	LOWER RADIATOR			
18	MOUNT	AC13000004	1	
19	BOLT	Q/2A-CJ-274 M6X16	3	
20	FAN SHROUD	AC13000028	1	SEE #25
21	FAN MOTOR	AC13000016	1	SEE #25
22	FAN BLADE	AC13000017	1	SEE #25
23	NUT	Q/2A-CJ-108 M8	1	
24	BOLT	Q/2A-CJ-18 M3X12	3	
	RADIATOR COOLING			
25	FAN ASM	AC13000044	1	
26	DAMPING COVER UP	AC13000018	2	
	HEATER CONTROL			
N/S	VALVE	HFJ8101060DA-10	1	V01-950



AC13000060

Copyright © GLB2014 R.26



AC13000001

FIGURE 42 AIR FILTER

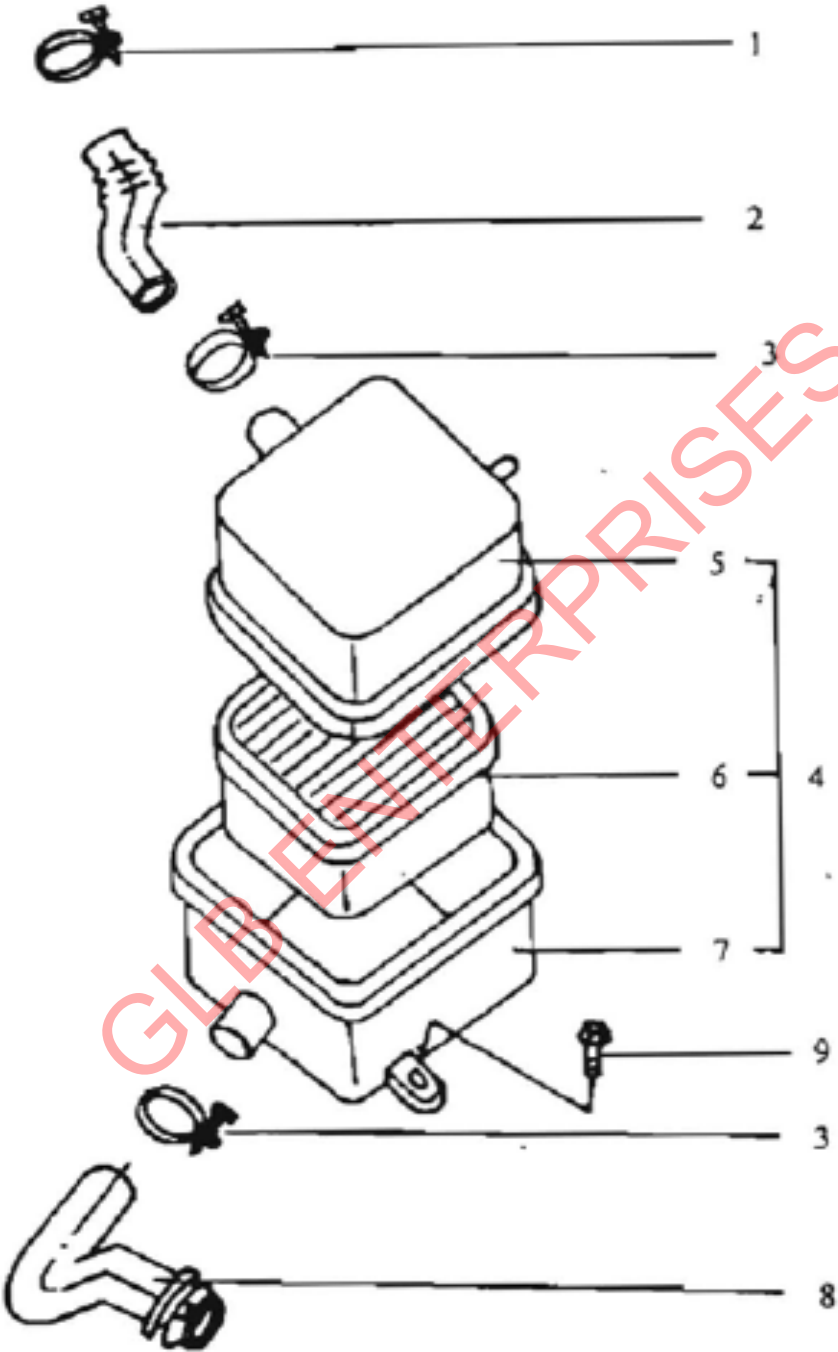


FIGURE 42 AIR FILTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CLAMP	Q67262	1	
2	AIR INLET HOSE AIR FILTER TO TB	AC11090003	1	HFJ6370K
		AC11090008	1	HFJ637H, F, G
3	CLAMP	Q67260	1	
	AIR FILTER HOUSING			
4	ASM	HFJ1109100DC	1	
5	UPPER HOUSING LID	HFJ1109110DB	1	
6	AIR FILTER	HFJ1109130DB	1	
7	LOWER HOUSING BODY	HFJ1109120DB	1	
8	AIR INLET HOSE	AC11090002	1	
9	BOLT	Q/2A-CJ-36-M8X30	1	

GLB ENTERPRISES

Technical drawing of a car's rear suspension system, showing a cross-section of the rear axle and the rear shock absorber assembly. The drawing is labeled with numbers 11, 12, 13, 14, and 15. A large red watermark "GLB ENTERPRISES" is overlaid diagonally across the image.



WWW.GLBFE.COM

FIGURE 43 EXHUAUST SYSTEM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST GASKET FROM HEADER	AC12000001	1	HFJ6370K
		HFJ1200010DB	1	HFJ6370F ,G, H
2	LOCK WASHER	Q40410	3	
3	NUT	HFJ1200005CA	3	
4	CATALYTIC CONVERTOR	AC12000002	1	HFJ6370K
		AC12000003	1	HFJ6370F ,G, H
		AC12000005	1	HFJ6370H
5	BOLT	Q/2A-CJ-35 M8X45	4	
6	BUSHING	AA12000014	2	
	FRONT MUFFLER			
7	HANGER	AA12000013	2	
8	GASKET	AA12000012	2	
9	PLATE	Q/2A-J22-8X22X1.55	2	
10	EXHAUST DONUT	HFJ1200008CA	1	
11	EXHAUST BOLT SPRING	HFJ1200007CA	2	
12	EXHAUST BOLT	HFJ1200006CA	2	
13	MUFFLER ASM	AC12000004	1	VAN
		AC12000014	1	TRUCK
	REAR MUFFLER			
14	HANGER	AA12000015	2	
15	BUSHING	AA12000016	2	

FIGURE 44 FUEL TANK

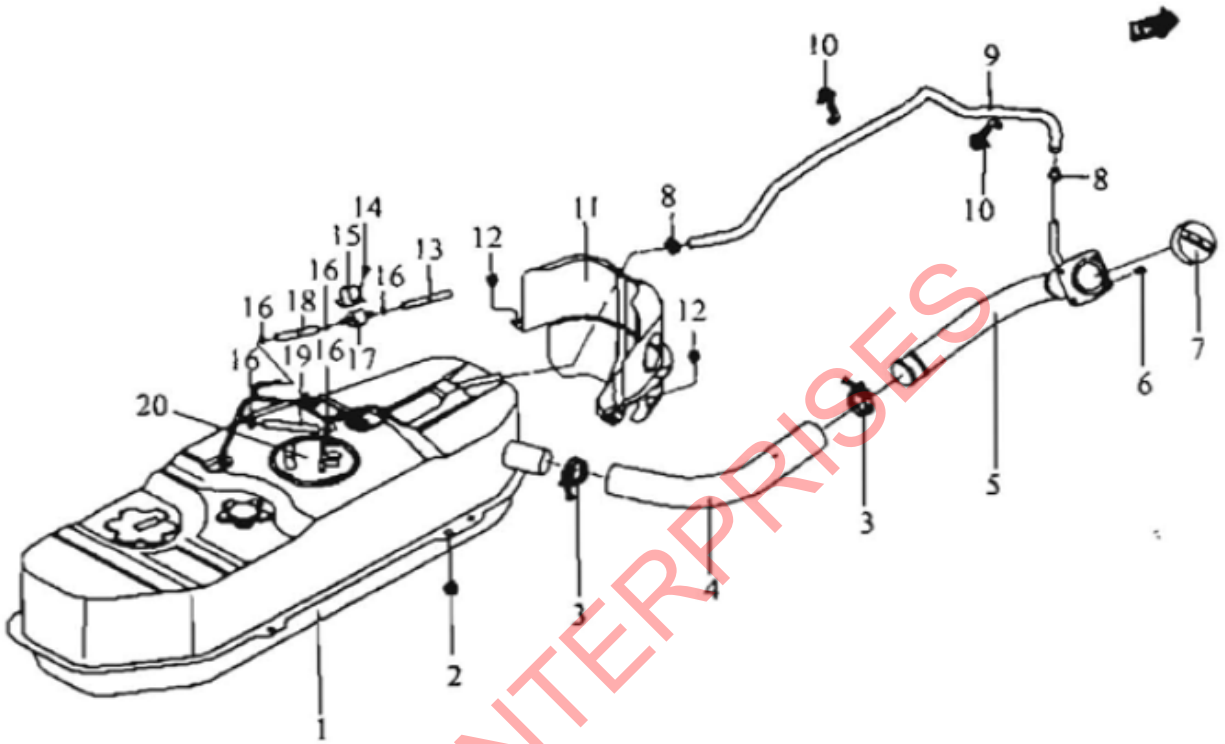


FIGURE 44 FUEL TANK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK	HFJ1101100DB	1	DELPHI EGI
		AC11010100	1	UAES EGI
2	BOLT	Q15080825-6G	4	
	LOCK WASHER	Q40408	4	
	WASHER	Q40208	4	
3	CLAMP	Q67250	2	
4	FUEL FILLER HOSE	AC11010006	1	
5	FUEL FILLER PIPE ASM	AC11010001	1	
6	SCREW	Q/2A-CJ-474 M5X20	4	
7	FUEL CAP	HFJ1103000DA	1	
8	CLAMP	Q/2A-CJ-501-16	2	
9	FUEL FILLER VAPOR HOSE	AC11010005	1	
10	CLAMP	AC11010004	2	
11	FUEL TANK HEAT SHIELD	HFJ1101012DB	1	
12	SNAP FASTENER	HFJ1101011DB	2	
13	DOUBLE WAY VALVE			
13	VENT HOSE	HFJ1100005DA	1	
14	SCREW	Q/2A-CJ-26 M5X12	1	
15	CLAMP	HFJ1100018CB	1	
16	CLAMP	Q67111	5	
17	DOUBLE WAY CHECK VALVE	HFJ100200CA	1	
18	INLET VALVE HOSE	HFJ1104022DB	1	
19	FUEL TANKE VAPOR HOSE	HFJ1104012CA	1	
20	FUEL PUMP ASM	HFJ1106000DB	1	DELPHI EGI
		AC11010039	1	UAES EGI
	FUEL PINCH COCK	HFJ1101106DB	1	

FIGURE 45 FUEL LINE

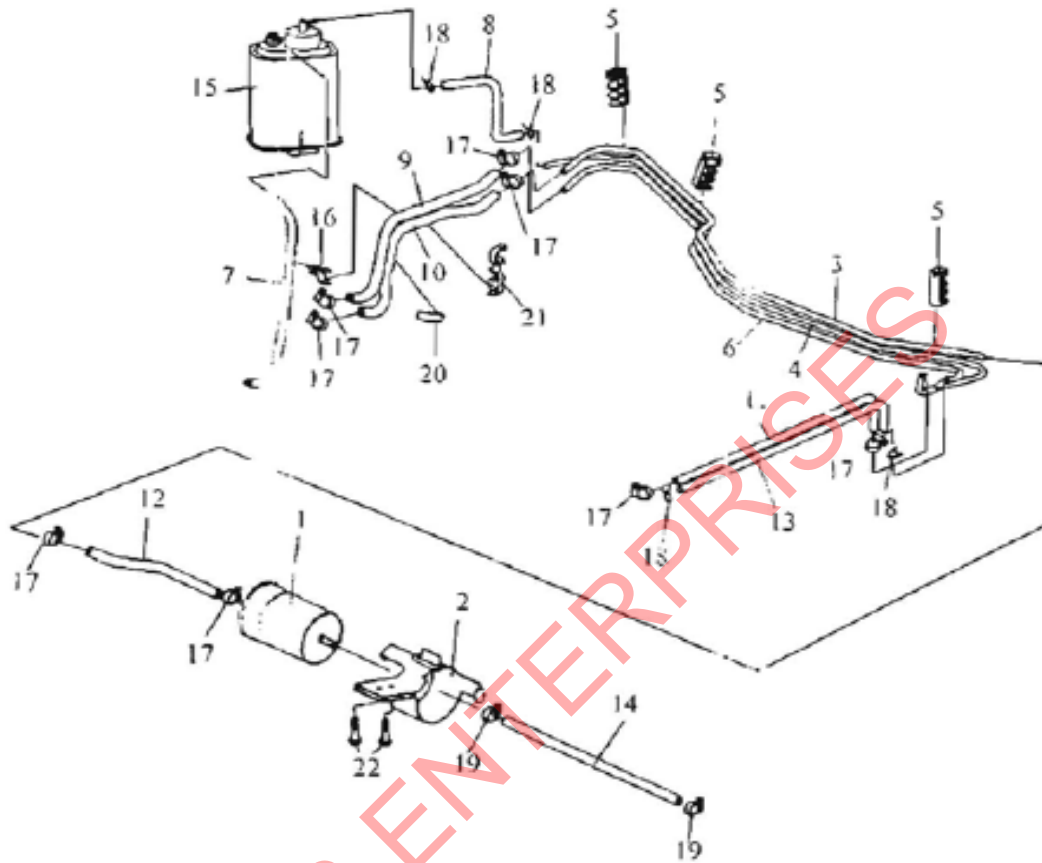


FIGURE 45 FUEL LINE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL FILTER	AC11040001	1	
		AC11040031	1	DA471, 3-NIPPLE
2	FUEL FILTER BRACKET	AC11040028	1	
3	FUEL SUPPORT PIPE	AC11040005	1	
4	EVAPORATOR PIPE	AC11040006	1	
5	FUEL LINE CLIP	AC11040008	3	
6	FUEL RETURN PIPE	AC11040004	1	
7	PURGE HOSE	AC11040011	1	
8	EVAPORTOR HOSE	AC11040010	1	
9	FUEL RAIL INLET HOSE	AC11040012	1	
10	FUEL RAIL RETURN HOSE	AC11040013	1	
11	FUEL TANK RETURN HOSE	AC11040016	1	
12	FUEL FILTER RETURN HOSE	AC11040017	1	
13	EVAPORTOR HOSE	AC11040014	1	
14	FUEL TANK SUPPLY HOSE	AC11040015	1	
15	CANISTER ASM	AC11040009	1	
16	CLAMP	AC11080013	1	
17	CLAMP	Q/2A-CJ-489-15	8	
18	CLAMP	Q67111	4	
19	CLAMP	Q/2A-CJ-489-16	2	
20	CLAMP	AC11040027	1	
21	FUEL HOSE CLIP SUB ASSEMBLY	AC11040026	1	
22	BOLT	Q/2A-CJ-101 M6X10	2	

FIGURE 46 GEAR SHIFTER

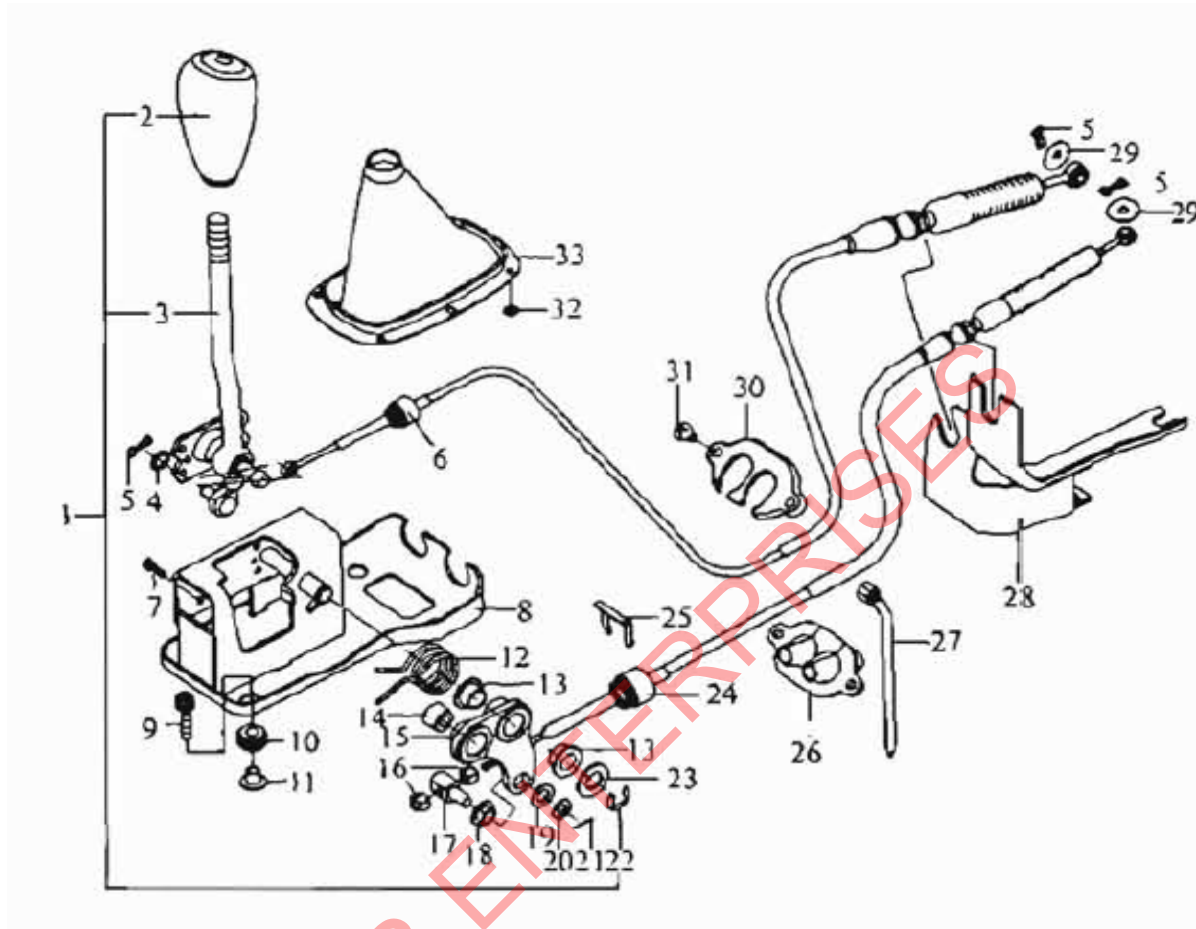


FIGURE 46 GEAR SHIFTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SHIFTER ASM 5MT	AC17030001	1	
	SHIFTER ASM 4MT	AC17030005	1	
2	SHIFTER KNOB 5MT	AC17030013	1	
	SHIFTER KNOB 4MT	AC17030014	1	
3	SHIFT CONTROL LEVER	HFJ1703110CA	1	
4	WASHER	Q/2AJ22-8X14X1.5	1	
5	PIN SNAP	Q/2A-CJ-465-8	3	
6	SHIFT CABLE	AC17030003	1	HFJ6370K
		AC17030006	1	HFJ6370G, F
		AC17030012	1	HFJ6370H
7	BOLT/WASHER	Q/2A-CJ-29 M5X12	4	
	SHIFT CONTROL			
8	BRACKET	HFJ1703120CA	1	
9	BOLT/WASHER	Q/2A-CJ-63 M6X30	4	
10	BUMP SPACER	HFJ1703106CA	4	
11	BUSHING	HFJ1703107CA	4	
12	RETURN SPRING	Q/2A-CJ-435	1	
13	BUSHING	HFJ1703101CA	2	
14	BUSHING	HFJ1703103CA	1	
15	ROCKER ARM ASM	HFJ1703130CA	1	
16	NUT	Q/2A-CJ-437 M6	2	
17	FITTING	HFJ1703108CA	1	
18	SHAFT BUSHING	HFJ1703105CA	1	
19	WASHER	Q40108	1	
20	LOCK WASHER	Q/5AM26-8	1	
21	PIN SNAP	Q5002520	1	
22	RETAINER	Q43690	1	
23	WASHER	Q40112	1	
24	SELECT CABLE	AC17030002	1	HFJ6370K
		AC17030007	1	HFJ6370G, F
		AC17030011	1	HFJ6370H
25	CABLE CLIP	Q/2A-CJ-424	2	
	CONTROL CABLE			
26	GROMMET	HFJ1703013CA	1	
27	CLIP	Q/2A-CJ-415	1	
28	REAR CABLE BRACKET	AC17030008	1	4MT
29	WASHER	Q/2A-CJ-476	2	
	CONTROL CABLE			
30	BRACKET	HFJ1703012CA	1	
31	SCREW	Q271B6316	2	
32	CLIP	AC17030013	6	
33	SHIFTER BOOT	AC17030004	1	

FIGURE 47 CLUTCH CABLE



FIGURE 47 CLUTCH CABLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CLUTCH CABLE ASM 5MT 52-3/8	AC16020001	1	
	CLUCH CABLE ASM 5MT 51"	AC16020007	1	AFTER 2007
	CLUTCH CABLE ASM 4MT	AC16020003	1	
	CLUTCH CABLE ASM	AC16020006	1	MINYI VAN

GLB ENTERPRISES

FIGURE 48 DRIVE SHAFT

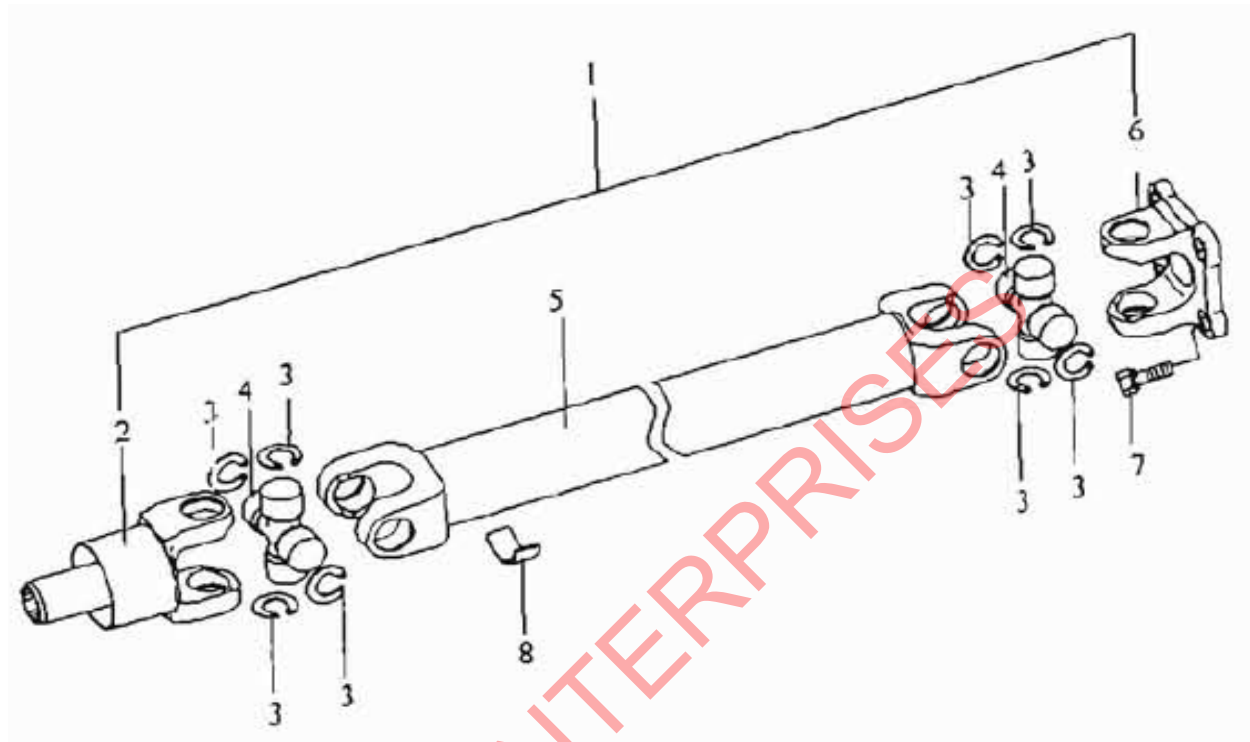


FIGURE 48 DRIVE SHAFT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DRIVE SHAFT ASM	AC22010001	1	HFJ6370K, H
		AC22010002	1	HFJ6370G, F
2	SLIDING YOKE ASM	AC22010011	1	HFJ6370K, H
		AC22010012	1	HFJ6370G, F
	U-JOINT RETAINING			
3	CLIP	Q43025F3	8	
4	U-JOINT	HFJ2201040CA	2	
5	DRIVE SHAFT	AC22010008	1	HFJ6370K, H
		AC22010013	1	HFJ6370G, F
6	REAR FLANGE	AC22010010	1	
7	BOLT	Q/2A-CJ-174 M10X1.25X25	4	
8	COUNTER WEIGHT	HFJ2201006FA	A/R	
		HFJ2201009FA	A/R	

GLB ENTERPRISES

FIGURE 49 BRAKE & ACCELERATOR BRACKET

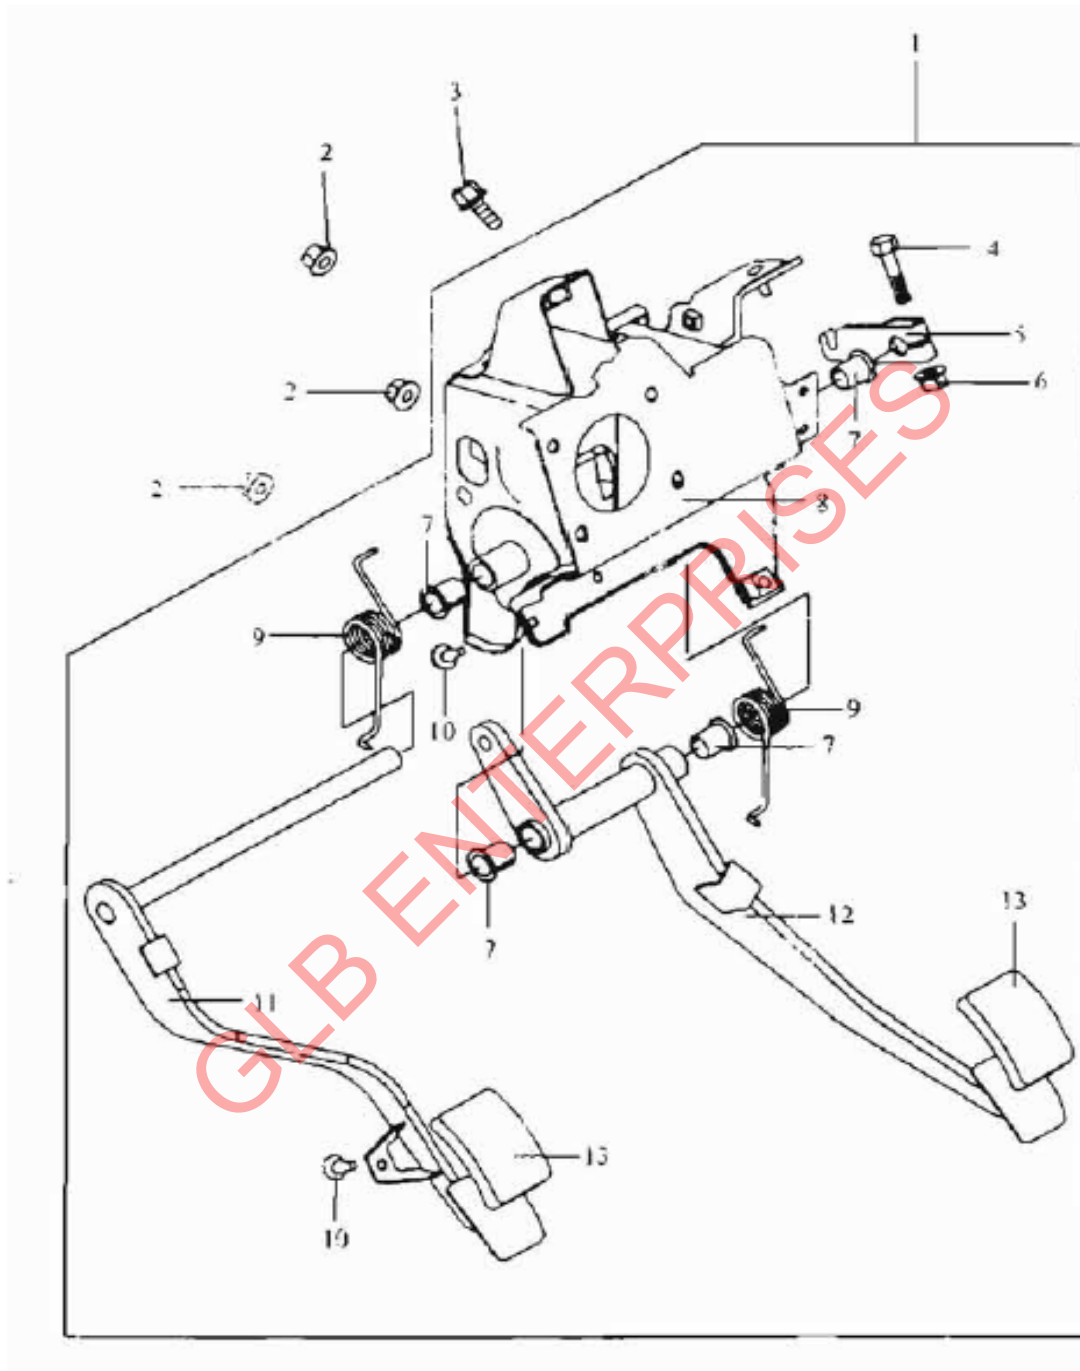


FIGURE 49 BRAKE & CLUTCH BRACKET

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PEDAL BRACKET ASM	AC35040001	1	
2	LOCK NUT	Q/2A-CJ-117-M8	3	
3	BOLT	Q/2A-CJ-22-M8X16-8.8	1	
4	BOLT	Q150B0835-6G	1	
5	CLUTCH LEVER	AC35040006	1	
6	NUT	Q33008	1	
7	BUSHING	AC35040004	4	
8	PEDAL BRACKET	AC35040005	1	
9	PEDAL RETURN SPRING	AC35040010	2	
10	PEDAL BUFFER	AC35040003	2	
11	CLUTCH PEDAL ASM	AC35040009	1	
12	BRAKE PEDAL ASM	AC35040007	2	
13	PEDAL PAD	AC35040008	2	3504046-01

GLB ENTERPRISES

FIGURE 50 ACCELRTATOR PEDAL & CABLE

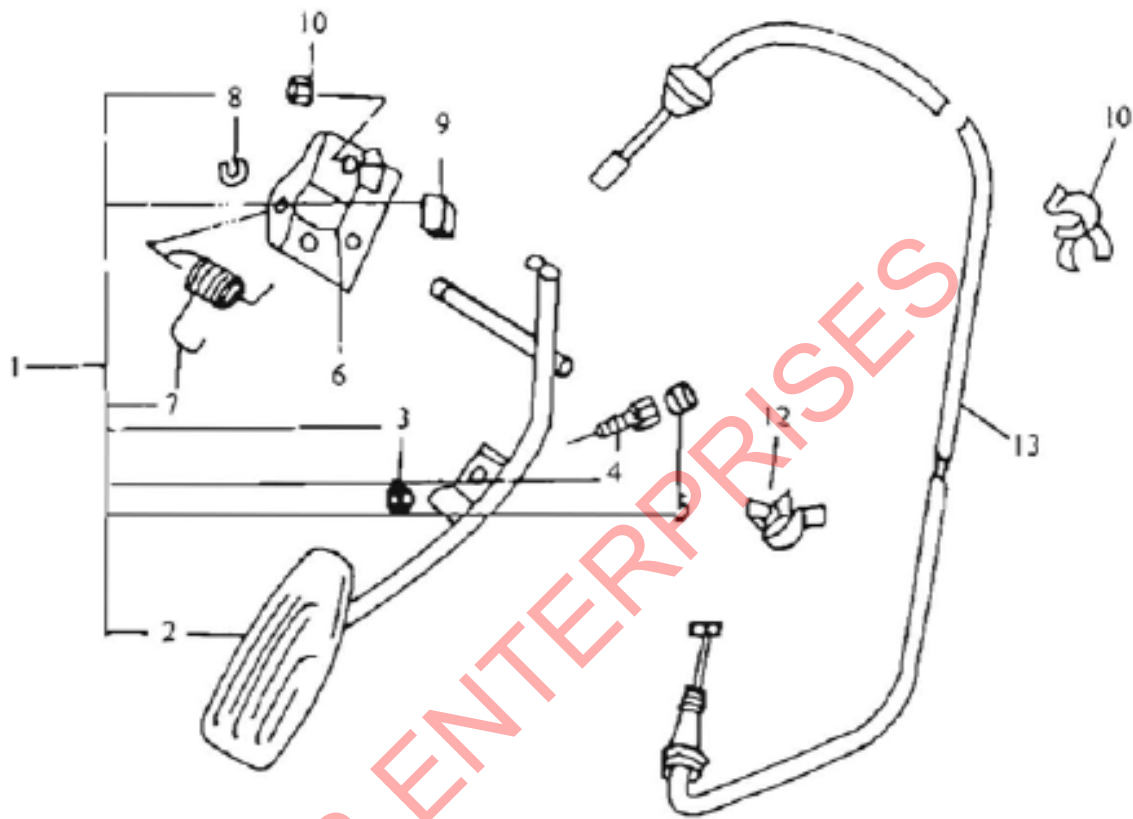


FIGURE 50 ACCELATOR PEDAL & CABLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
	ACCELERATOR PEDAL			
1	ASM	AC11080002	1	
2	ACCELERTOR PEDAL	AC11080003	1	
3	NUT	Q340B06	1	
4	ADJUSTING BOLT	AC11080006	1	
5	ADJUSTING BOLT CAP	AC11080006	1	
6	ACCELERATOR PEDAL BRACKET	AC11080004	1	
7	RETURN SPRING	AC11080005	1	
8	RING	AA12000012	1	
9	SAFETY PAD	Q43660	1	
10	NUT	Q/2A-CJ-108-M6	2	
11	CLAMP	AC11080013	1	
12	CLAMP	AC11080014	1	
13	ACCELERATOR CABLE	AC11080032	1	

GLB ENTERPRISES

FIGURE 51 STEERING WHEEL & AIR BAG SYSTEM

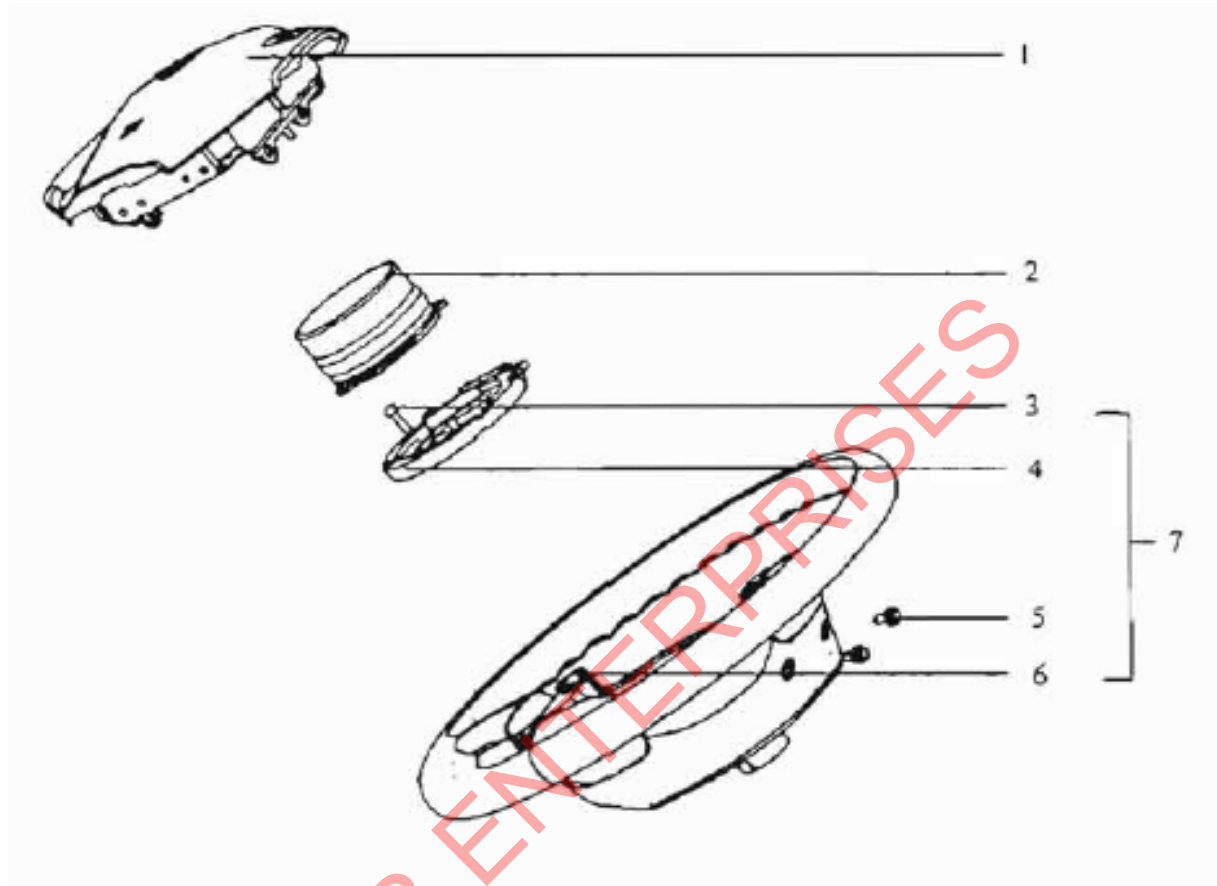


FIGURE 51 STEERING WHEEL & AIR BAG SYSTEM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR BAG MODULE	AC34020002	1	
2	AIR BAG GAS INFLATOR	AC34020003	1	
3	SCREW	GB823-88 (M5X12)	3	
	AIR BAG FIXATION			
4	SEAT	AC34020011	1	
5	BOLT	AC34020004	4	
6	STEERING HORN	AC34020010	2	
7	STEERING WHEEL ASM	AC34020001	1	

GLB ENTERPRISES

FIGURE 52 STEERING WHEEL W/O AIR BAG

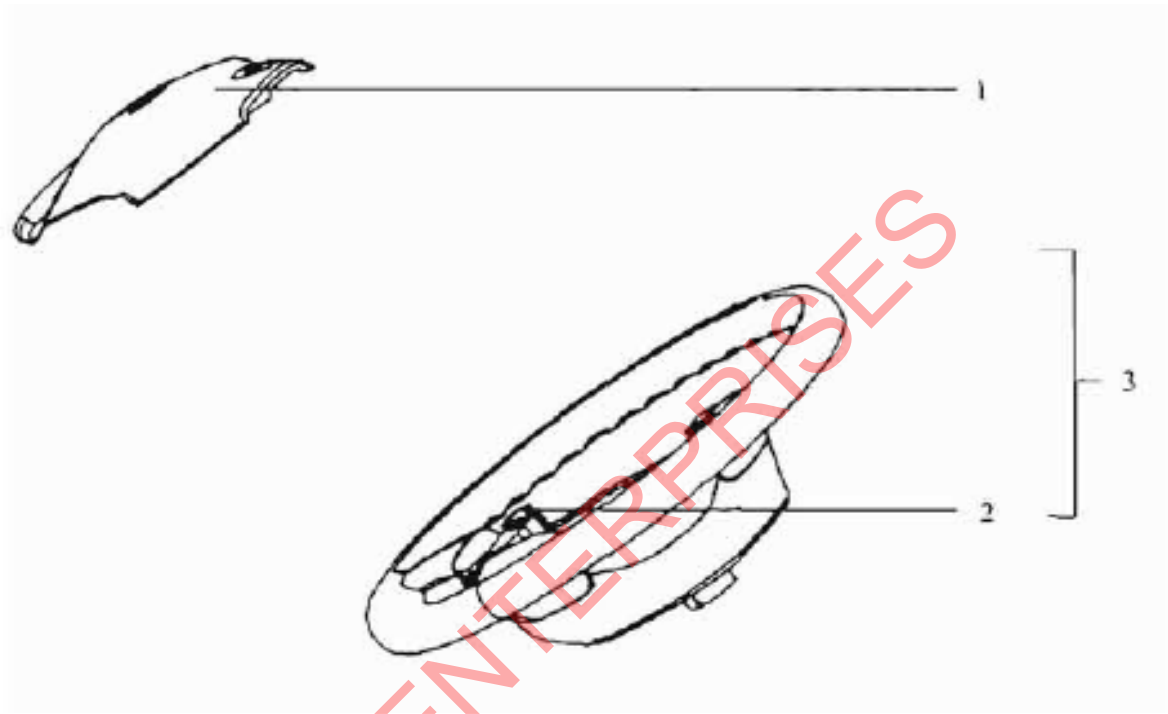


FIGURE 52 STEERING WHEEL W/O AIR BAG

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STEERING WHEEL CENTER CAP	AC34020005	1	
2	STEERING HORN	AC34020010	2	
3	STEERING WHEEL BODY ASM	AC34020006	1	

GLB ENTERPRISES

FIGURE 53 STEERING SHAFT AND JOINT COVER

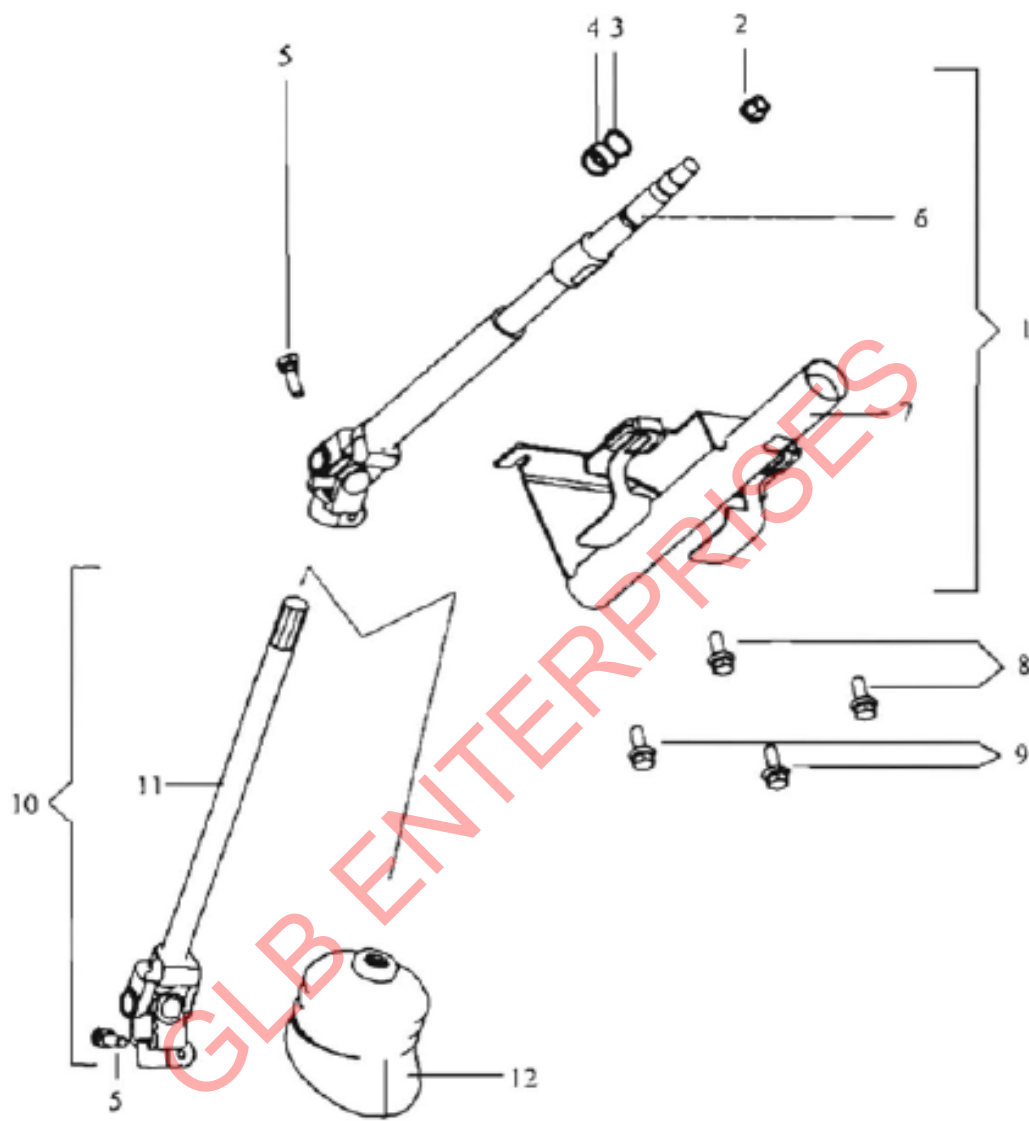


FIGURE 53 STEERING SHAFT AND JOINT COVER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STEERING UPPER SHAFT ASM	AC34040001	1	
2	NUT	Q/2A-CJ-44-M12X1.28-8	1	
3	CLIP	Q43117	2	
4	O' RING	GB3452.1 13.2X1.8G	1	
5	BOLT	Q/2A-CJ-31-M8X32-8.8	2	
6	UPPER STEERING SHAFT	AC34040005	1	
7	UPPER STEERING SHAFT BRACKET	AC34040006	1	
8	BOLT	Q/2A-CJ-274-M8X35-8.8	2	
9	BOLT	Q/2A-CJ-274-M8X20-8.8	2	
10	LOWER STEERING SHAFT ASM	AC34040002	1	
11	LOWER STEERING SHAFT	AC34040007	1	
12	STEERING SHAFT BOOT	AC34000001	1	

GLB ENTERPRISES

FIGURE 54 STEERING RACK

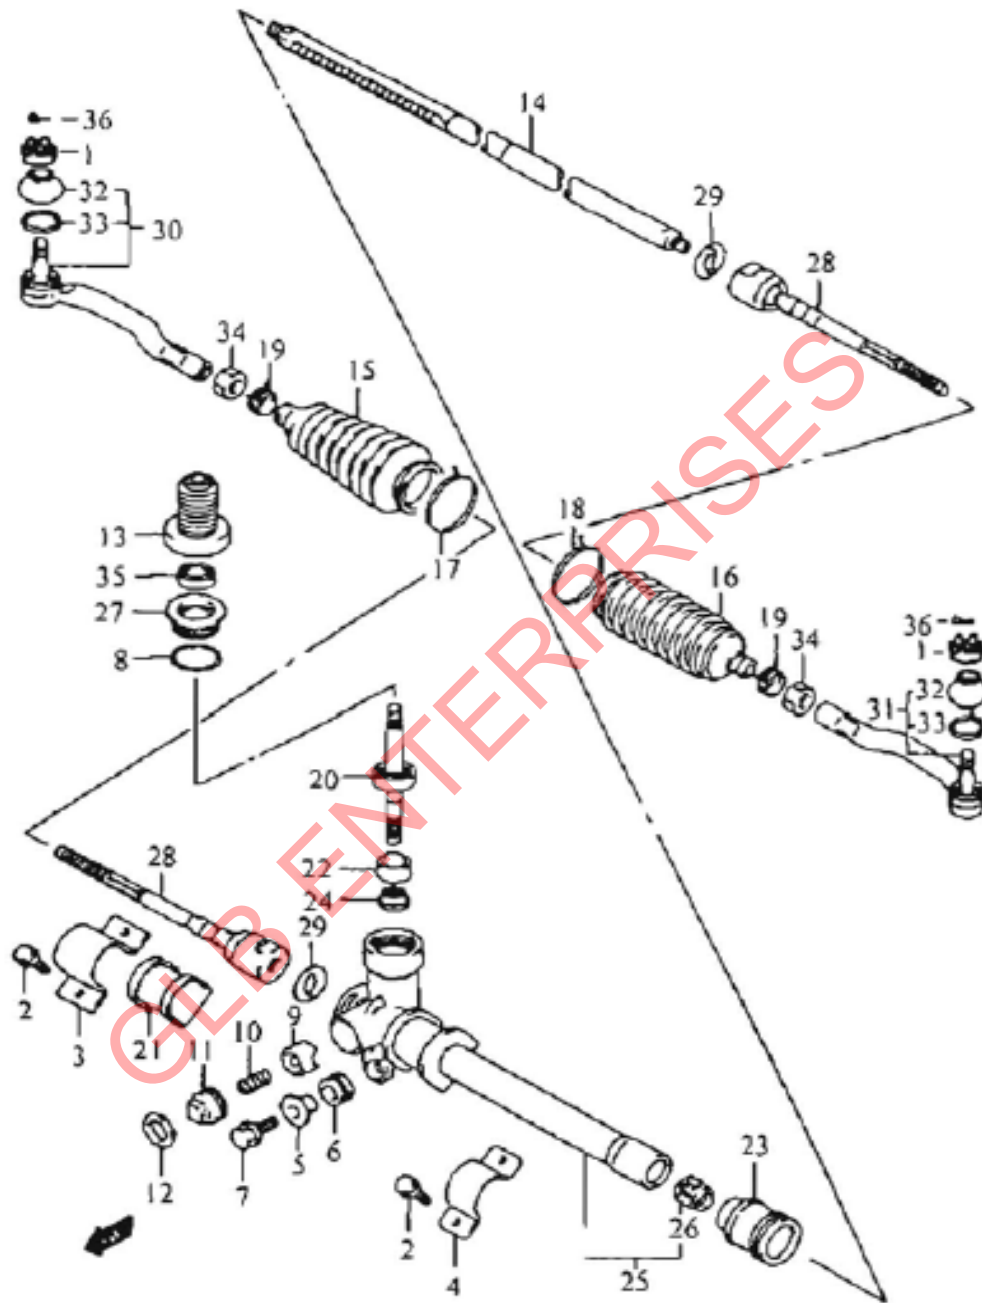


FIGURE 54 STEERING RACK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CASTLE NUT	Q387B12	2	
2	BOLT	Q/2A-CJ-101-M8X25-8.8	4	
3	BRACKET LH	AC34000002	1	
4	BRACKET RH	AC34000003	1	
5	BUSHING	AC34010003	1	
6	BUSHING	AC34010002	1	
7	BOLT	Q/2A-CJ-278-M8X30-8.8	1	
8	LOCK WASHER	AC34010004	1	
9	SUPPORTING SEAT	AC34010005	1	
10	SPRING	AC34010006	1	
11	ADJUSTING BOLT	AC34010007	1	
12	LOCK NUT	AC34010008	1	
13	DUST BOOT	AC34010009	1	
14	RACK	AC34010010	1	
15	STEERING RACK BOOT LH	AC34010011	1	
16	STEERING RACK BOOT RH	AC34010012	1	
17	CLAMP	AC34010013	1	
18	CLAMP	AC34010014	1	
19	CLAMP	AC34010015	2	
20	PINION COMPLEX	AC34010016	1	
21	BRACKET BUSHING LH	AC34010017	1	
22	BUSHING	AC34010018	1	
23	TUBE RACK BUSHING	AC34010019	1	
24	BEARING	AC34010020	1	
25	GEAR HOUSING	AC34010021	1	
26	RACK BUSHING	AC34010022	1	
27	NUT	AC34010023	2	
28	STEERING TIE ROD	AC34010024	2	
29	LIMIT RING	AC34010025	2	
30	TIE ROD LH	AC34010026	1	3003030-01
31	TIE ROD RH	AC34010027	1	3003040-01
32	DUST BOOT	AC34010028	2	
33	LOCK SPRING	AC34010029	2	
34	NUT	A341B12	2	
35	OIL SEAL	AC34010030	1	
36	COTTER PIN	Q5003230	2	

FIGURE 55 FRONT STABILIZER

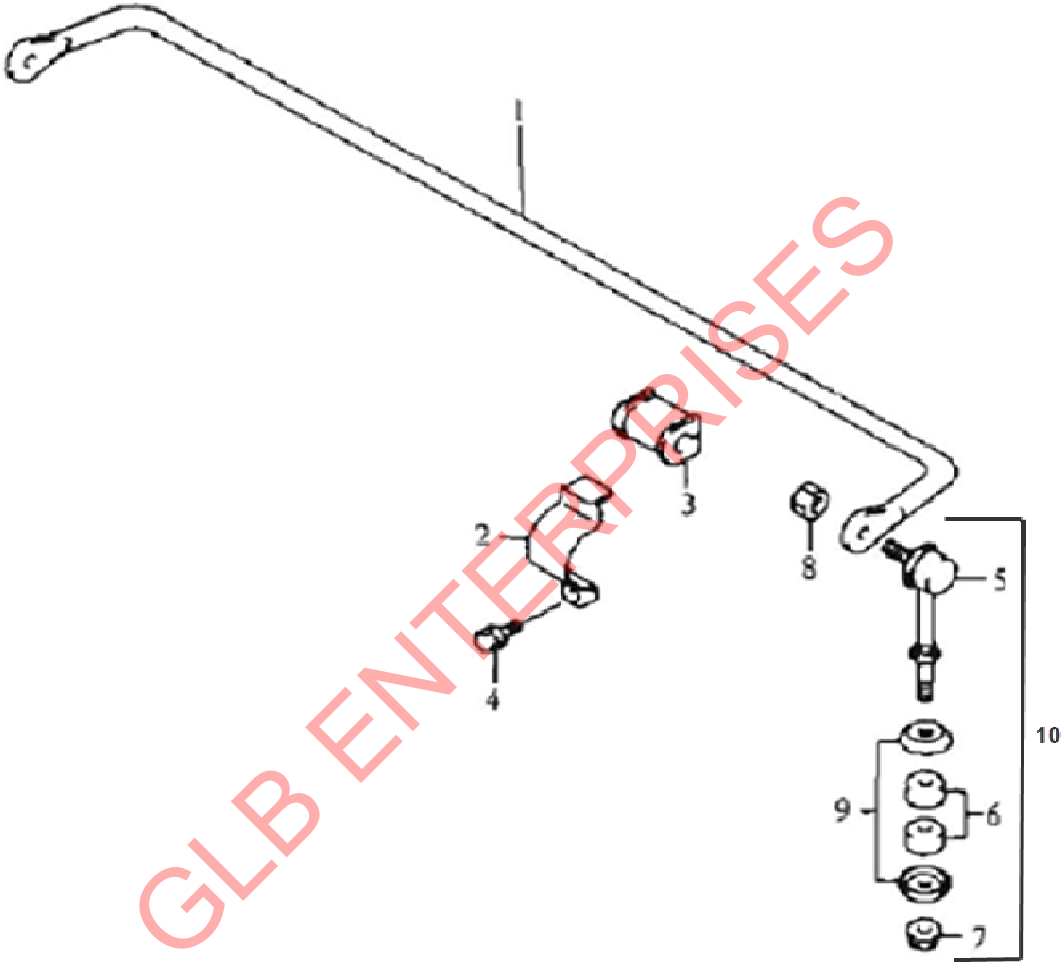


FIGURE 55 FRONT STABILIZER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT STABILIZER BAR	AC29010019	1	20
		AC29010007	1	16
	STABILIZER BAR			
2	MOUNT BRACKET	AC29010015	2	20
		AC29010010	2	16
	STABILIZER BAR			
3	MOUNT BUSHING	AC29010016	2	20
		AC29010011	2	16
4	BOLT	Q/2A-CJ-101-M8X16-8.8	2	
5	STABILIZER LINK	AC29010009	2	
	STABILIZER BAR			
6	BUSHING	AC29010009	4	
7	NUT	Q/2A-CJ-284-M8	2	
8	NUT	Q/2A-CJ-282-M10X125	2	
9	WASHER	AC29010008	4	
10	STABILIZER LINK ASM	AC29010009	2	

GLB ENTERPRISES

FIGURE 56 FRONT SUSPENSION FRAME

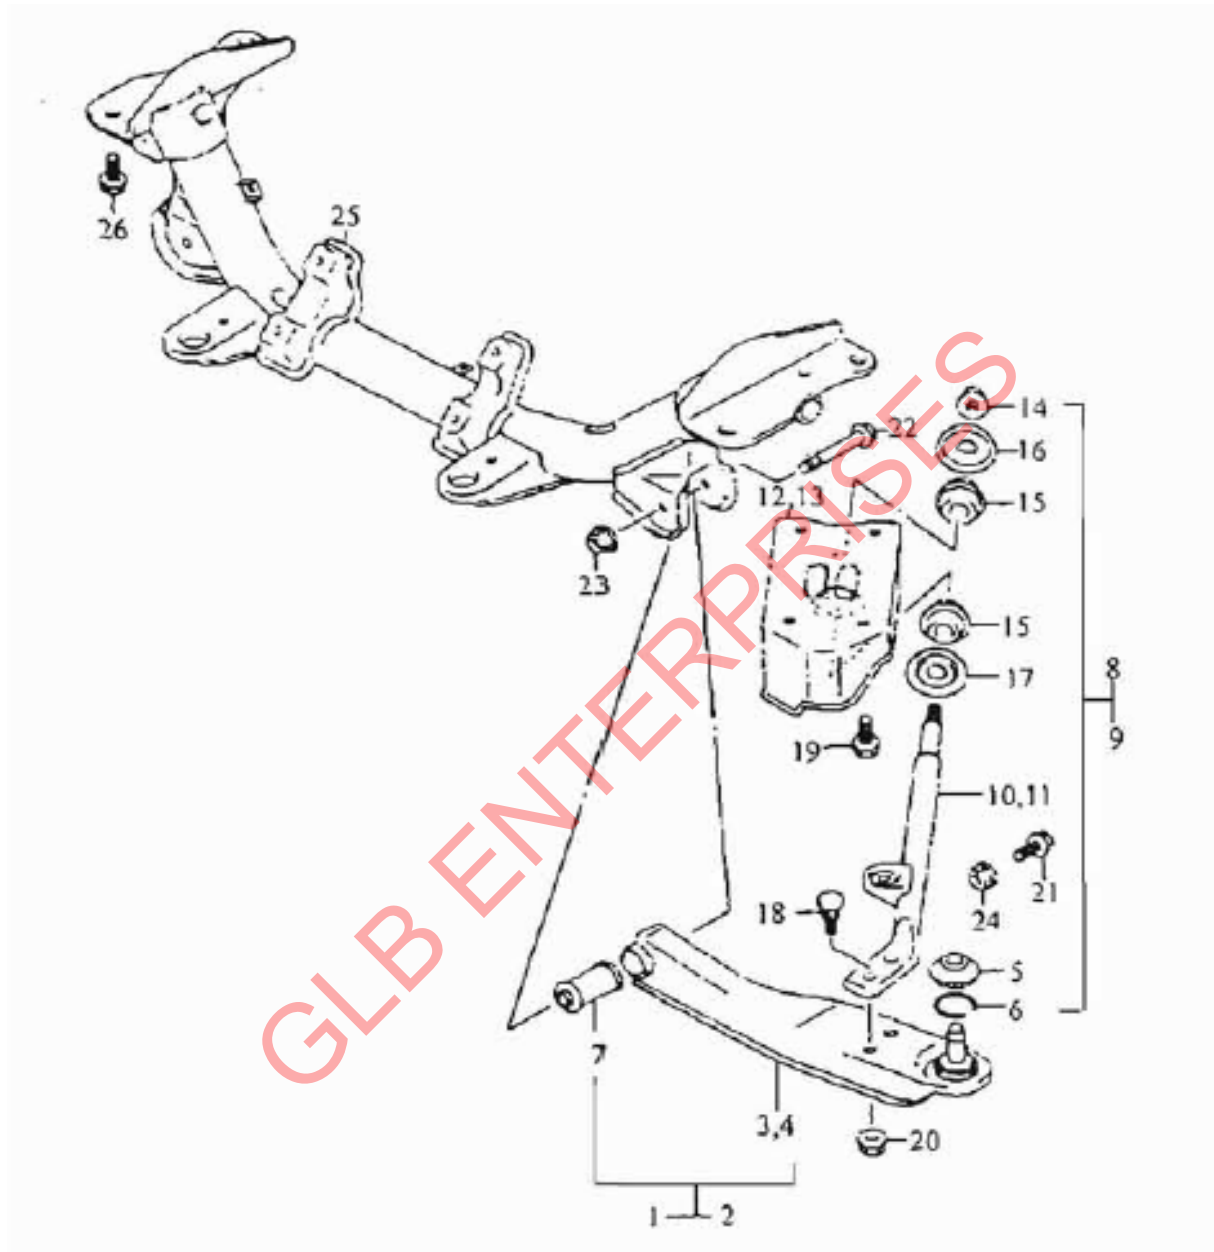


FIGURE 56 FRONT SUSPENSION FRAME

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT SUSPENSION ARM LH	AC29010003	1	
2	FRONT SUSPENSION ARM RH	AC29010004	1	
5	BOOT	AC29010133	2	
6	CLIP	AC29010134	2	
7	SUSPENSION ARM BUSHING	AC29010135	2	
8	TENSION ROD ASM LH	AC29010017	1	20
		AC29010005	1	16
9	TENSION ROD ASM RH	AC29010017	1	20
		AC29010005	1	16
10	TENSION ROD LH	AC29010141	1	
11	TENSION ROD RH	AC29010142	1	
12	PLANK COMPLEX, TENSION ROD LH	AC29010201	1	
13	PLANK COMPLEX, TENSION ROD RH	AC29010202	1	
14	NUT	AC29010146	2	
15	TENSION ROD BUSHING	AC29010147	4	
16	WASHER	AC29010144	2	
17	WASHER	AC29010143	2	
18	BOLT	AC29010145	4	
19	BOLT	Q/2A-CJ-101 M10X1.25X25	8	
20	NUT	Q/2A-CJ-117 M12X1.25	4	
21	BOLT	Q/2A-CJ-450 M10X125X50	2	
22	BOLT	Q/2A-CJ-45 M10X1.25X72	2	
23	NUT	Q/2A-CJ-117 M12X1.25	2	
24	NUT	Q/2A-CJ-105 M12X1.25	2	
25	FRONT SUPENSION FRAME	AC30010001	1	
26	BOLT	Q/2A-CJ-101 M12X1.25X25	4	

FIGURE 57 REAR SHOCK AND SPRING

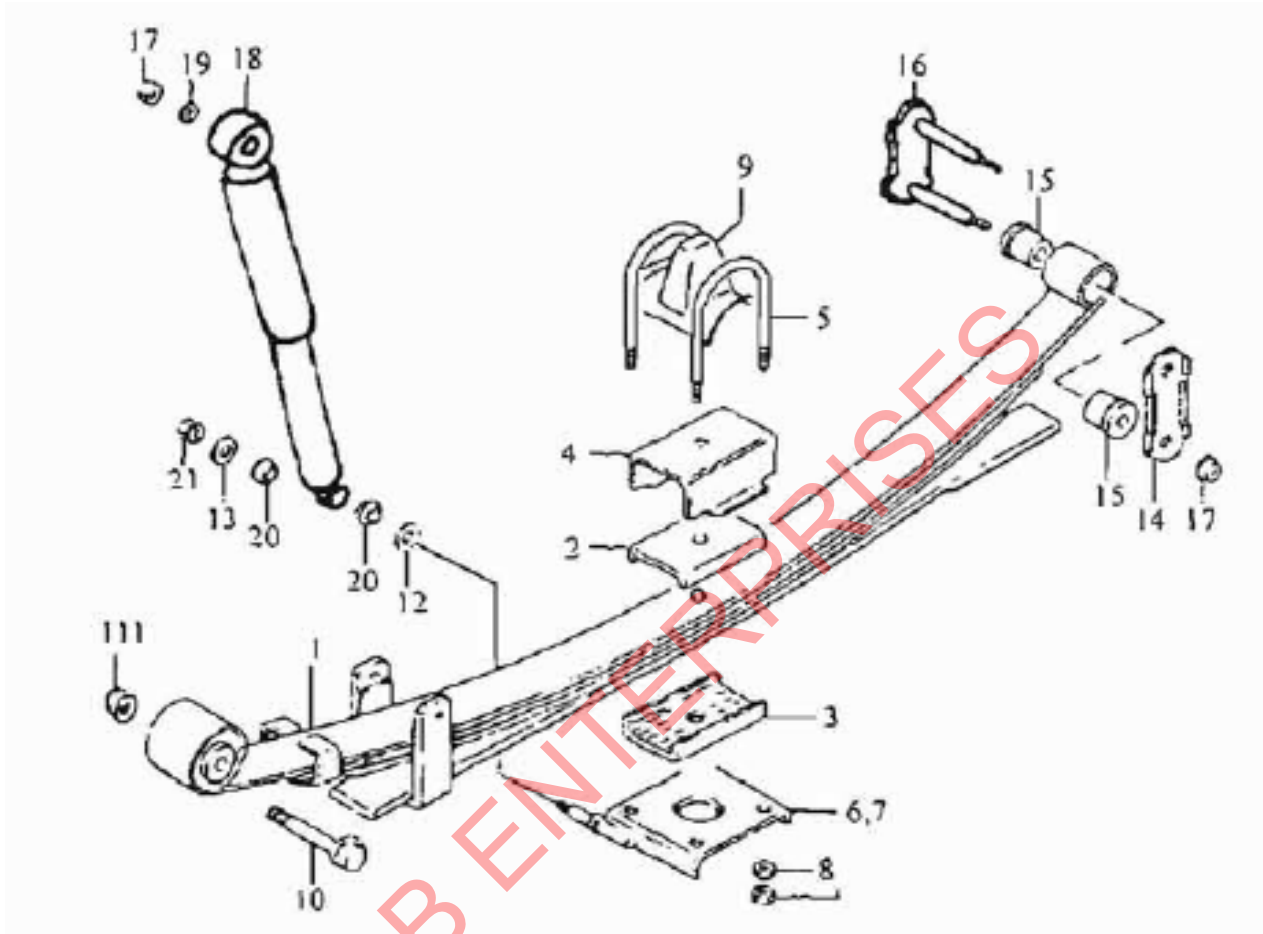


FIGURE 57 REAR SHOCK AND SPRING

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PLATE SPRING ASM REAR	AC29110017	2	
2	PLATE SPRING PAD UPPER	HFJ2911103CA	2	
3	LOWER PAD	HFJ2911102CA	2	
4	PLATE SPRING CLAMP	HFJ2911107CA	2	
5	U-BOLT	AC29110012	4	
6	SPRING SEAT LH	AC29110014	1	
7	SPRING SEAT RH	AC29110015	1	
8	NUT	Q341C10	16	
9	BUMPER SPRING	AC29110013	2	
10	BOLT	Q/2A-CJ-450 M12X1.25X90	16	
11	NUT	Q/2A-CJ-105 M12X1.25	2	
12	WASHER	Q40112	2	
13	WASHER	HFJ2911105CA	2	
14	SHACKLE PLATE OUTER	HFJ2911109CA	2	
15	BUSHING	HFJ2911104CA	8	
16	SHACKLE PLATE OUTER	HFJ2911140CA	2	
17	NUT	Q/2A-CJ-105 M10X1.25	6	
18	SHOCK ABSORBER	HFJ2915000CA	2	
19	WASHER	Q40210	2	
20	BUSHING	HFJ2911108CA	4	
21	NUT	Q/2A-CJ-105-M8	2	

FIGURE 58 FRONT STRUT

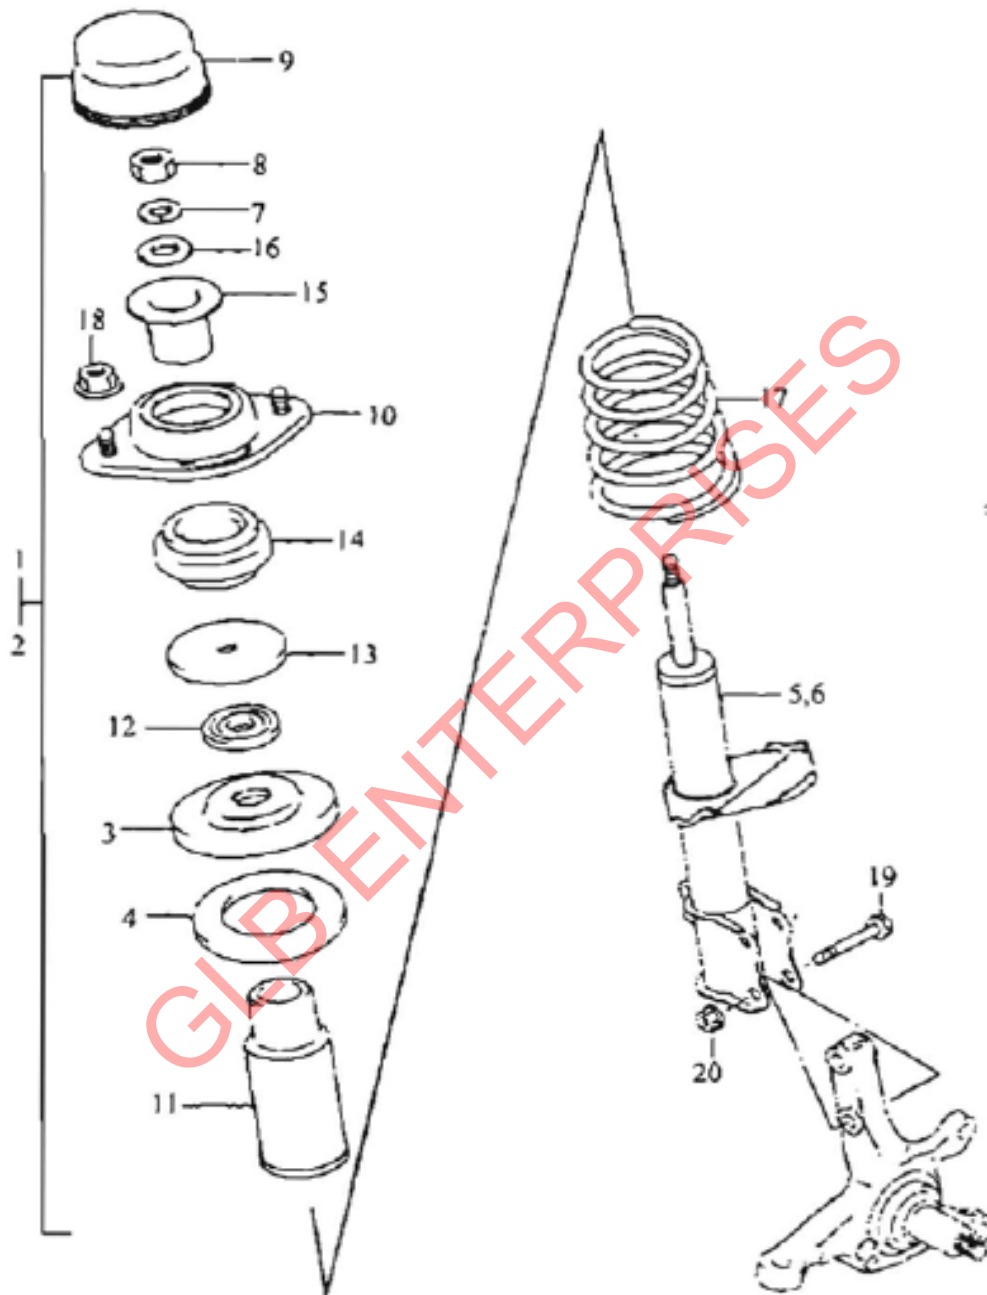


FIGURE 58 FRONT STRUT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT STRUT LH	AC29010001	1	
2	FRONT STRUT RH	AC29010002	1	

GLB ENTERPRISES

FIGURE 59 FRONT HUB & KNUCKLE ASM

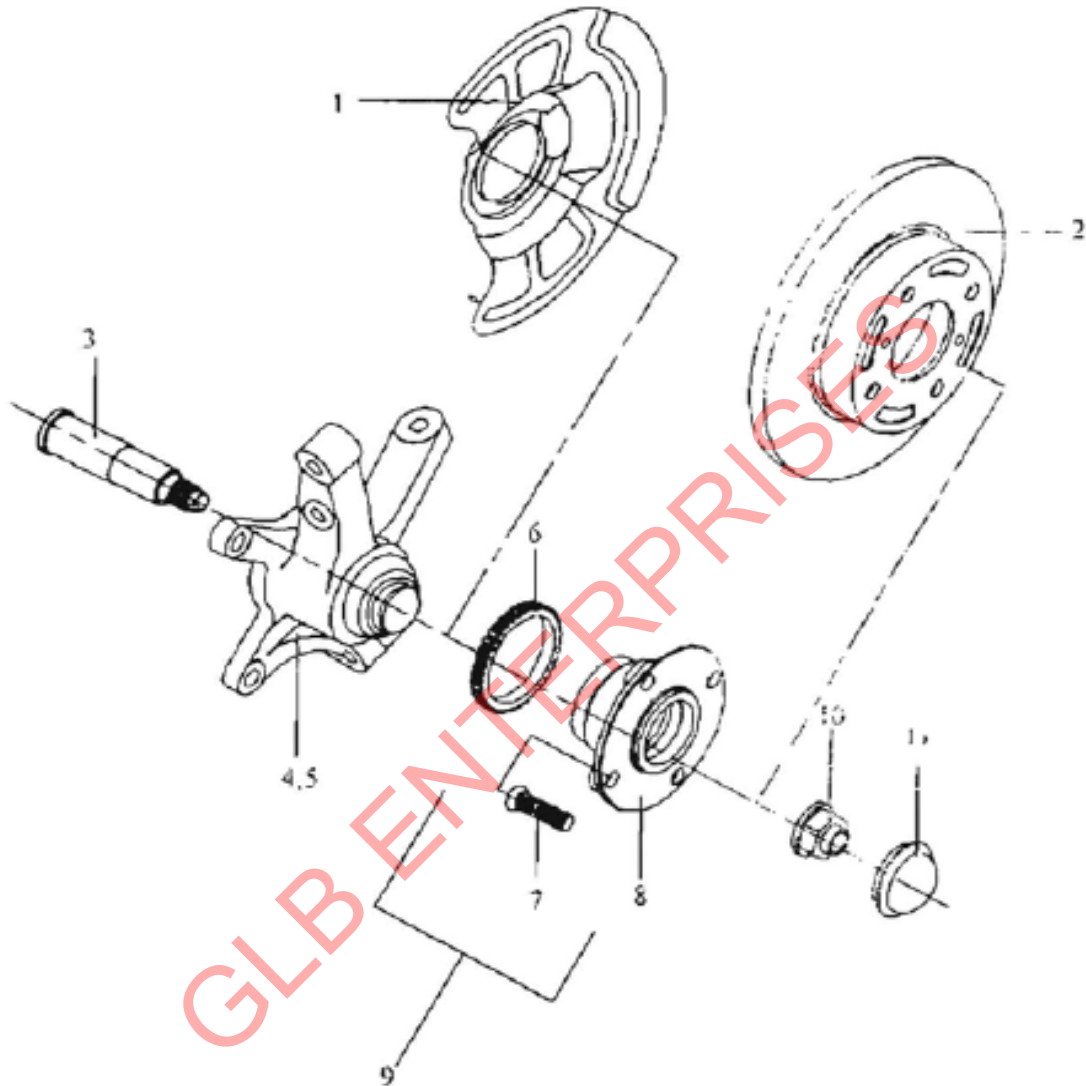


FIGURE 59 FRONT HUB & KNUCKE ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DUST SHIELD	AC35010011	2	
2	BRAKE ROTOR	AC35010007	2	
3	FRONT AXLE	AC35010010	2	
4	KNUCKLE LH	AC35010003	1	CBS
		AC35010016	1	ABS
5	KNUCKLE RH	AC35010004	1	CBX
		AC35010017	1	ABS
6	ROTOR	AC35010115	2	ABS
7	BOLT	Q/2A-CJ-404D	8	
8	FRONT HUB	AC35010103	2	
9	FRONT HUB ASM	AC35010008	1	CBS
		AC35010018	1	ABS
10	AXLE NUT	AC35010012	2	
11	DUST CAP	AC35010009	2	

GLB ENTERPRISES

FIGURE 60 BRAKE CALIPER

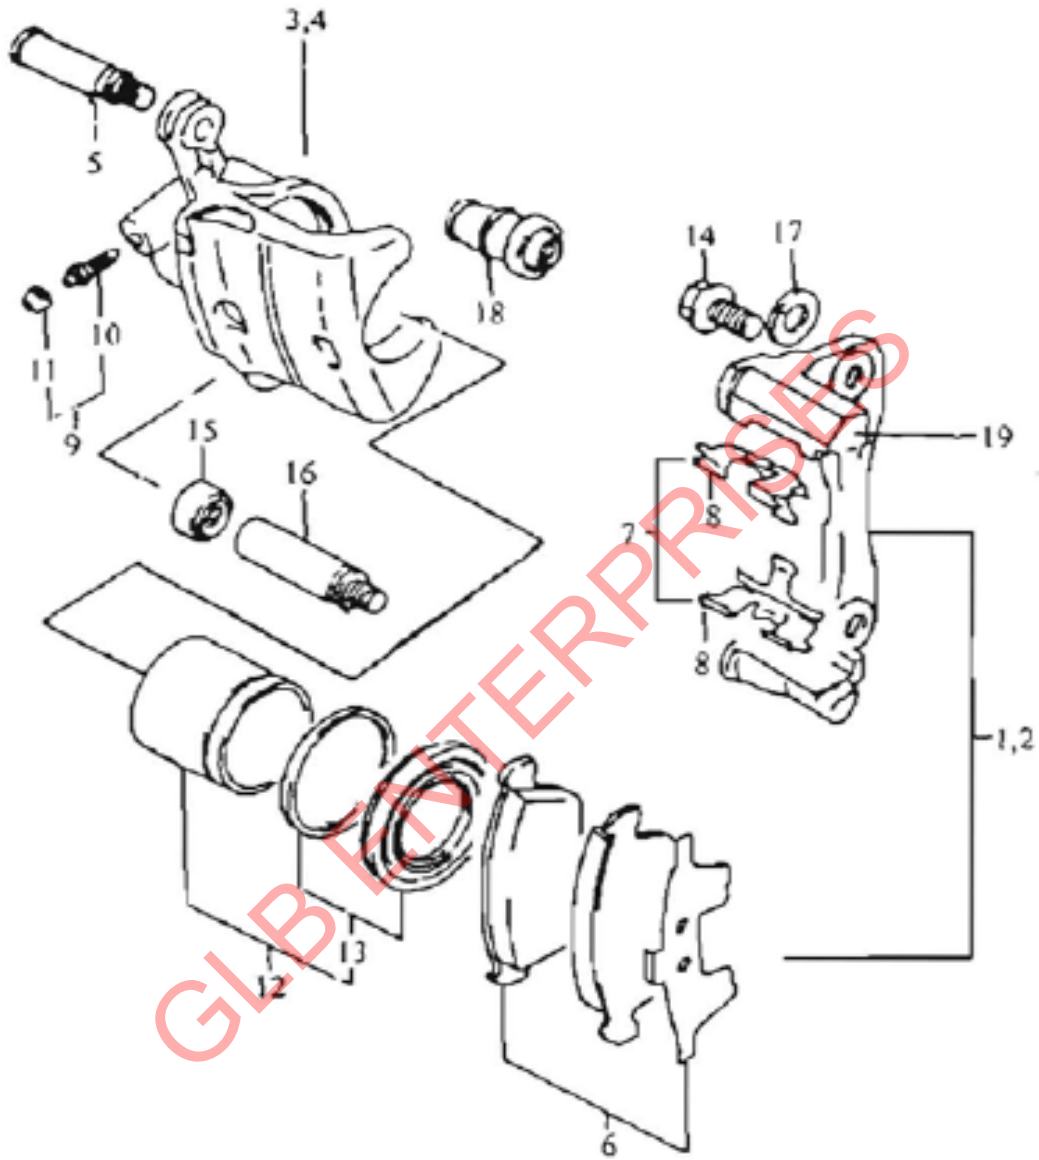


FIGURE 60 BRAKE CALIPER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE CALIPER LH	AC35010005	1	
2	BRAKE CALIPER LH	AC35010006	1	
6	BRAKE PAD SET	AC35010113	2	

GLB ENTERPRISES

FIGURE 61 BRAKE CALIPER (MANDO)

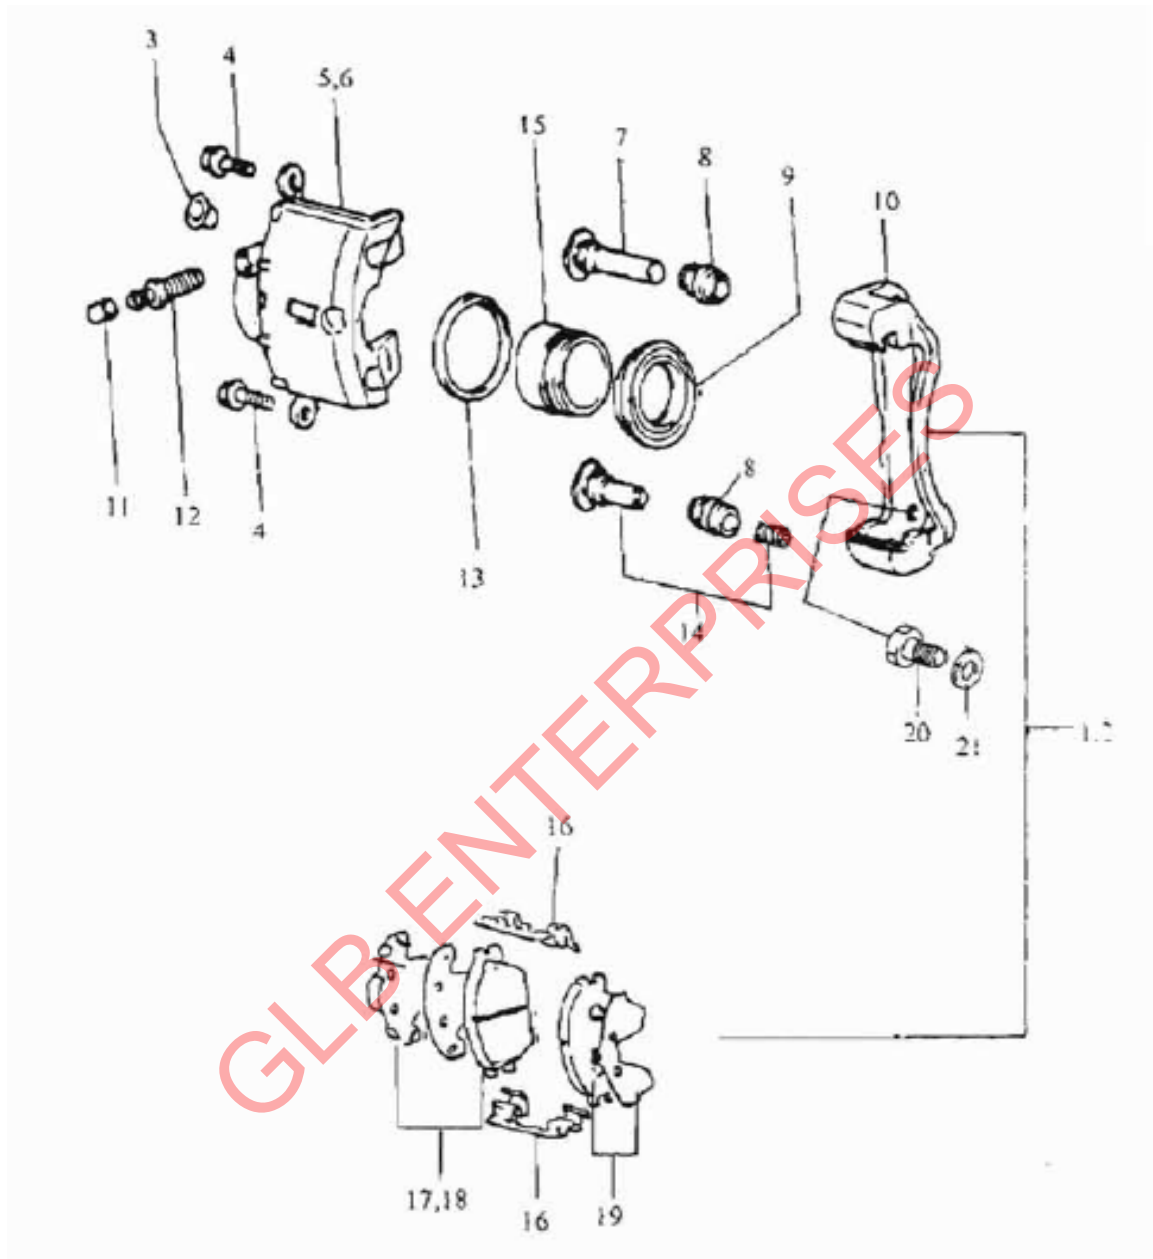


FIGURE 61 BRAKE CALIPER (MANDO)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE CALIPER LH	AC35010005	1	
2	BRAKE CALIPER RH	AC35010006	1	
17	BRAKE PAD INNER LH	AC35010305	2	
18	BRAKE PAD INNER RH	AC35010306	2	
19	BRAKE PAD OUTER	AC35010311	2	

GLB ENTERPRISES

FIGURE 62 REAR BRAKE ASM (DRUM)

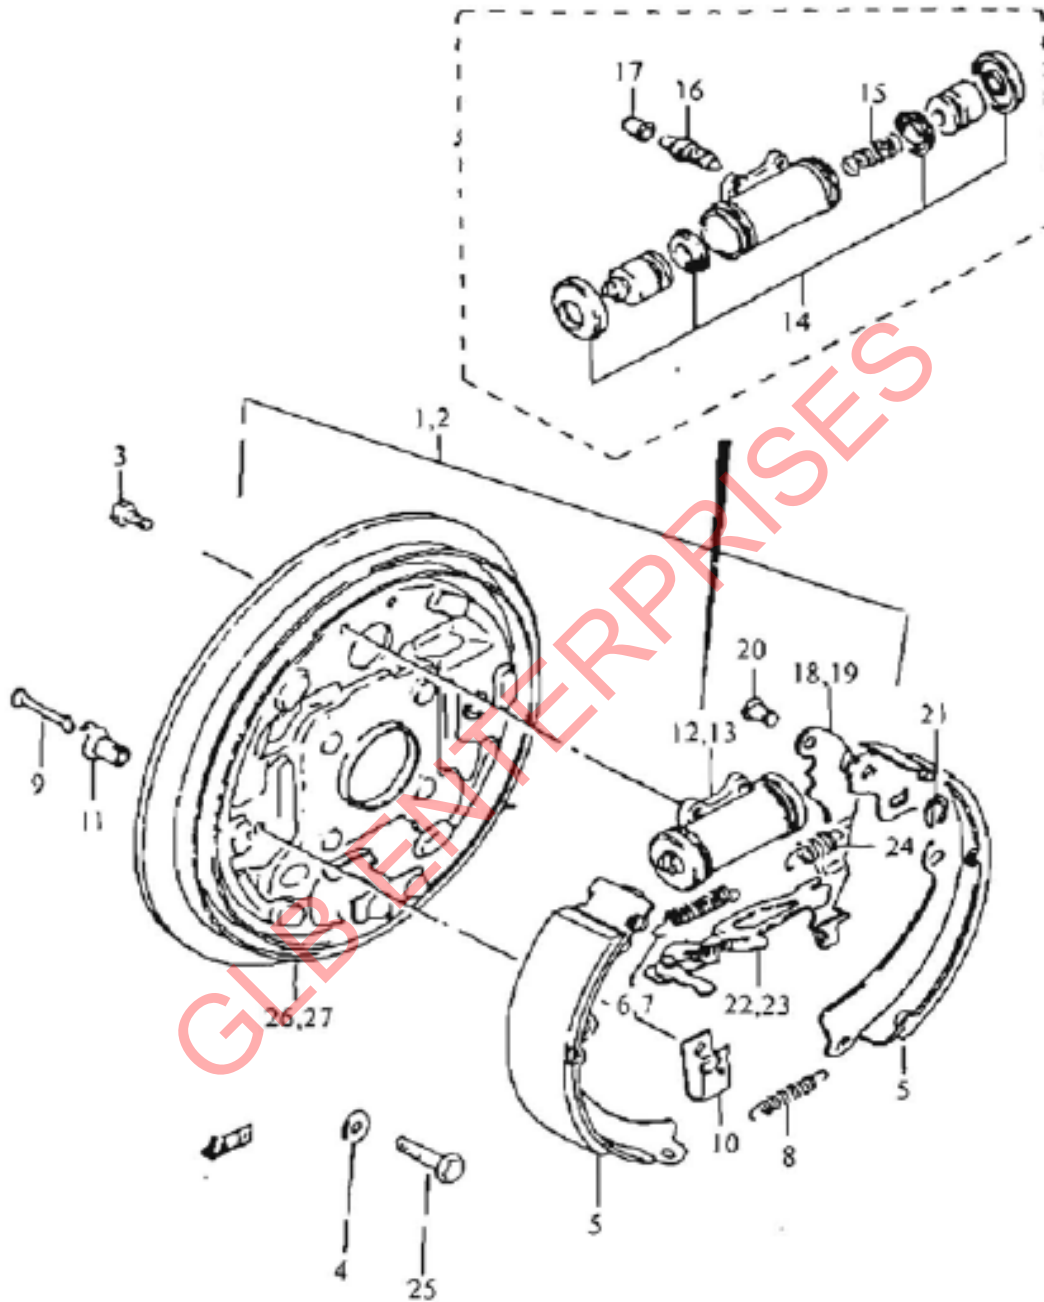


FIGURE 62 REAR BRAKE ASM (DRUM)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE ASM LH	AC35020001	1	
2	REAR BRAKE ASM RH	AC35020002	1	TYPE "O"
		AC35020004	1	TYPE "X"
3	BOLT	Q1860612	4	
4	WASHER	Q40308	8	
5	BRAKE SHOE SET	AC35020101	1	
6	BRAKE SHOE RETURN SPRING UPPER LH	AC35020102	1	
7	BRAKE SHOE RETURN SPRING UPPER RH	AC35020103	1	
8	BRAKE SHOE RETURN SPRING LOWER	AC35020104	2	
9	BRAKE SHOE PIN	AC35020105	4	
10	BRAKE SHOE HOLD- DOWN	AC35020106	4	
11	STRUT SHOE HOLD DOWN LOWER	AC35020107	4	
12	BRAKE CYLINDER LH	AC35020108	1	TYPE "O", TYPE "X"
13	BRAKE CYLINDER RH	AC35020109	1	TYPE "O", TYPE "X"
18	PARKING BRAKE LEVER LH	AC35020114	1	
19	PARKING BRAKE LEVER RH	AC35020115	1	
20	PARKING LEVER PIVOT	AC35020116	2	
21	C-WASHER	AC35020117	2	
22	AUTOMATIC ADJUSTOR LH	AC35020118	1	
23	AUTOMATIC ADJUSTOR RH	AC35020119	1	
24	STRETCH SPRING	AC35020120	2	
25	BOLT	Q150B0825-6G	8	
26	REAR BRAKE PLATE ASM LH	AC35020121	1	
27	REAR BRAKE PLATE ASM RH	AC35020122	1	

FIGURE 63 REAR BRAKE ASM (DRUM-MANDO)

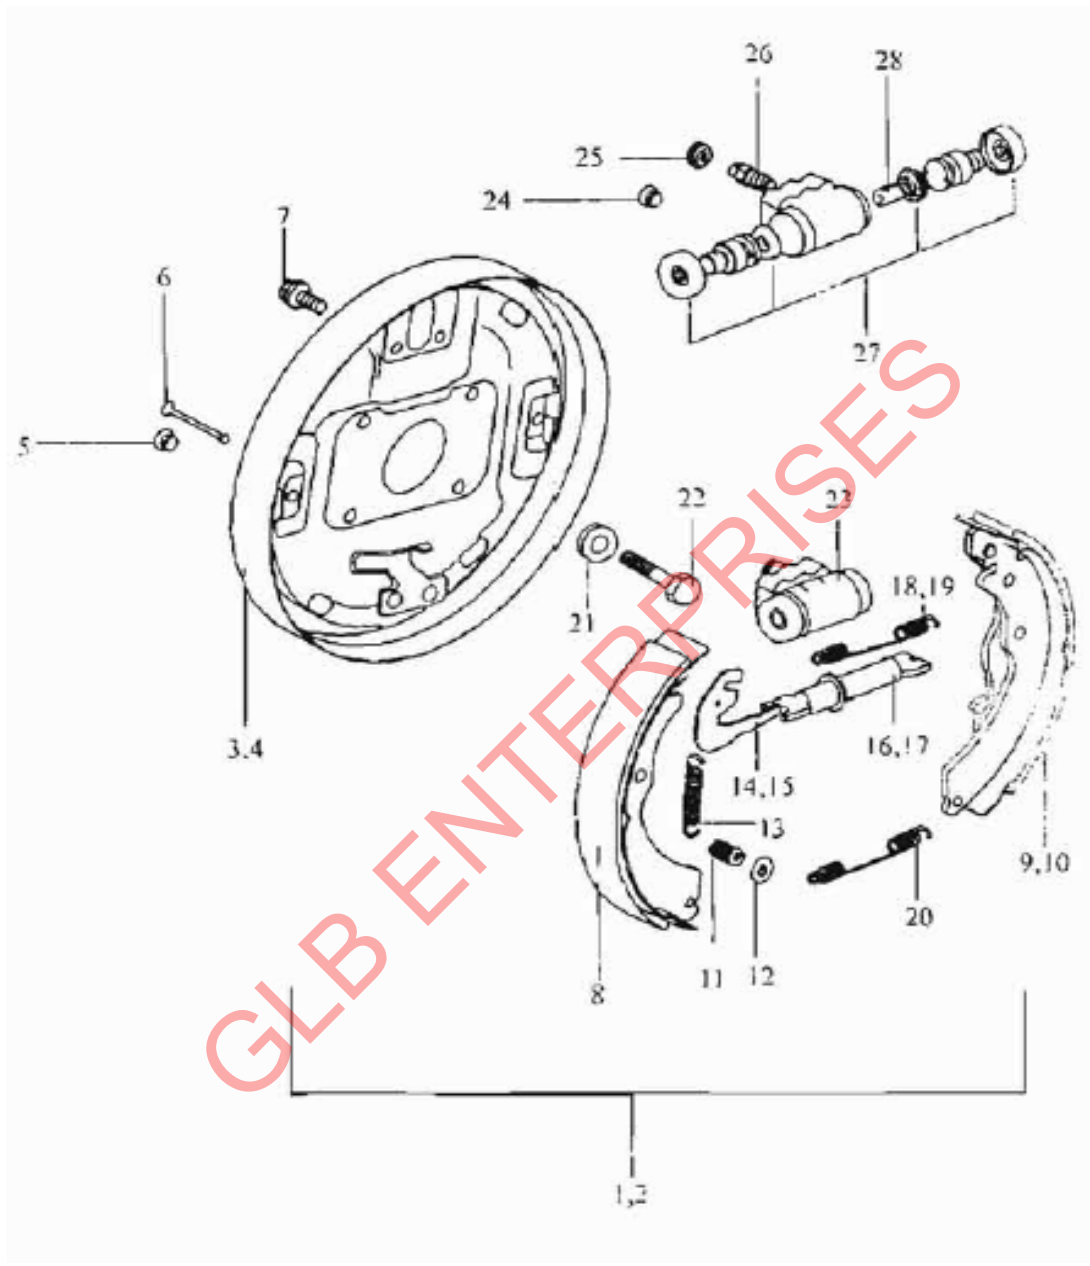


FIGURE 63 REAR BRAKE ASM (DRUM-MANDO)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE ASM LH	AC35020001	1	MANDO, TYPE "X"
2	REAR BRAKE ASM RH	AC35020004	1	
	REAR BRAKE PLATE			
3	ASM LH	AC35020301	1	
	REAR BRAKE PLATE			
4	ASM RH	AC35020302	1	
5	PLUG	AB35020311	2	
6	BRAKE SHOE PIN	AC35020336	4	
7	BOLT	AB35020322	4	
8	BRAKE SHOE SET	AC35020319	1	
	BRAKE SHOE HOLD			
11	DOWN SPRING	AC35020337	4	
12	HOLD-DOWN CUP	AB35020351	4	
13	ADJUSTING SPRING	AC35020334	2	
14	LEVER PAW LH	AC35020325	1	
15	LEVER PAW RH	AC35020326	1	
	AUTOMATIC ADUSTOR			
16	LH	AC35020327	1	
	AUTOMATIC ADUSTOR			
17	RH	AC35020328	1	
	BRAKE SHOE RETURN			
18	SPRING UPPER LH	AC35020338	1	
	BRAKE SHOE RETURN			
19	SPRING UPPER RH	AC35020339	1	
	BRAKE SHOE RETURN			
20	SPRING LOWER	AC35020335	2	
21	WASHER	Q40308	8	
22	BOLT	Q150B0825-6G	8	
	BRAKE CYLINDER			
23	LH/RH	AC35020309	2	TYPE "X"

FIGURE 64 REAR AXLE HALF SHAFT

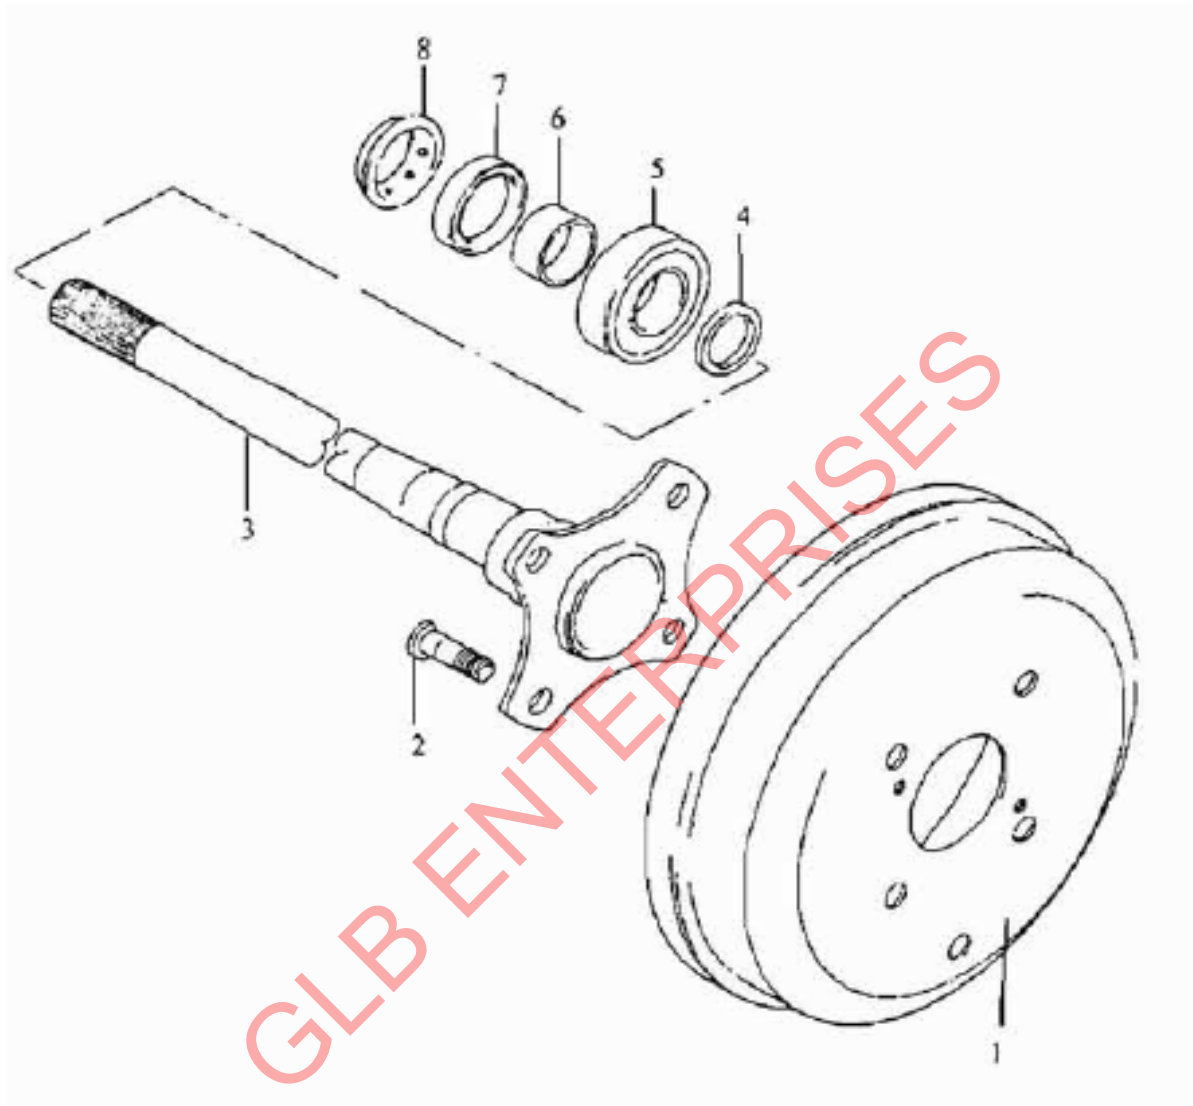


FIGURE 64 REAR AXLE HALF SHAFT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE DRUM	AC35020003	2	
2	BOLT	AC24000043	8	
3	HALF SHAFT	AC24000044	2	
	AXLE SHAFT RETAINER			
4	RING	AC24000045	2	
5	AXLE BEARING BEARING RETAINER	6207-RS/P6	2	GB/T276-94-6207
6	RING	AC24000046	2	
7	REAR AXLE SEAL	AC24000047	2	2401060-01
8	OIL SEAL PROTECTOR	AC24000048	2	

GLB ENTERPRISES

FIGURE 65 REAR AXLE HOUSING & DIFFERENTIAL

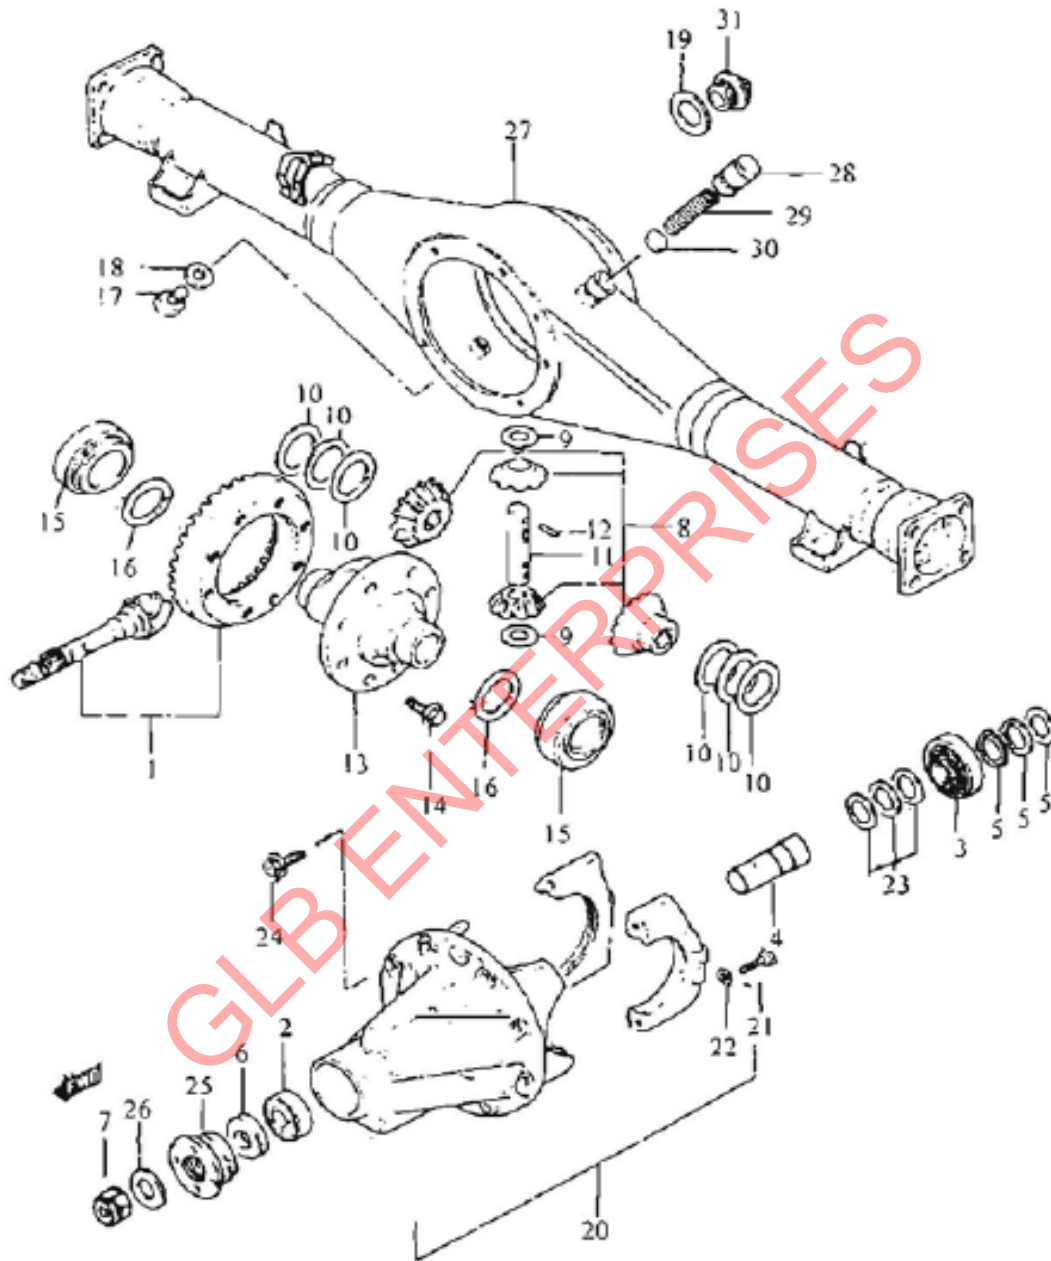


FIGURE 65 REAR AXLE HOUSING & DIFFERENTIAL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	RING & PINION ASM	AC24000006	1	
2	BEARING	30305X2B/P6	2	
3	BEARING	30306X2B/P6	1	
4	DRIVE BEVEL PINION SPACER	AC24000007	1	
5	SHIM	AC24000008-0011	A/R	
6	OIL SEAL	AC24000012	1	
7	NUT	AC24000013	1	
8	PINION & GEAR ASM	AC24000014	1	
9	THRUST WASHER	AC24000015	2	
10	SHIM	AC24000016-0019	A/R	
11	DIFFERNETIAL SIDE PINION SHAFT	AC24000020	1	
12	ROLL PIN	GB879-86 5X35	1	
13	DIFFERNETIAL CASE	AC24000021	1	
14	BOLT	AC24000022	8	
15	BEARING	32008X1WC	2	
16	SHIM	AC24000023-0026	A/R	
17	DRAIN PLUG	AC24000027	1	
18	DRAIN PLUG GASKET	AC24000028	1	
19	FILLER GASKET	AC24000029	1	
20	DIFFERNETIAL CARRIER & CAP	AC24000030	1	
21	BOLT	GB5782-86 M10X50-8.8	4	
22	GASKET	GB859-87-10	4	
23	SHIM	AC24000031-0034	A/R	
24	BOLT	AC24000035	8	
25	UNIVERSAL JOINT FLANGE	AC24000036	1	
26	GASKER	AC24000037	1	
27	RER AXLE HOUSING	AC24000037	1	
		AC24000038	1	ABS
28	BREATHER CAP	AC24000039	1	
29	BREATHER SPRING	AC24000040	1	
30	BREATHER VALVE	AC24000041	1	
31	FILLER PLUG	AC24000042	1	
N/S	DIFFERENTIAL ASM	AC24000062	1	

FIGURE 66 BRAKE PIPE (TYPE II)

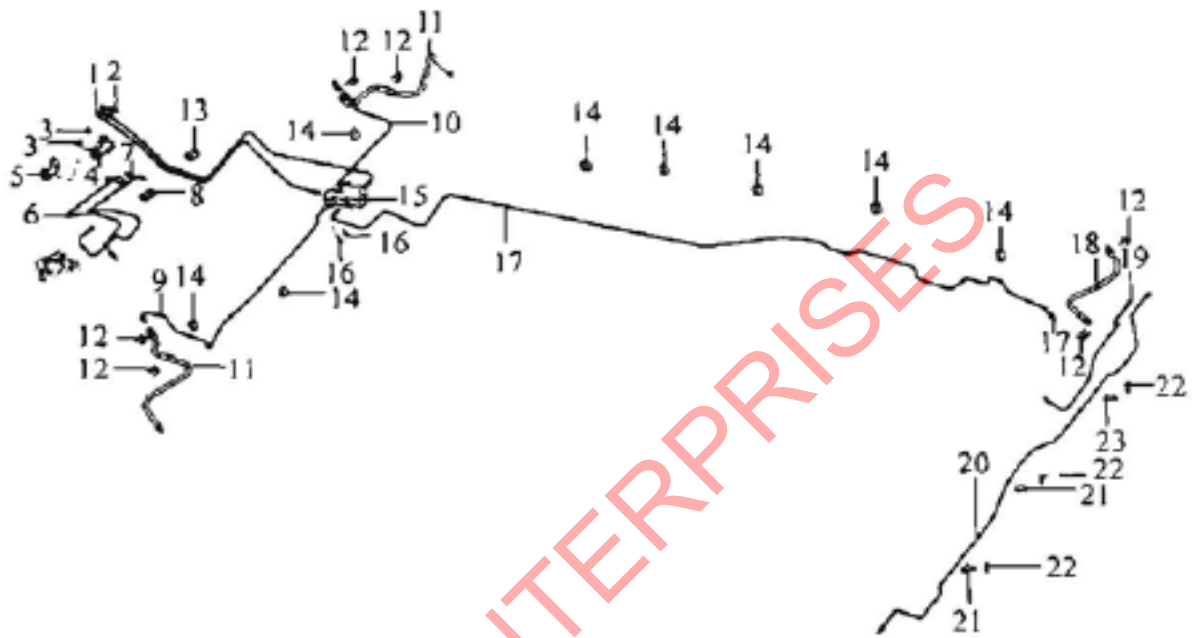


FIGURE 66 BRAKE PIPE (TYPE II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE	AC35060007	1	TYPE II BEFORE OCT.2003
2	BRAKE PIPE	AC35060008	1	
3	NUT	Q/2A-CJ-117-M6-6H	2	
4	FOUR CHANNEL CONNECTOR	AC35060001	1	
5	MAT. CONNECTOR ASM	AC35060002	1	
6	BRAKE PIPE	AC35060005	1	
7	BRAKE PIPE	AC35060006	1	
8	DOUBLE PIPE CLIP	HFJ35060007EA	1	
9	BRAKE PIPE	AC35060010	1	
10	BRAKE PIPE	AC35010009	1	
11	FRONT BRAKE FLEX HOSE	AC35060003	2	
12	RING	Q/2A-CJ-425	6	
13	DOUBLE PIPE CLIP	AC35060036	1	
14	SINGLE PIPE CLIP	HFJ3506008EA	8	
15	PROPORTIONING VALVE	AC35230001	1	
16	BOLT	Q/2A-CJ-010-M6X35-8.8	2	
17	BRAKE PIPE	AC35060011	1	
18	REAR BRAKE FLEX HOSE	AC35060004	2	
19	BRAKE PIPE	AC35060013	1	
20	BRAKE PIPE	AC35060014	1	
21	CLIP	HFJ3503040CA	2	
22	SCREW	Q/2A-CJ-47A-ST6.3X13	3	
23	CLIP	HFJ3503050CA	1	

FIGURE 67 BRAKE PIPE (TYPE X)

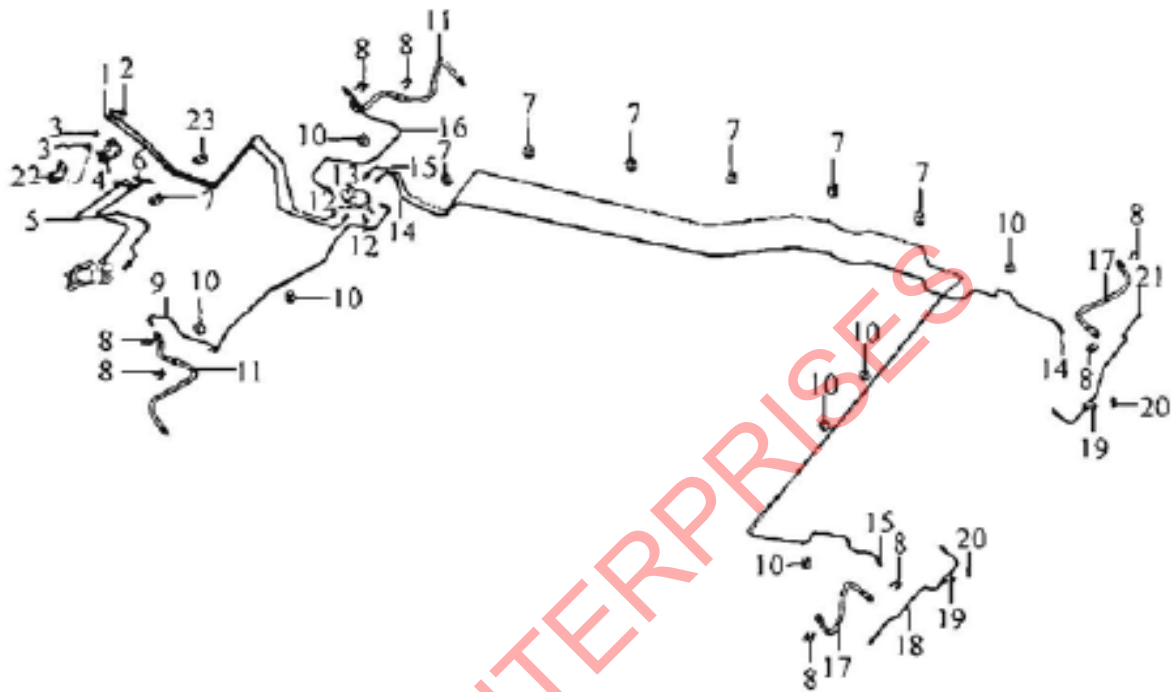


FIGURE 67 BRAKE PIPE (TYPE X)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE	AC35060030	1	TYPE X SINCE OCT.2003
2	BRAKE PIPE	AC35060029	1	
3	NUT	Q/2A-CJ-117-M6-6H	2	
4	FOUR CHANNEL CONNECTOR	AC35060001	1	
5	BRAKE PIPE	AC35060027	1	
6	BRAKE PIPE	AC35060028	1	
7	DOUBLE PIPE CLIP	HFJ3506007EA	7	
8	RING	Q/2A-CJ-425	8	
9	BRAKE PIPE	AC35060031	1	
10	SINGLE PIPE CLIP	HFJ3506008EA	7	
11	FRONT BRAKE HOSE	AC35060003	2	
12	BOLT	Q/2A-CJ-101-M6X35-8.8	2	
13	SIX CHANNEL CONNECTOR	AC35060035	1	
14	BRAKE PIPE	AC35060033	1	
14	BRAKE PIPE	AC35060033	1	
15	BRAKE PIPE	AC35060034	1	
16	BRAKE PIPE	AC35060032	1	
17	REAR BRAKE HOSE	AC35060004	2	
18	BRAKE PIPE	AC35060017	1	
19	CLIP	HFJ3503040CA	2	
20	SCREW	Q/2A-CJ-47A-ST6-3X13	2	
21	BRAKE PIPE	AC35060013	1	
22	MAT. CONNECTOR ASM	AC35060002	1	
23	DOUBLE PIPE CLIP	AC35060036	1	

FIGURE 68 BRAKE PIPE (TYPE X W/ABS)

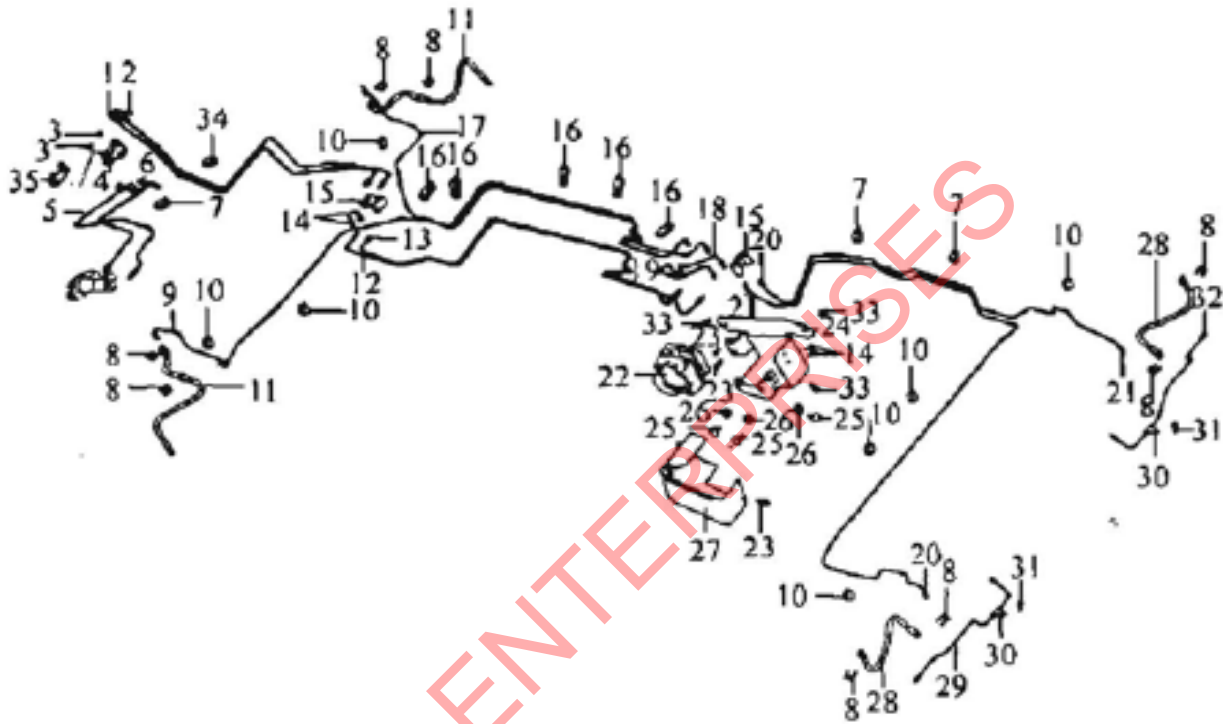


FIGURE 68 BRAKE PIPE (TYPE X W/ABS)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE	AC35060016	1	
2	BRAKE PIPE	AC35060012	1	
3	NUT	Q/2A-CJ-117-M6-6H	1	
4	FOUR CHANNEL CONNECTOR	AC35060001	1	
5	BRAKE PIPE	AC35060027	1	
6	BRAKE PIPE	AC35060028	1	
7	DOUBLE PIPE CLIP	HFJ3506007EA	1	
8	RING	Q/2A-CJ-425	1	
9	BRAKE PIPE	AC35060018	1	
10	SINGLE PIPE CLIP	HFJ3506008EA	1	
11	FRONT BRAKE HOSE	AC35060003	1	
12	BRAKE PIPE	AC35060020	1	
13	BRAKE PIPE	AC35060021	1	
14	BOLT	Q/2A-CJ-101-M6X35-8.8	1	
15	FOUR CHANNEL CONNECTOR	AB35060003	2	
16	FOUR PIPE CLIP	AC35060026	1	
17	BRAKE PIPE	AC35060019	1	
18	BRAKE PIPE	AC35060022	1	
19	BRAKE PIPE	AC35060023	1	
20	BRAKE PIPE	AC35060024	1	
21	BRAKE PIPE	AC35060025	1	
22	HYDRAULIC CONTROL UNIT ASM	AC35060005	1	
23	BOLT	Q/2A-CJ-101-M6X25-8.8	1	
24	ABS BRACKET	AC3550006	1	
25	BOLT	Q/2A-CJ-447-M6X25	1	
26	RUBBER BLOCK ABSORBER	AA35500014	1	
27	DUST BOOT (ABS)	AC35500007	1	
28	REAR BRAKE HOSE	AC35060004	1	
29	BRAKE PIPE	AC35060017	1	
30	CLIP	HFJ3503040CA	1	
31	SCREW	Q/2A-CJ-47A-ST6.3X13	1	
32	BRAKE PIPE	AC35060013	1	
33	BOLT	Q/2A-CJ-101-M8X25-8.8	1	
34	DOUBLE PIPE CLIP	AC35060036	1	
35	MAT. CONNECTOR ASM	AC35060002	1	

FIGURE 69 WHEEL SPEED SENSOR (FRONT & REAR)

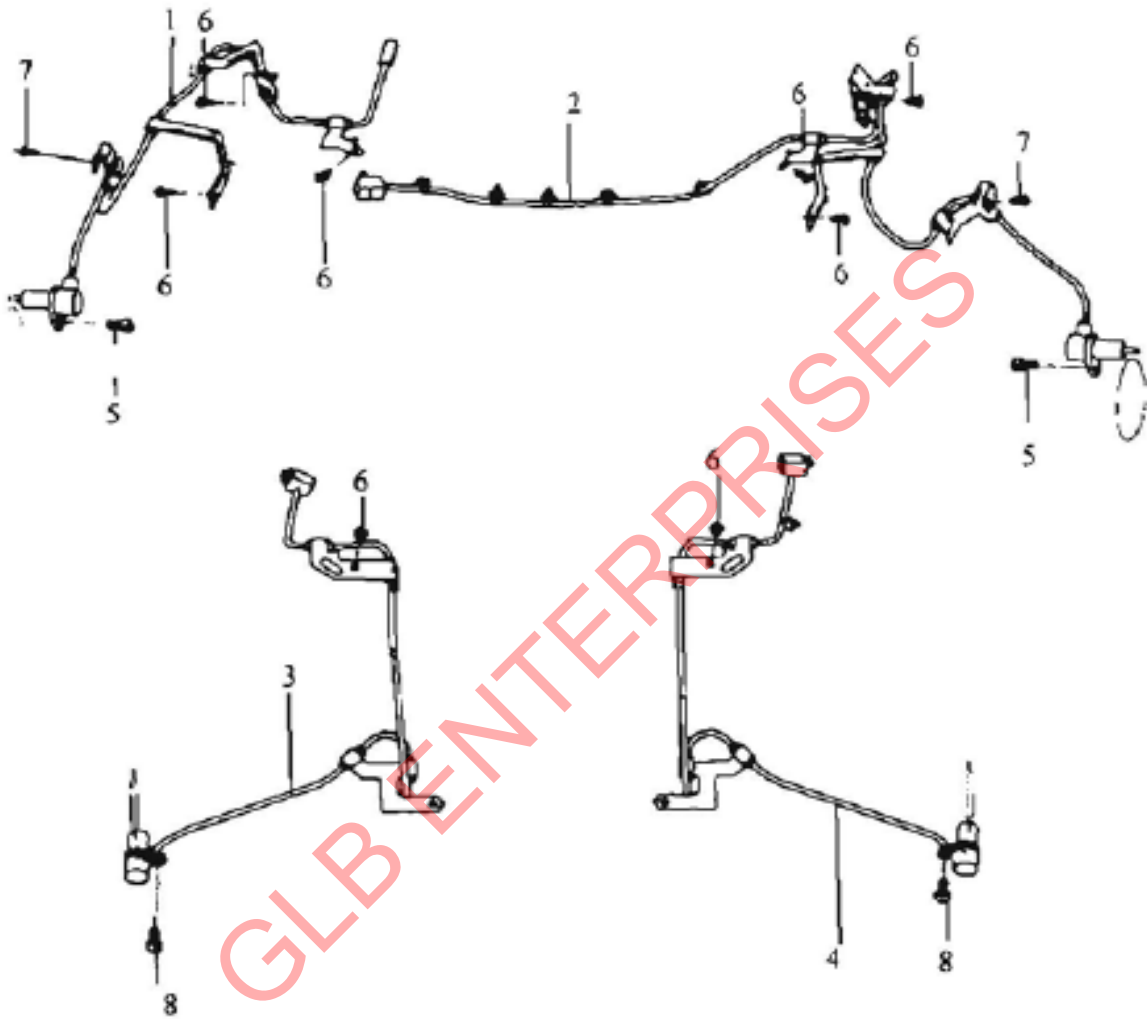


FIGURE 69 WHEEL SPEED SENSOR (FRONT & REAR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WHEEL SPEED SENSOR FRONT LH	AC35500001	1	
2	WHEEL SPEED SENSOR FRONT RH	AC35500002	1	
3	WHEEL SPEED SENSOR REAR LH	AC35500003	1	
4	WHEEL SPEED SENSOR REAR RH	AC35500004	1	
5	BOLT	Q/2A-CJ-174-M8X16-8.8	2	
6	SCREW	Q271B6313	8	
7	SCREW	Q/2A-CJ-26-M6X10	2	
8	BOLT	Q/2A-CJ-278-M6X16-8.8	2	

GLB ENTERPRISES

The diagram illustrates the structural components of a cable-stayed bridge. The main span is supported by a central pylon (13) and two side pylons (8). The bridge deck is supported by a series of cables (4) that connect the pylon to the deck. The deck is also supported by a series of vertical supports (5) and a central support (10). The bridge is shown in a perspective view, with the deck curving upwards towards the pylon. The diagram is labeled with numbers 4 through 15, indicating the various parts of the bridge structure.

FIGURE 70 PARKING BRAKE SYSTEM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PARKING BRAKE LEVER	AC35080001	1	
2	PARKING BRAKE CABLE #1	AC35080002	1	
3	HOLDER NUT	AA35080207	1	
4	ADJUSTER CABLE	AA35080208	1	
5	BOLT	Q/2A-CJ-274-M8X20	6	
6	CLIP	AC35080006	1	
7	RETURN SPRING	AC35080005	1	
8	PARKING BRAKE CABLE REAR RLH	AC35080003	1	
9	PARKING BRAKE CABLE REAR RRH	AC35080004	1	
10	CABLE CLIP	AC35080401	1	
11	CLIP	Q/2A-CJ-421	2	
12	NUT	Q340B06	2	
13	BAND CLIP	HFJ3508005CA	2	
14	WASHER	Q40206	2	
15	BOLT	Q/2A-CJ-21-M6X25-8.8	2	

GLB ENTERPRISES

FIGURE 71 MASTER CYLINDER

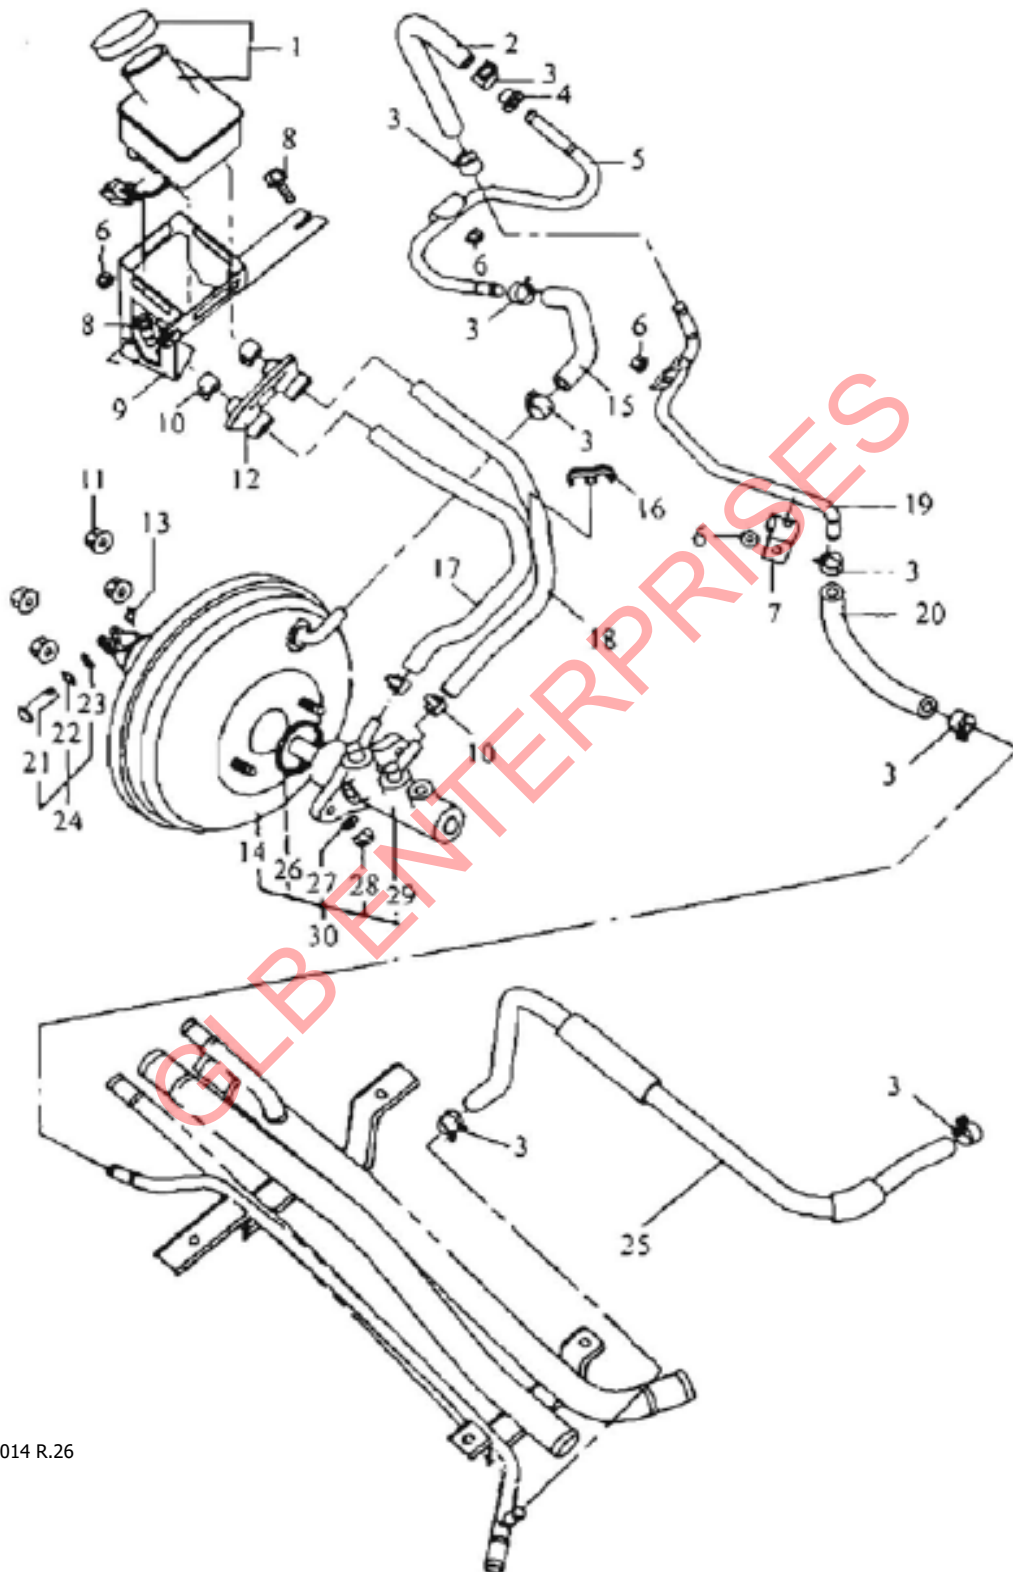


FIGURE 71 MASTER CYLINDER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE RESERVOIR	AC35030001	1	
2	VACUUM HOSE	AC35030008	1	
3	CLAMP	Q/2A-CJ-339B-15	8	
	VACUUM PIPE			
4	GROMMET	AC35030006	1	
5	VACUUM PIPE	AC35030011	1	
6	NUT	Q/2A-CJ-117-M6	4	
	NO.1 VACUUM PIPE			
7	ASM	HFJ3503070CA	1	
8	BOLT	Q/2A-CJ-22-M6X16	2	
9	RESERVOIR BRACKET	AC35030002	1	
10	CLAMP	Q67216	4	
11	NUT	Q/2A-CJ-117-M8	4	
	RESERVOIR HOSE			
12	GROMMET	AC35030005	1	
13	PIN CLIP	AA35030008	1	
14	BRAKE BOOSTER	AC351001001	1	CBS
		AC35100102	1	TYPE II
15	VACUUM HOSE	AC35030007	1	
	RESERVOIR HOSE			
16	CLAMP	AC35030013	1	
17	RESERVOIR HOSE	AC35030003	1	
18	RESERVOIR HOSE	AC35030004	1	
19	VACUUM PIPE	AC35030012	1	
20	VACUUM HOSE	AC35030009	1	
21	PIN	AA35030009	1	
22	WASHER	AA35030011	1	
23	O-RING	AA35030010	1	
24	PIN ASM	AA35030007	1	
25	VACUUM HOSE	AC350300010	1	HFJ6370K
		AC35030015	1	UASE
26	O-RING SEAL	AC35050001	1	CBS
		AC35050012	1	TYPE II
27	WASHER	Q40308	1	
28	NUT	Q340B08	1	
29	MASTER CYLINDER	AC35050101	1	CBS, TYPE II
		AC35050102		ABS
		AC35050103		CBS
	MASTER CYLINDER			
30	W/BOOSTER	AC35050001	1	CBS
		AC35050002	1	ABS
		AC35050003	1	CBS

CBS IS USED UP TO OCT.1. 2003

FIGURE 72 TIRE & WHEEL

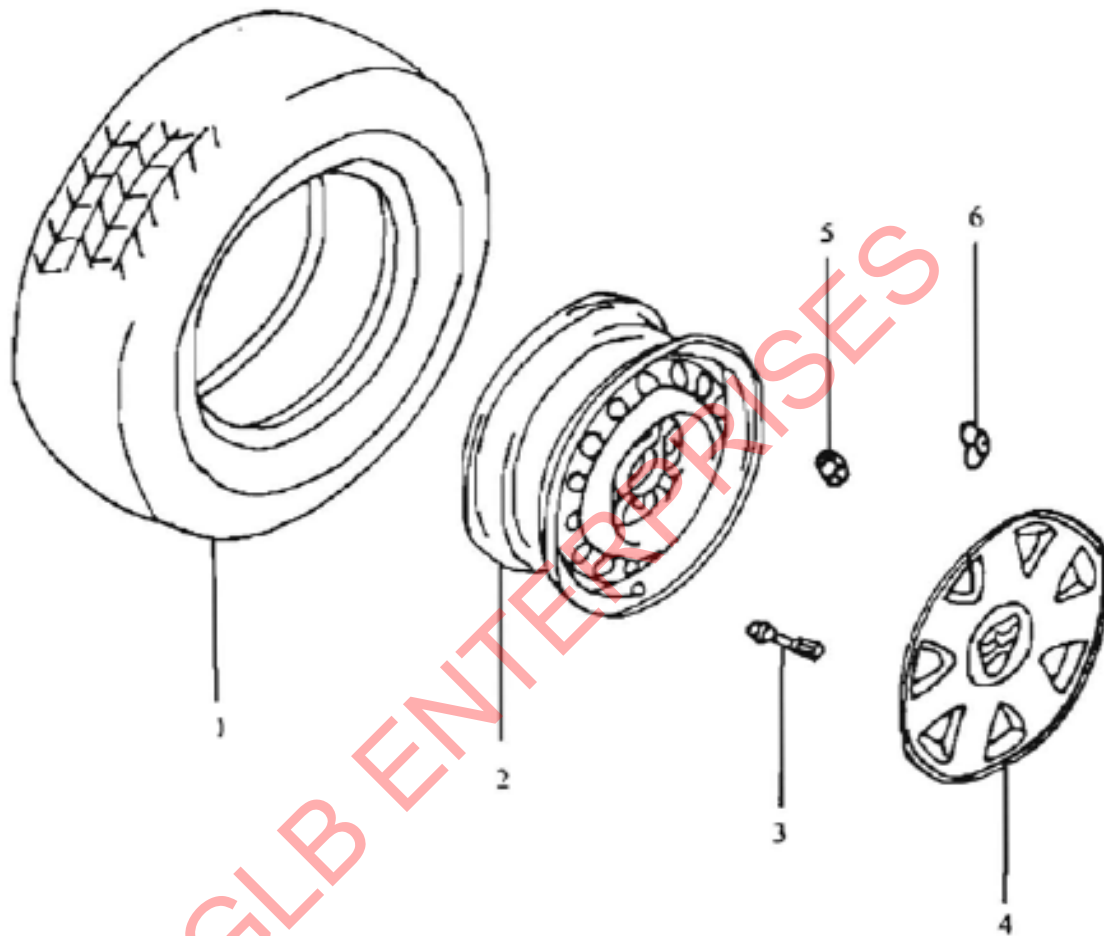


FIGURE 72 TIRE & WHEEL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TIRE	HFJ31060000DB	5	165/70 R13
2	WHEEL	AC31010002	5	
		AC31010006	5	ALUMINIUM
		AC31010003		STEEL & ALUMINIUM
3	VALVE STEM	HFJ3100100DA	5	
4	HUB CAP	AB31020001	4	
		AC31020002	4	
		AC31020001	4	
5	LUG NUT	Q/2A-CJ-159-M12X1.25	16	
6	BALANCE WEIGHT	AB31010003-0010	1	
		AC31010011-0018	1	

GLB ENTERPRISES

FIGURE 73 SPARE TIRE MOUNTING BRACKET (I)

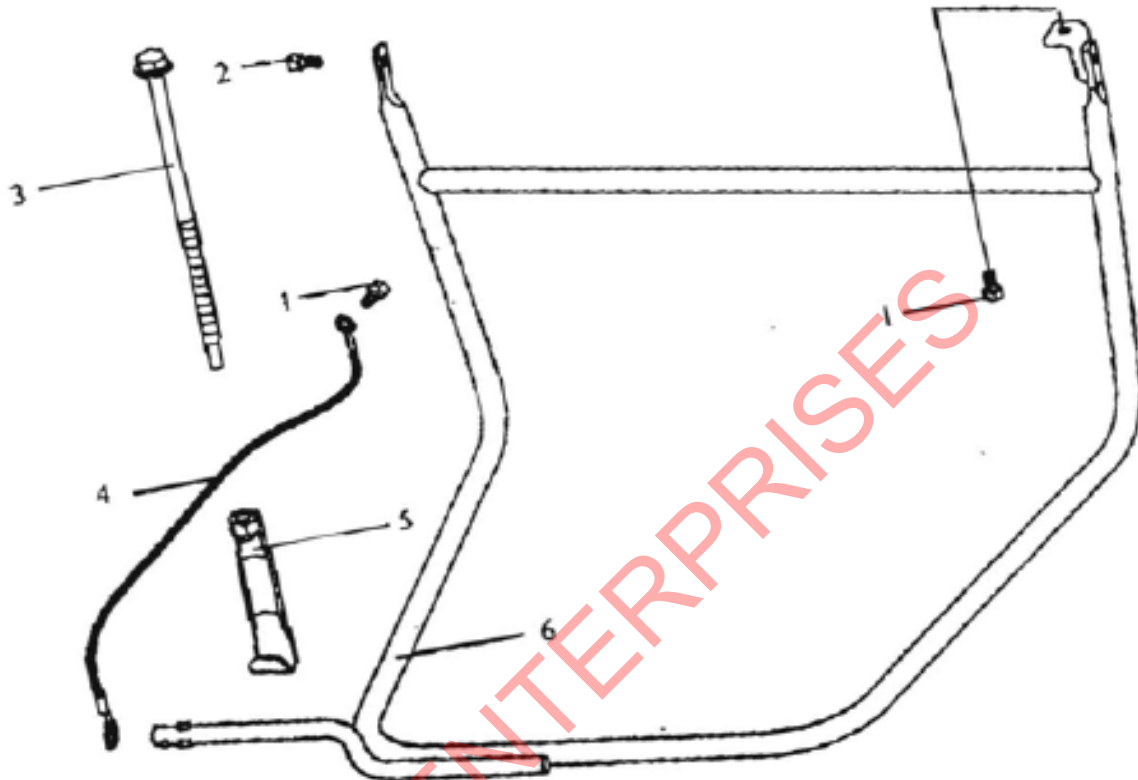


FIGURE 73 SPARE TIRE MOUNTING BRACKET (I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT	Q/2A-CJ-28A-M6X14	2	
	SPARE TIRE BOLT	HFJ3105005DB	5	
2	BOLT	Q/2A-CJ-63-M6X30	1	
3	SPARE TIRE BOLT	AC31050002	1	
	SPARE TIRE TIGHT			
4	WIRE	AC31050003	1	
5	POTHOOK	HFJ3105010CA	1	
	SPARE TIRE CARRIER			
6	BRACKET	AC31050001	1	

GLB ENTERPRISES

FIGURE 74 SPARE TIRE MOUNTING BRACKET (II)

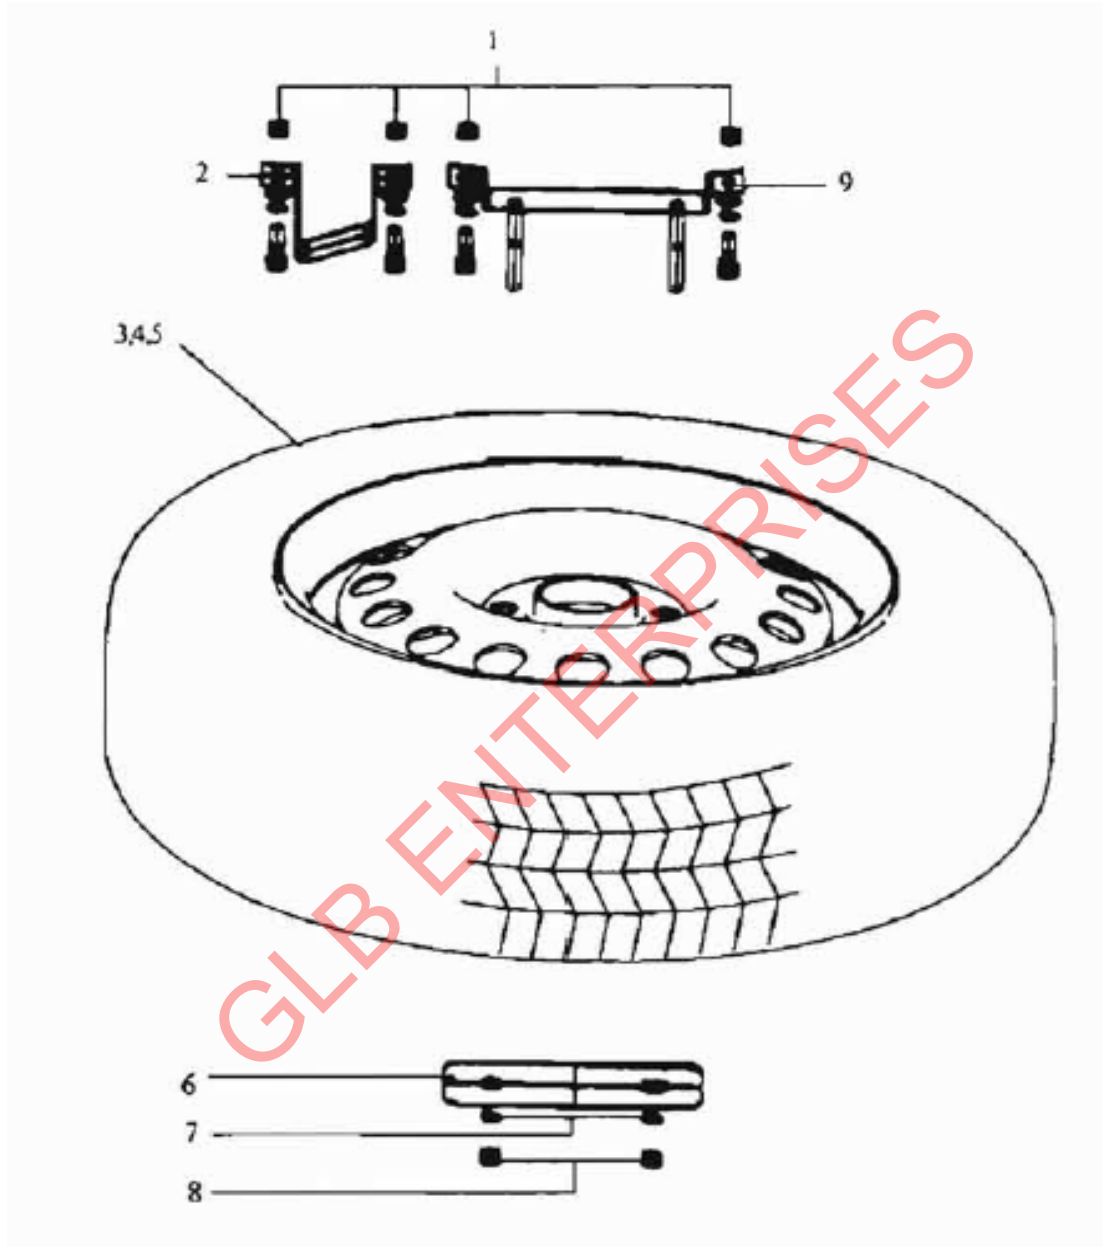


FIGURE 74 SPARE TIRE MOUNTING BRACKET (II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT & WASHER ASM	Q/2A-CJ-35-M8X18-8.8	4	
2	BRACKET STRUT SUPPORT	HFJ3105007DA	1	
3	WHEEL & TIRE ASM	AC31010001	1	
		AC31010004	1	
		AC31010005	1	
6	SPARE TIRE CARRIER PLATE	AC31050005	1	
7	WASHER	Q40410	2	
8	NUT	Q341C10	2	
9	SPARE TIRE CARRIER BRACKET	HFJ3105020DA	1	

GLB ENTERPRISES

FIGURE 75 PCV VALVE

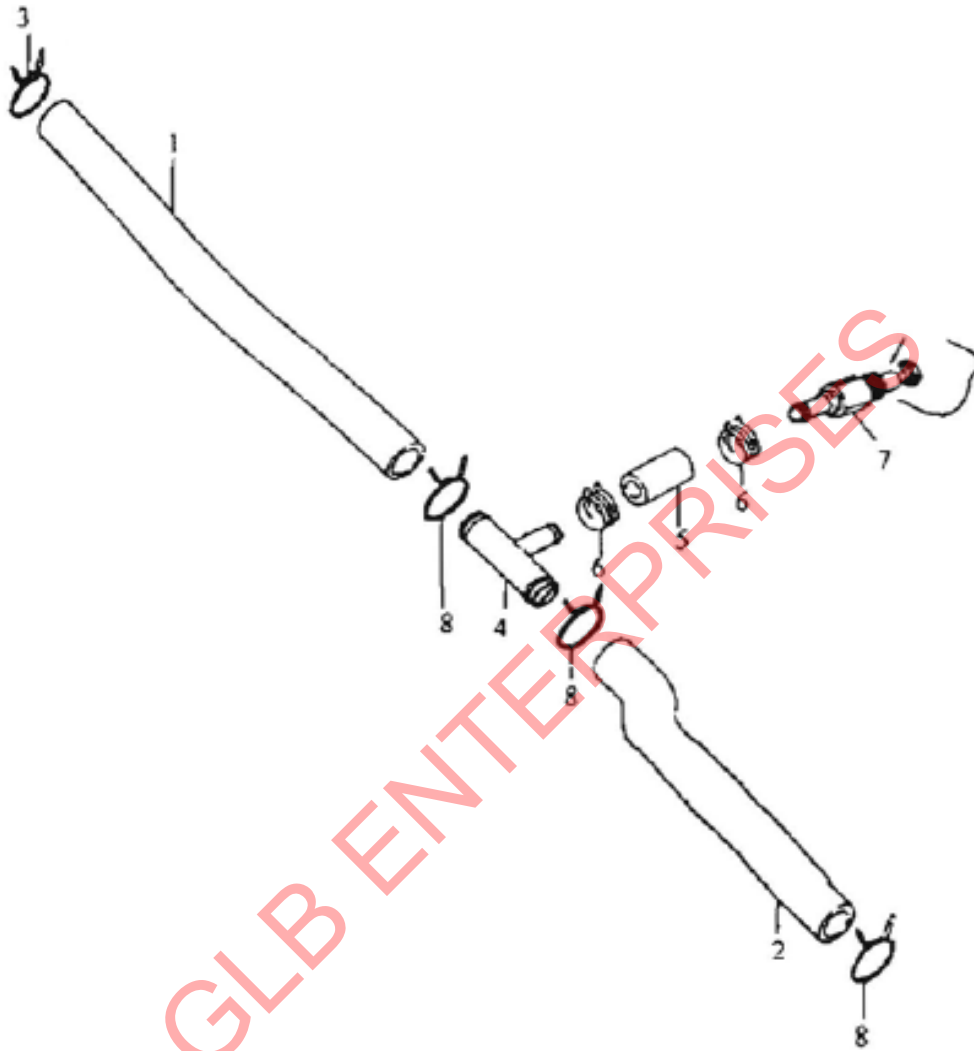


FIGURE 75 PCV VALVE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HOSE	465Q-1A/D-1000079	1	
		462-A1/D-1000079	1	DA462-1A
2	HOSE	465-1A/D-1000093	1	
		465Q-1000079-01	1	DA462-1A
3	CLAMP	462-1000080	3	
		462-1000096	3	DA462-1A
4	THREE-WAY PIPE	465Q-1000820	1	DA462-1A
5	HOSE	465Q-1A/D-1000094	1	
		462-1A/D-100094	1	DA462-1A
6	CLAMP	465Q-1000092	2	
7	PCV VALVE	465Q-1014800	1	
8	CLAMP	462-1000096	1	
		462-1000080	1	DA462-1A

GLB ENTERPRISES

FIGURE 76 DRIVER TOOL & MANUAL JACK

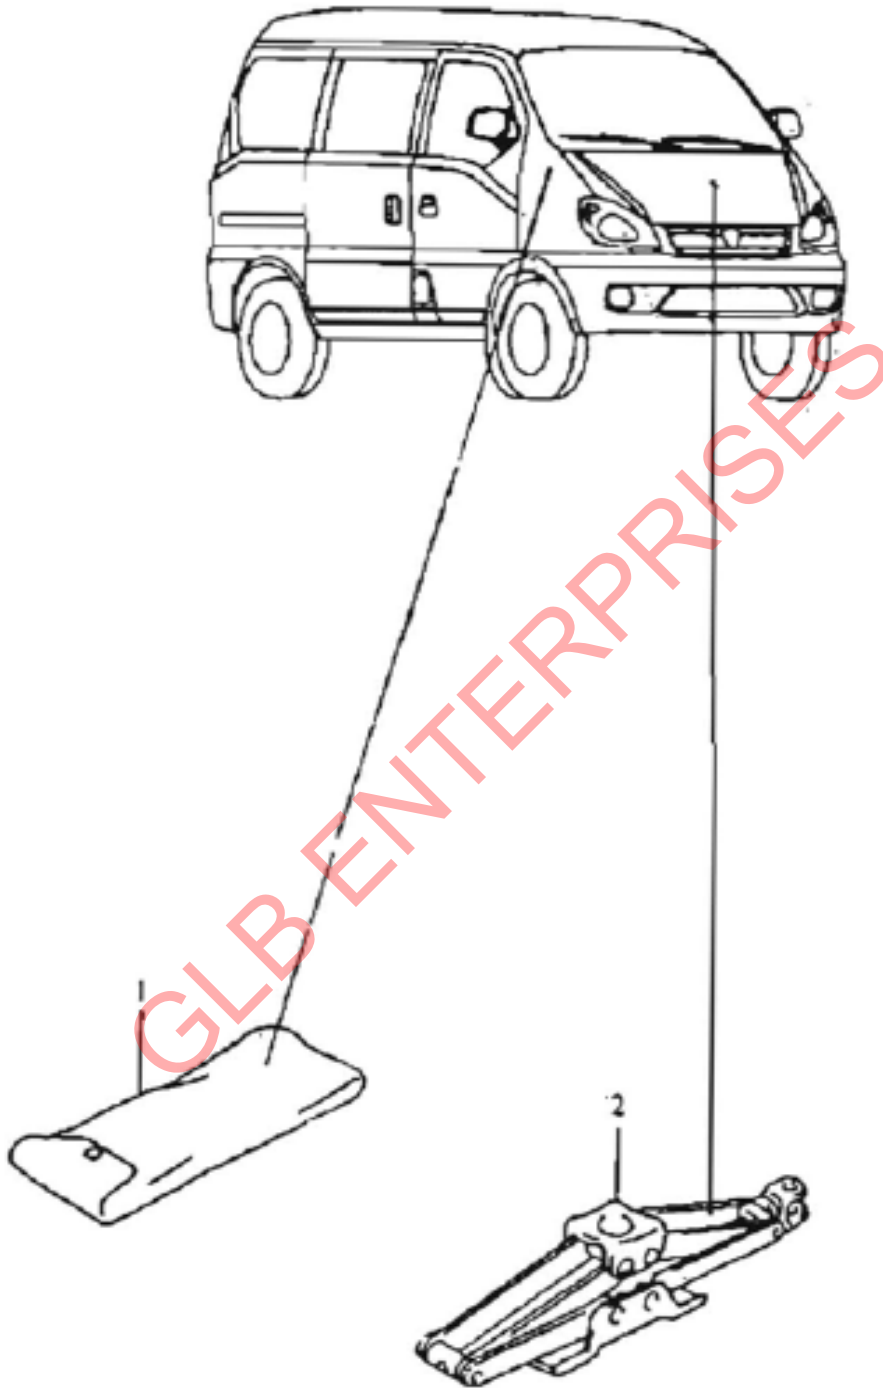


FIGURE 76 DRIVER TOOL & MANUAL JACK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TOOK KIT	3901AC010	1	
2	MANUAL JACK	AC39130001	1	

GLB ENTERPRISES

FIGURE 77 ECU (DELPHI)


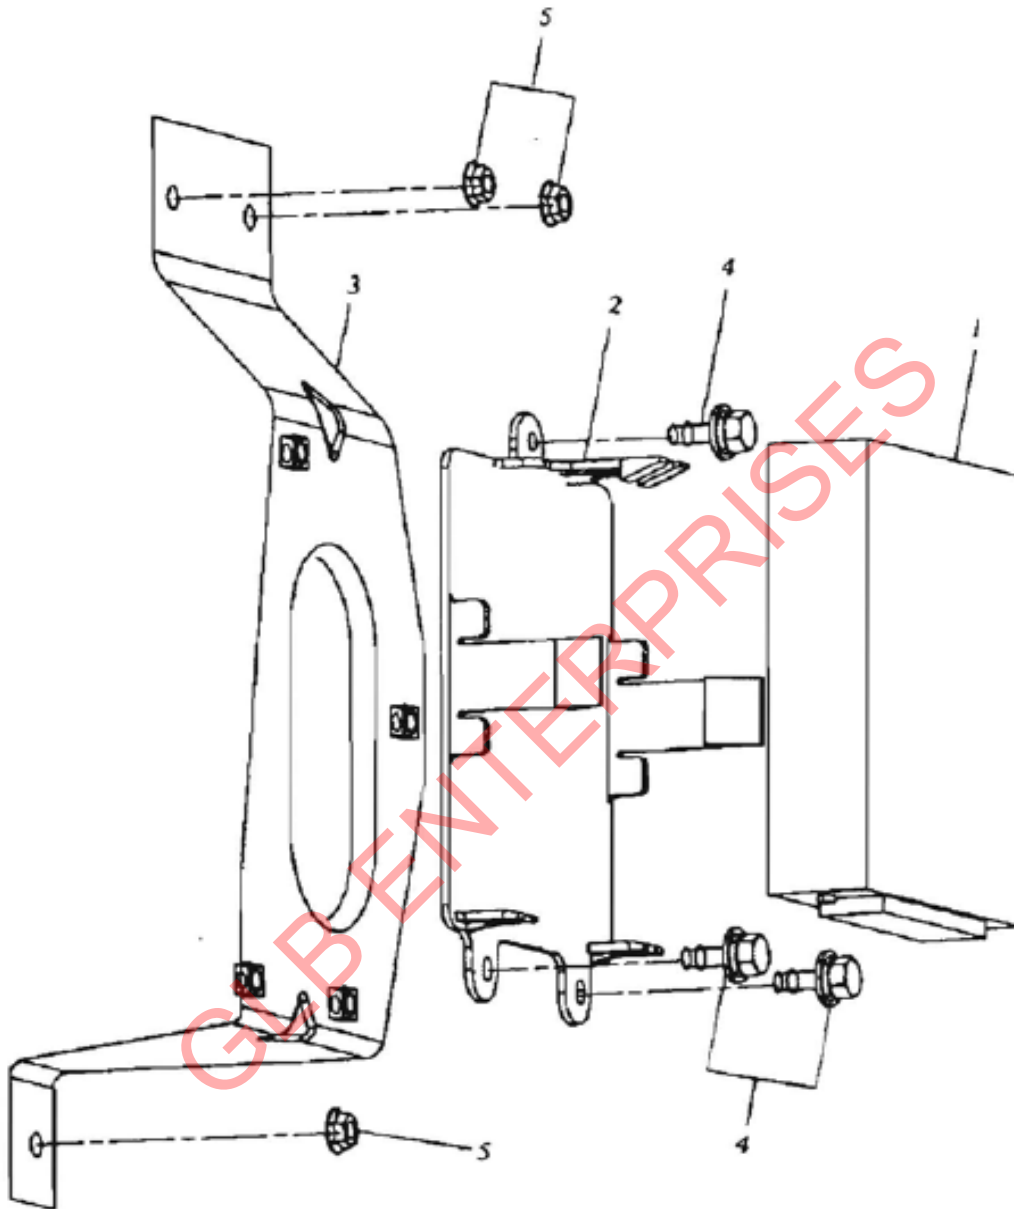


FIGURE 77 ECU (DELPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ECU	AC37210010	1	
2	ECU ASSISTANT BRACKET	AC37210121	1	
3	ECU BRACKET ASM	AC37210111	1	
4	BOLT	Q/2A-CJ-274-M6X16	3	
5	NUT	Q/2A-CJ-44-N6	3	

GLB ENTERPRISES

FIGURE 78 ECU (DELPHI-MT20U)

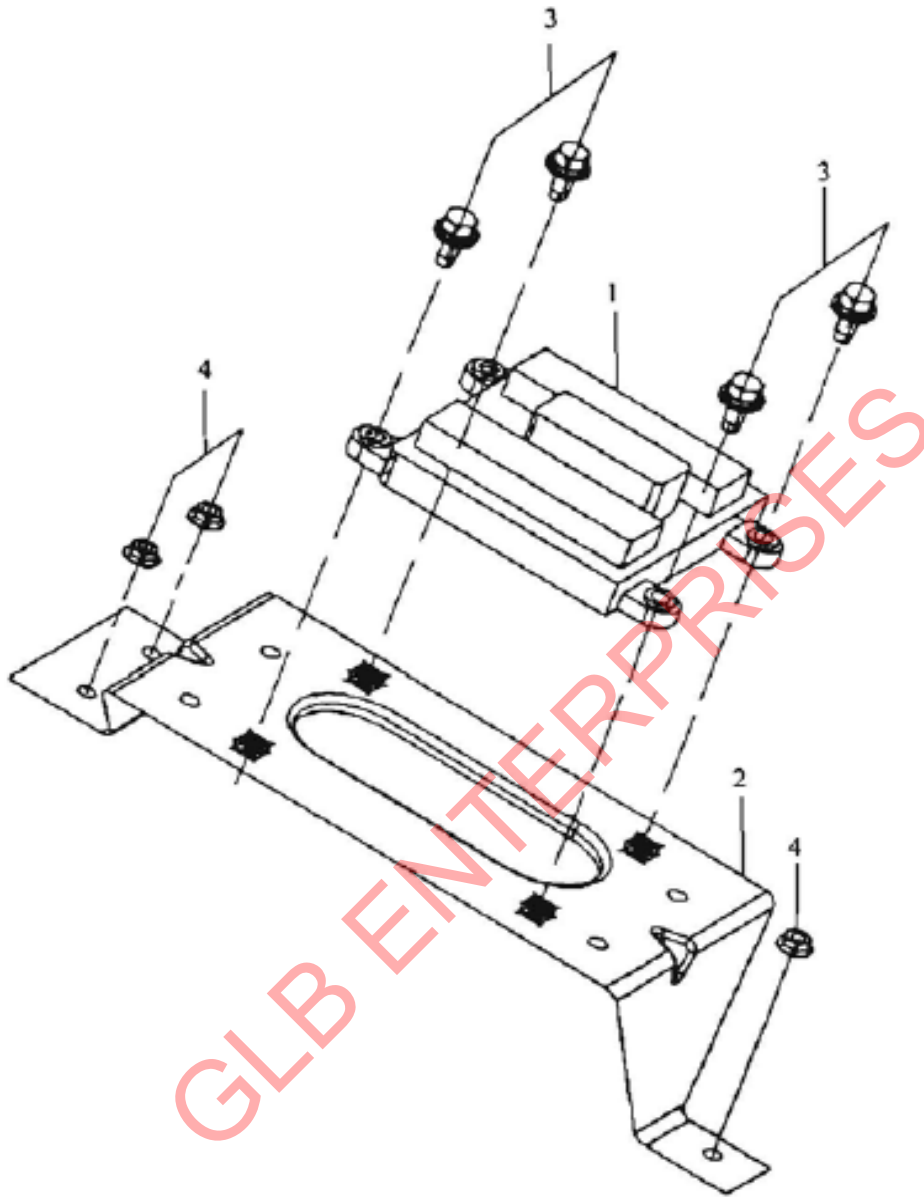


Copyright © GLB2014 R.26

FIGURE 78 ECU (DELPHI-MT20U)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ECU	AC37210019	1	
2	ECU BRACKE ASM	AC37210116	1	
3	BOLT	Q/2A-CJ-36-M6X16	4	
4	WASHER	Q/2A-CJ-44-M6	3	

GLB ENTERPRISES

FIGURE 79 ECU (UASE SYSTEM M7.9.7)

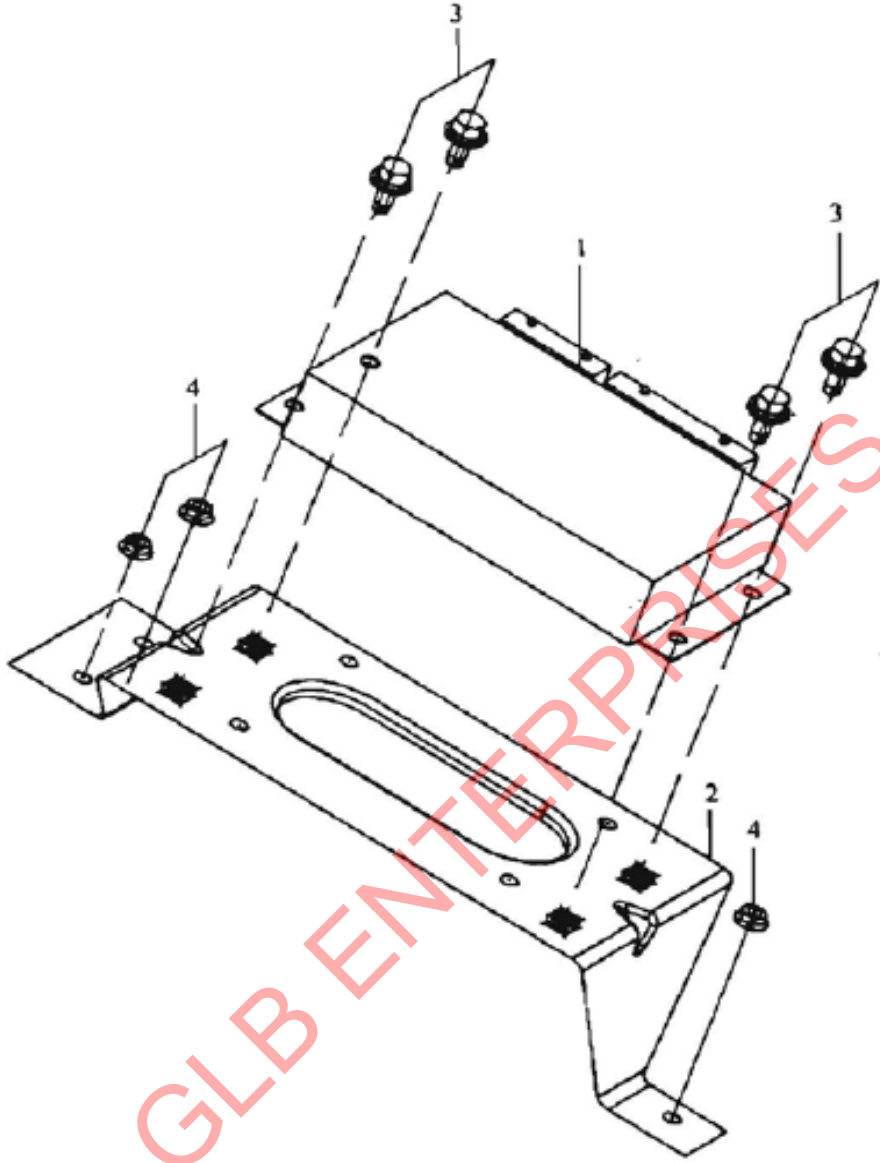

Copyright © GLB2014 R.26

FIGURE 79 ECU (UASE SYSTEM M7.9.7)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ECU	AC37210016	1	
2	ECU BRACKET ASM	AC37210115	1	
3	BOLT	Q/2A-CJ-36-M6X16	4	
4	NUT	Q/2A-CJ-44-M6	3	

GLB ENTERPRISES

FIGURE 80 IGNITION COIL (DELPHI)

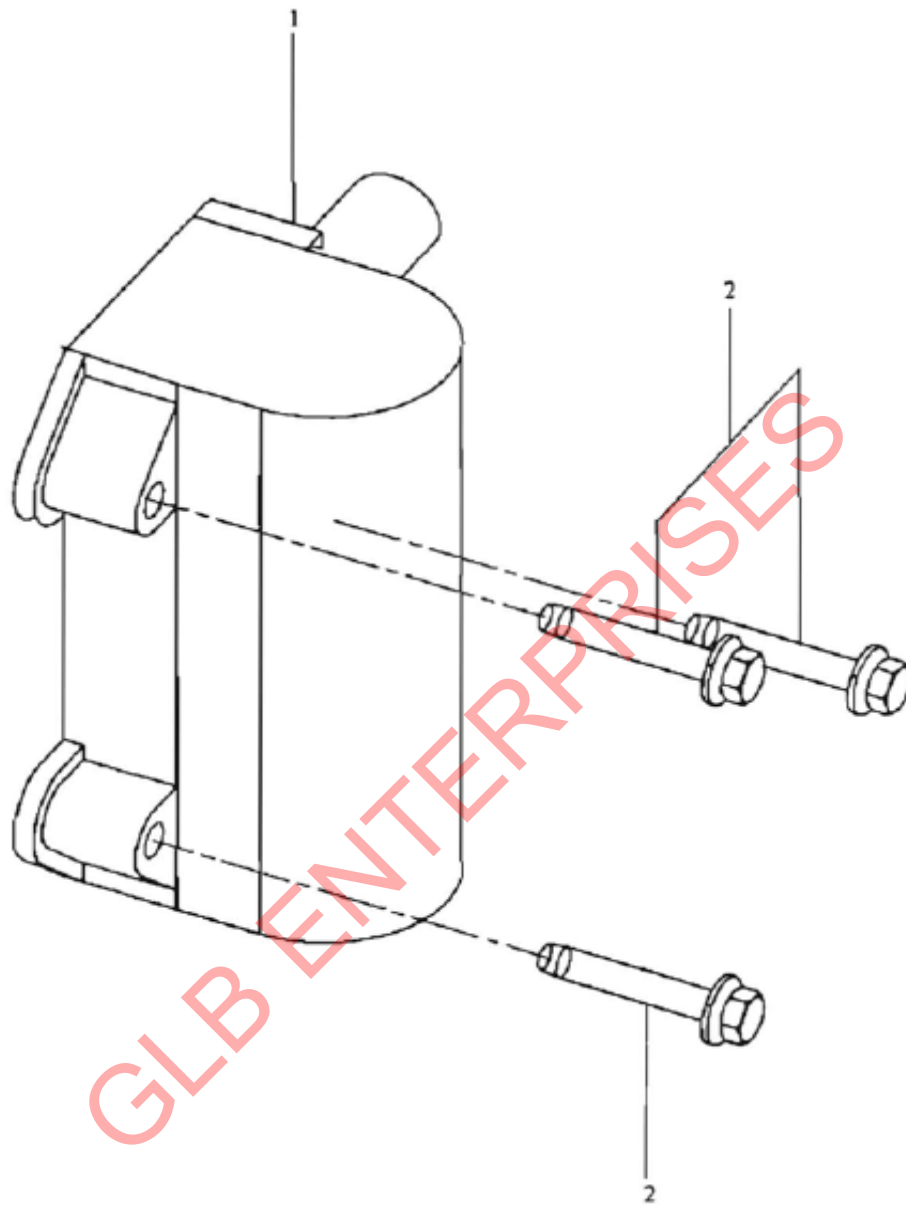


FIGURE 80 IGNITION COIL (DELPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	IGNITION COIL 4-PIN	AC37050001	1	
2	BOLT	Q/2A-CJ-18-M6X35	3	
N/S	462-1AD-3707900	PLUG WIRE	1	

GLB ENTERPRISES



FIGURE 81 IGNITION COIL (DELPHI III)

FIGURE 81 IGNITION COIL (DELPHI III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	IGNITION COIL	AC37050003	1	
2	BOLT	Q/2A-CJ-36- M6-X35	2	
N/S	462-1AD-3707900	PLUG WIRE	1	

GLB ENTERPRISES

FIGURE 82 IGNITION COIL (UAES III)

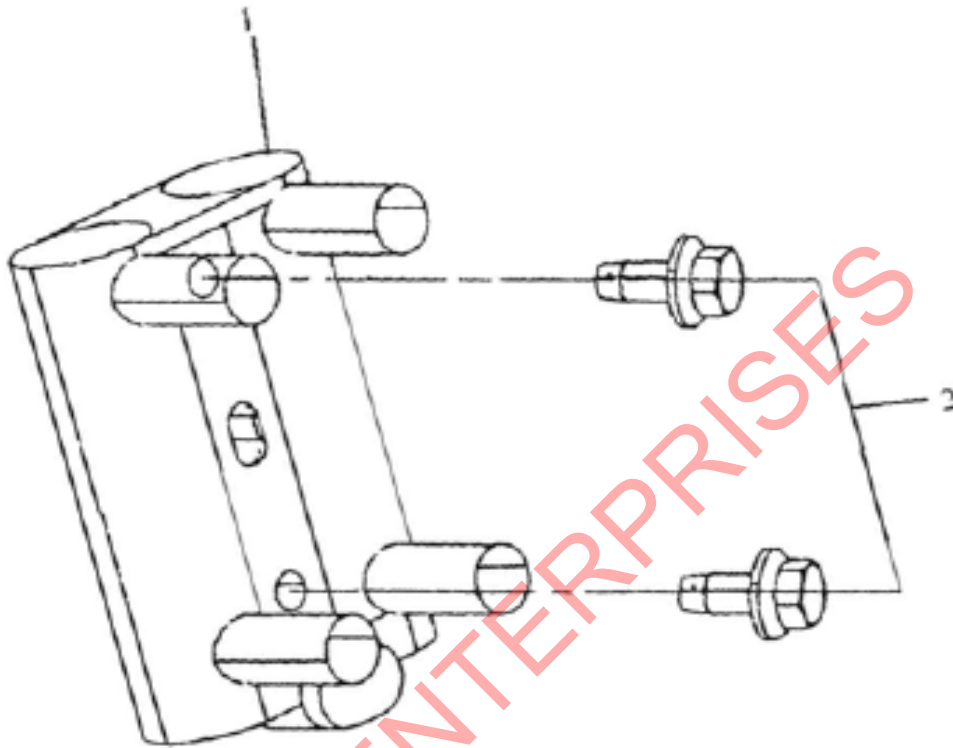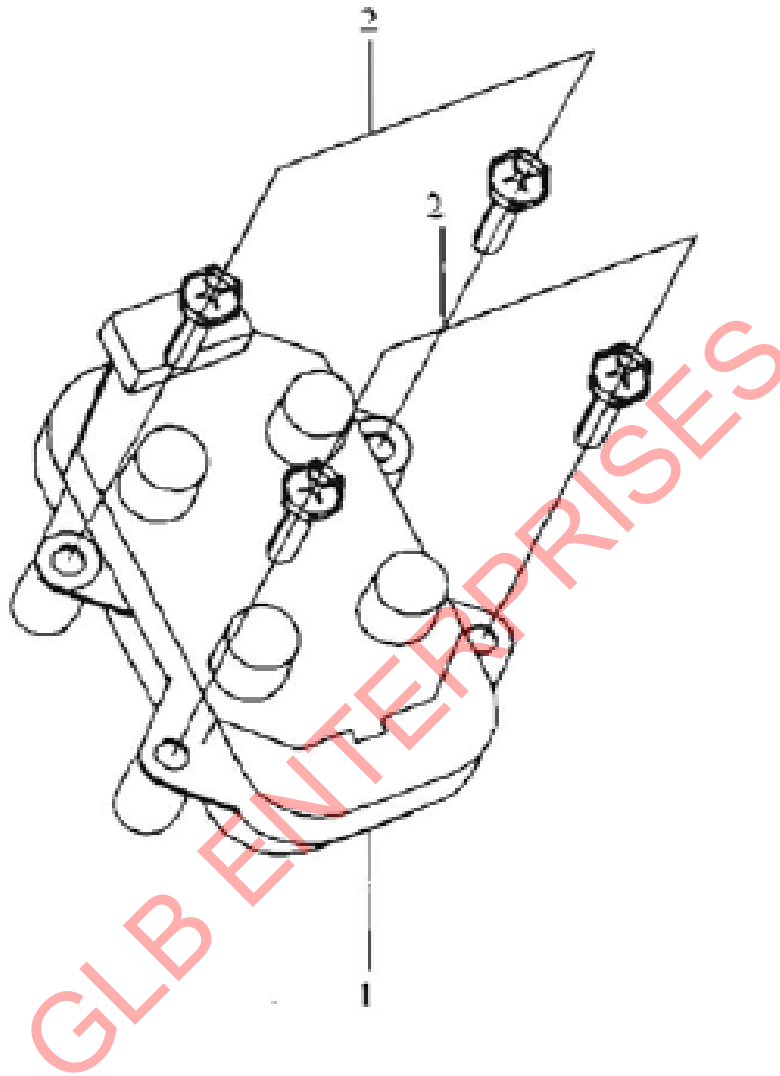


Copyright © GLB2014 R.26

FIGURE 82 IGNITION COIL (UAES III)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	IGNITON COIL	AC37050010	1	AB37050010
2	BOLT	Q/2A-CJ-23 M6X45	4	
N/S	462-1AD-3707900	PLUG WIRE	1	

GLB ENTERPRISES

FIGURE 83 WIRING HARNESS (VAN)

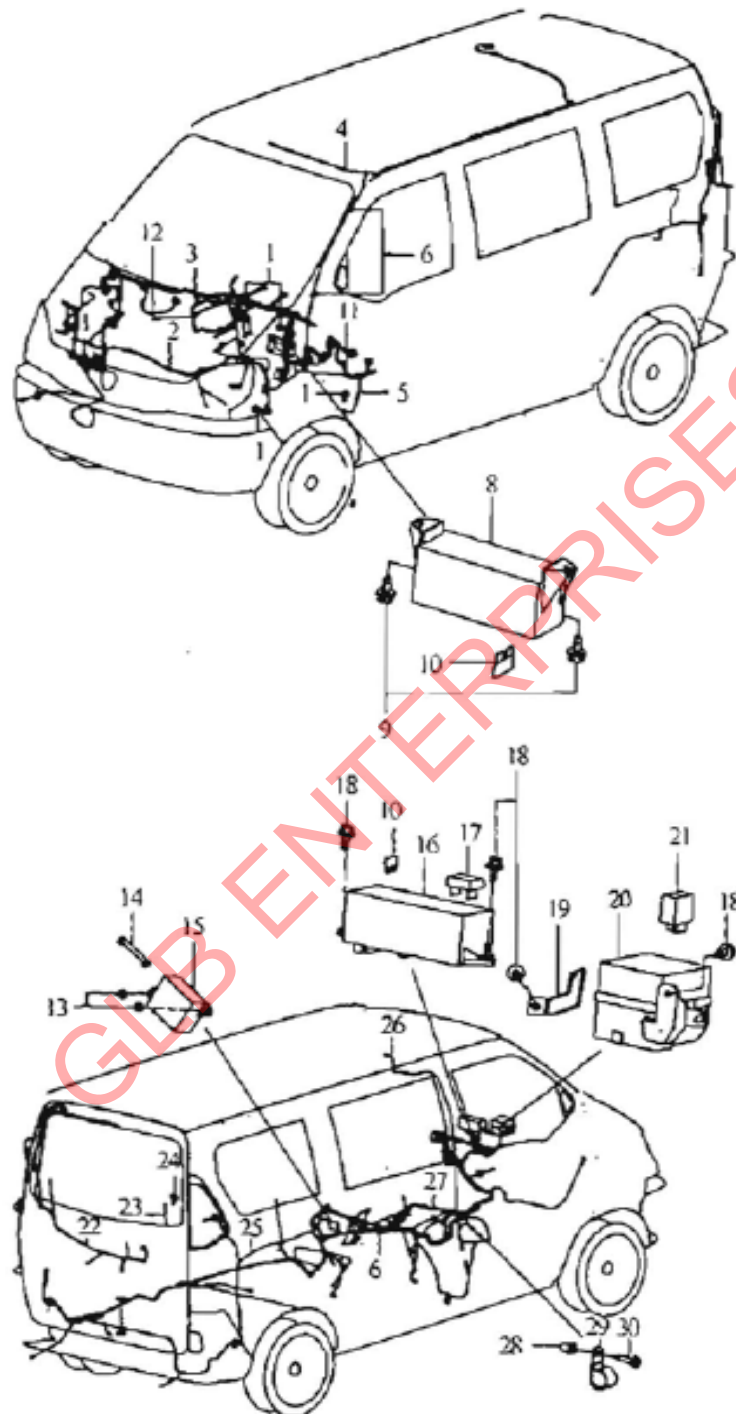

Copyright © GLB2014 R.26

FIGURE 83 WIRING HARNESS (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT/WASHER	Q/2A-CJ-290A M6X16	7	
2	FRONT HARNESS	AC37610100	1	
3	I/P HARNESS	AC37630100	1	
4	ROOF HARNESS	AC37660100	1	
5	BATTERY CABLE	AC37690100	1	
6	PVC PRTECTOR	HFJ3724301EA	3	
7	REAR SIDE HARNESS LH	AC37650100	1	
8	THIRD FUSE BOX	AC37600300	1	
9	BOLT/WASHER	Q/2A-CJ-274 M5X16	2	
10	FUSE	AC37600301	1	30A
		AC37600302	1	20A
		AC37600303	1	15A
		AC37600304	1	10A
11	FRONT DOOR HARNES LH	AC37640100	1	
12	FRONT DOOR HARNES RH	AC37640200	1	
13	NUT	Q340D04	2	
14	FUSE	AC37600101	2	80A
15	SECOND FUSE BOX	AX37600200	1	
16	FIRST FUSE BOX	AC37600100	1	
17	FUSE	AC37600201	1	60A
	FUSE	AC37600202	1	30A
18	BOLT	Q/2A-CJ-36 M6X16	4	
19	RELAY BRACKET	AC37620111	4	
20	RELAY BOX	AC37600400	1	
21	POWER RELAY 2	AA37220002	1	
	POWER RELAY3	AA37220003	1	
	ABS REALY	AA37220005	1	
22	TAIL GATE HARNESS	AC37640300	1	
23	DEFOGGER CABLE	AC37640400	1	
24	SCREW	Q/2A-CJ-13A-5X12	1	
25	REAR HARNESS RH	AC37650200	1	
26	A/C HARNESS	AC37680100	1	
27	CONTROL HARNESS	AC37620100	1	
28	NUT (PLASTIC)	Q/2A-CJ-309	1	
29	CLIP	HFJ3724690DA	1	
30	SCREW	Q/2A-CJ-13A-6X14	1	

FIGURE 84 BATTERY

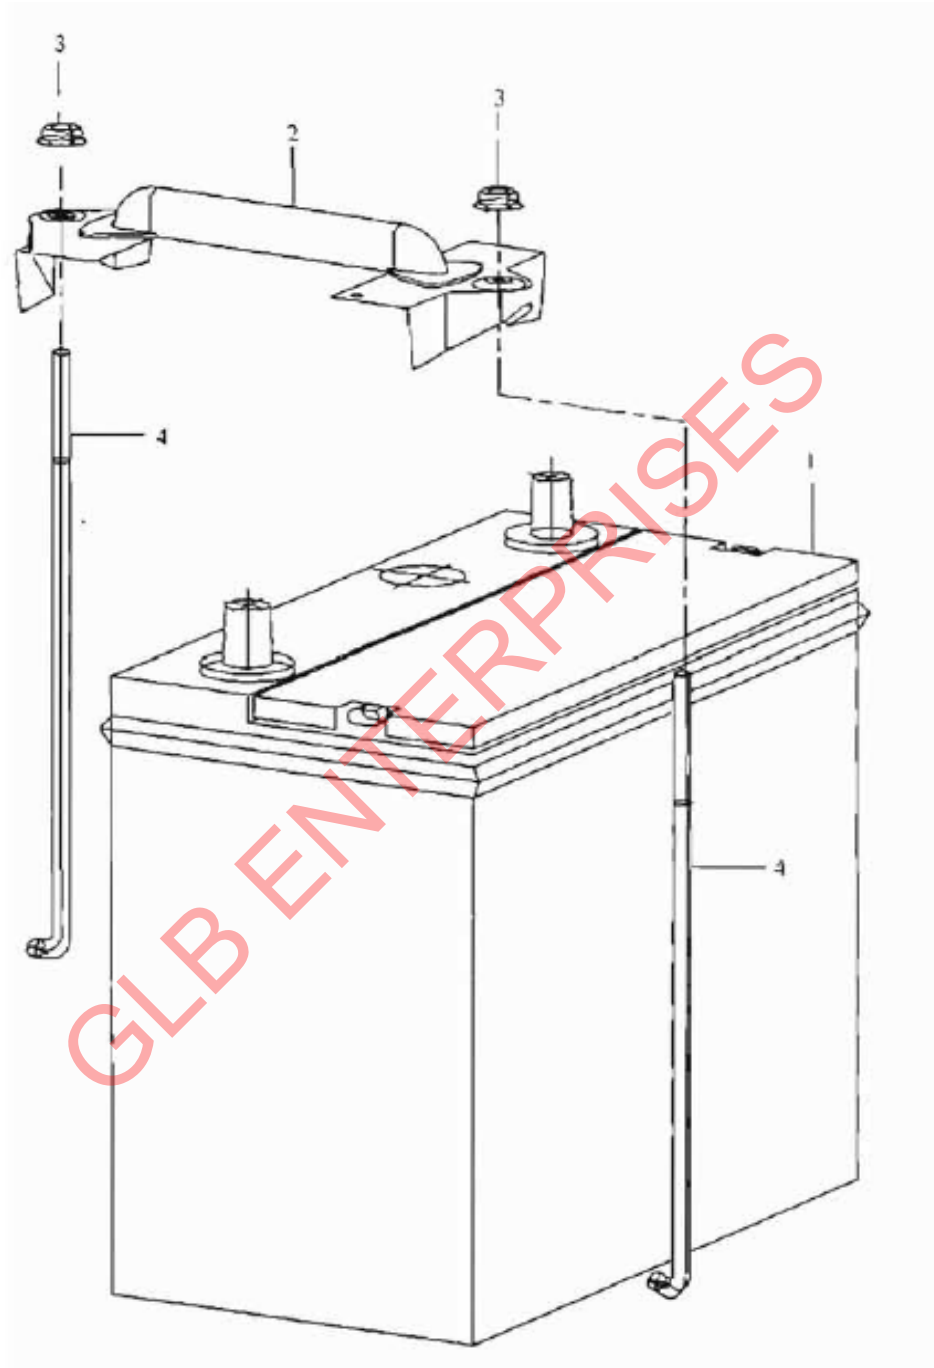
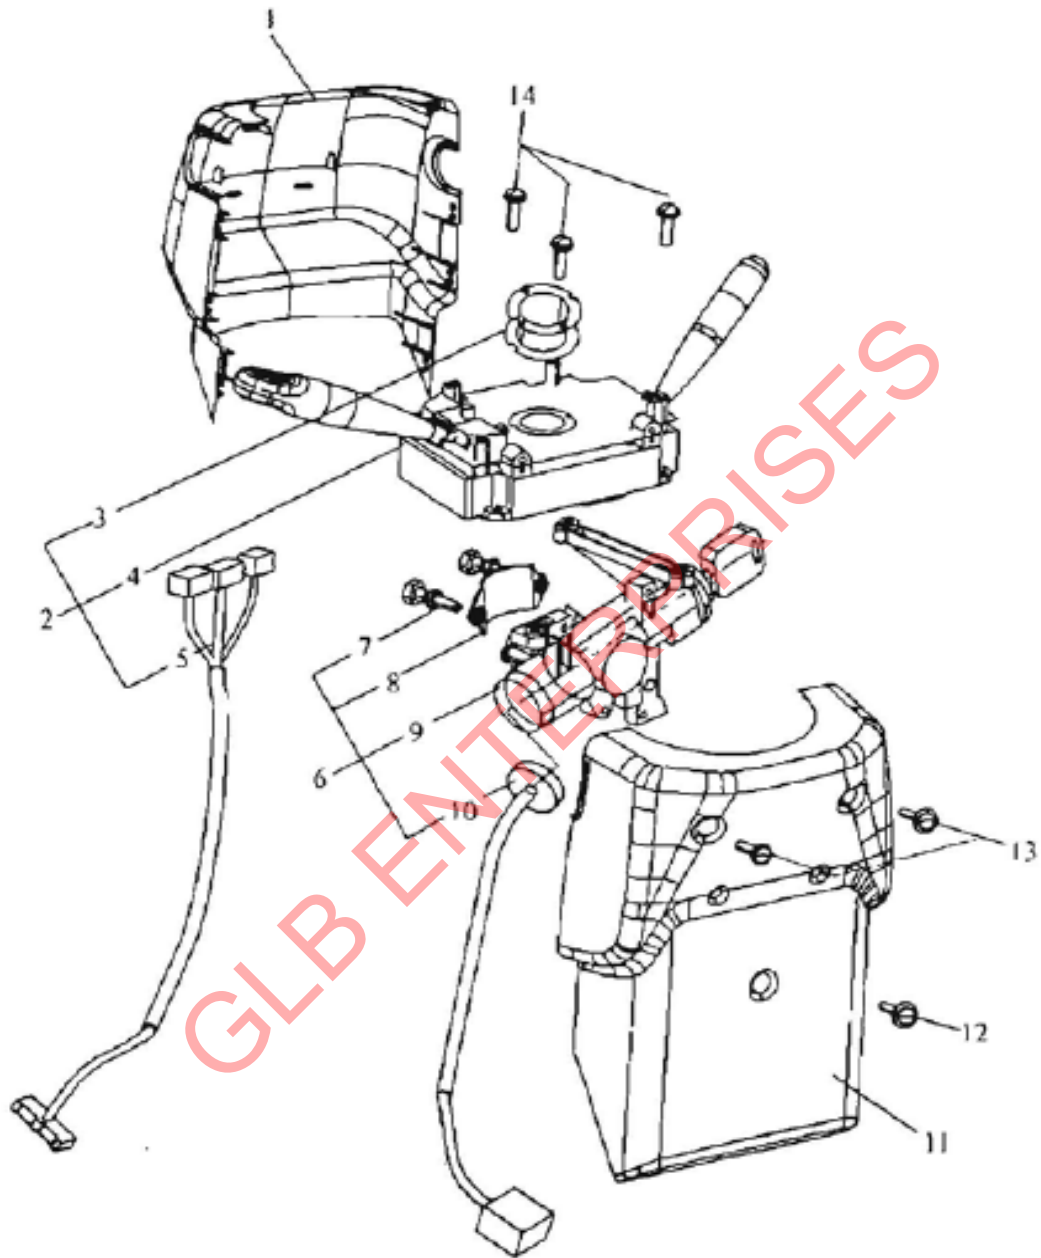


FIGURE 84 BATTERY

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BATTERY	AC37030001	1	
2	LOCK DOWN PLATE	AA37030002	1	
3	NUT	Q/2A-CJ-117 M6	2	
4	LOCK DOWN RODS	AA37030004	2	

GLB ENTERPRISES

**FIGURE 85 COMBINATION SWITCH, IGNITION SWITCH
COLUMN COVER**



**FIGURE 85 COMBINATION SWITCH, IGNITION SWITCH
COLUMN COVER**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER COLUMN COVER	AC37320001	1	
2	COMBINATION SWITCH ASM	AC37320010	1	
3	TURNING REPOSTION CIRCLE	AC37320013	1	SEE AC37320010
4	COMBINATION SWITCH BASE	AC37320012	1	SEE AC37320011
5	COMBINATION SWITCH HARNESS	AC37320011	1	SEE AC37320012
6	IGNITION SWITCH ASM	AC37310010	1	
7	THEFT PROOF BOLT	AC37310012	2	SEE AC37310010
8	FIXING COVER	AC373100013	1	SEE AC37310011
9	IGNITION SWITCH BASE	AC37310011	1	SEE AC37310012
10	IGNITION SIWTHC HARNESS	AC37310014	1	SEE AC37310013
11	LOWER COLUMN COVER	AC37320002	1	
12	SCREW	Q/2A-CJ-474-M5X14	1	
13	TAPPING SCREW	Q/2A-CJ-47N-ST5.5X16	2	
14	BOLT	Q/2A-CJ-18-M5X12	3	

FIGURE 86 HEAD LAMP


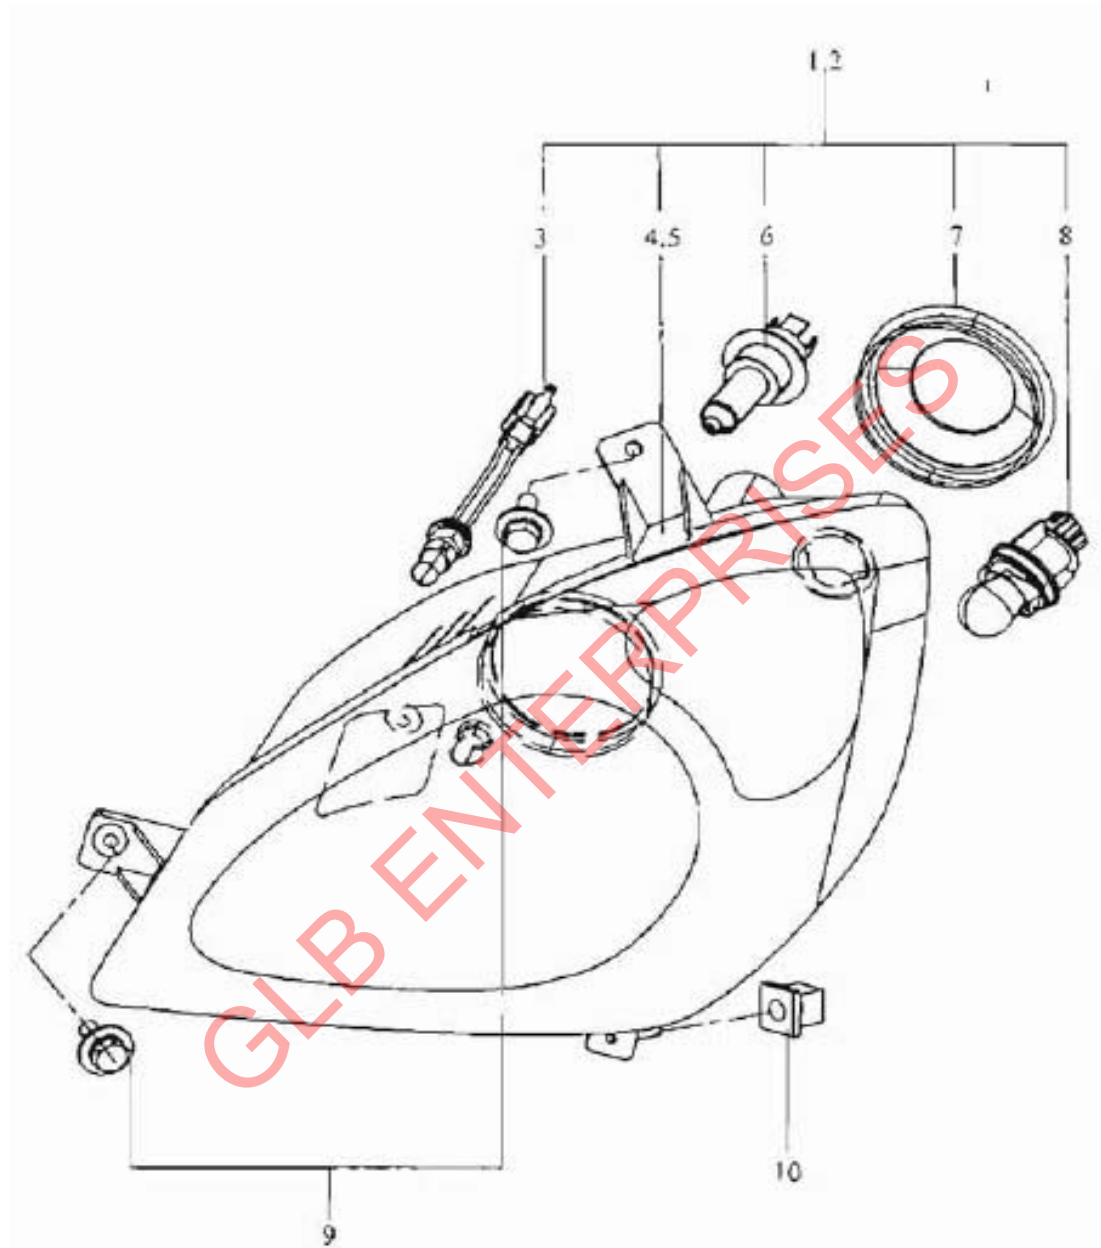


FIGURE 86 HEAD LAMP


NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD LAMP ASM LH	AC37110010	1	
2	HEAD LAMP ASM RH	AC37110020	1	
9	BOLT	Q/2A-CJ-63-M6X22	4	12V/5W
10	CLIP	Q/2A-CJ-324	2	

GLB ENTERPRISES

**FIGURE 87 SIDE TURN SIGNAL LAMP
FOG LAMP**

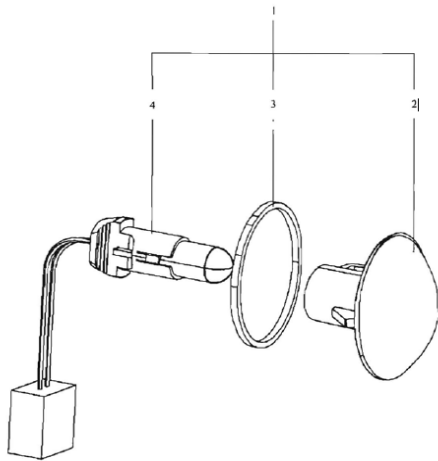

SIDE TURN LAMP

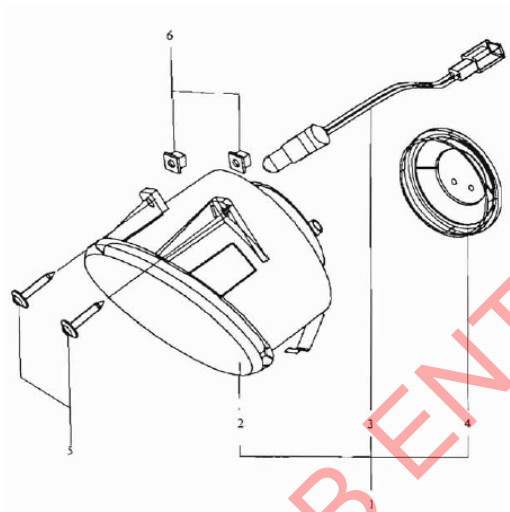


FRONT FOG LAMP

**FIGURE 87 SIDE TURN SIGNAL LAMP
FOG LAMP**


NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SIDE TURN SIGNAL LAMP ASM	AC37150010	1	
2	FRONT FOG LAMP ASM LH/RH	HFJ3732110DA	2	

GLB ENTERPRISES

**FIGURE 88 REAR FOG LAMP
INTERIOR DOME LAMP**

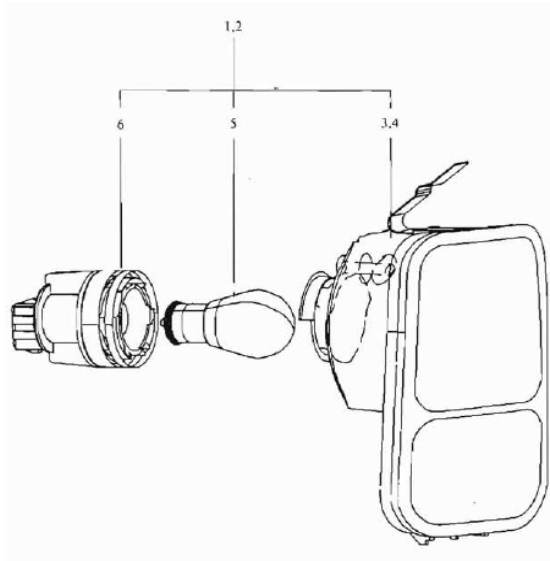

REAR FOG LAMP W/ REFLECTOR

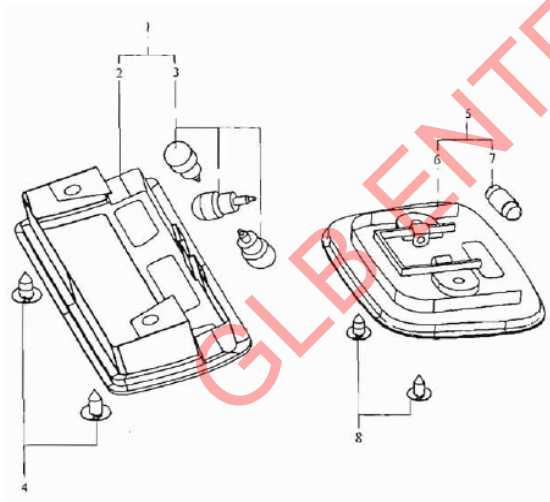

INTERIOR DOME LAMP

**FIGURE 88 REAR FOG LAMP
INTERIOR DOME LAMP**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR FOG LAMP W/REFLECTOR LH	AC37130030	1	
2	REAR FOG LAMP W/REFLECTOR RH	AC37130040	1	
3	DOME LAMP ASM	AA37140001	1	
4	CABIN LAMP ASM	AA37140005	1	VAN

GLB ENTERPRISES

FIGURE 89 TAIL LAMP

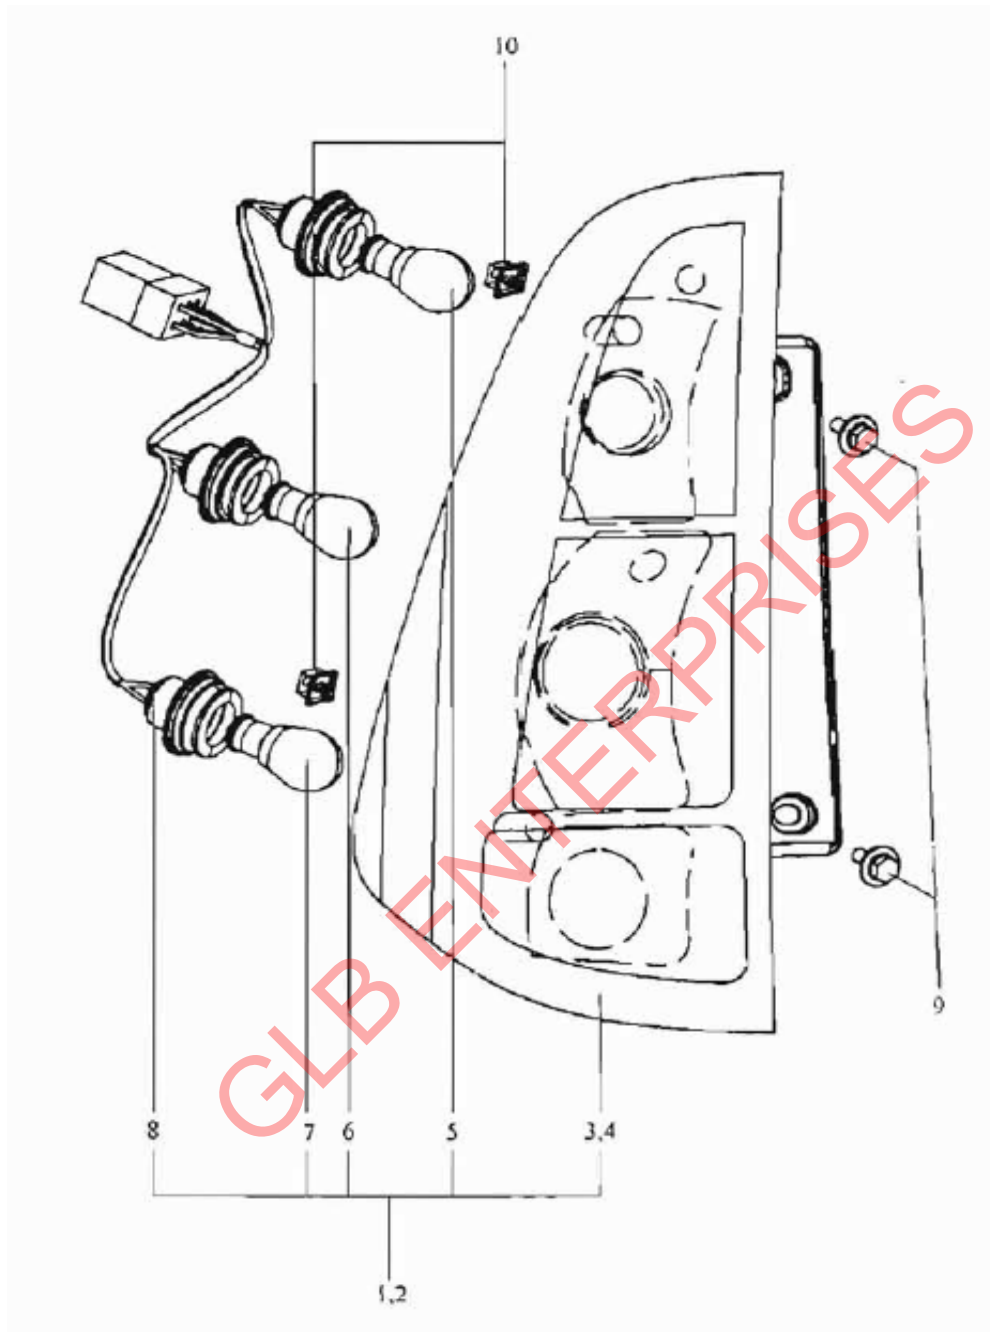


FIGURE 89 TAIL LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TAIL LAMP ASM LH	AC37130010	1	VAN
		AC37130110	1	VAN
		HFJ3773110DC		X-CAB
2	TAIL LAMP ASM RH	AC37130020	1	VAN
		AC37130120	1	VAN
		HFJ3773110DC		X-CAB



AC37130110 & AC37130120 STYLE



AC37130010 & AC37130020 STYLE



HFJ3773110DC

FIGURE 90 LICENSE PLATE LAMP

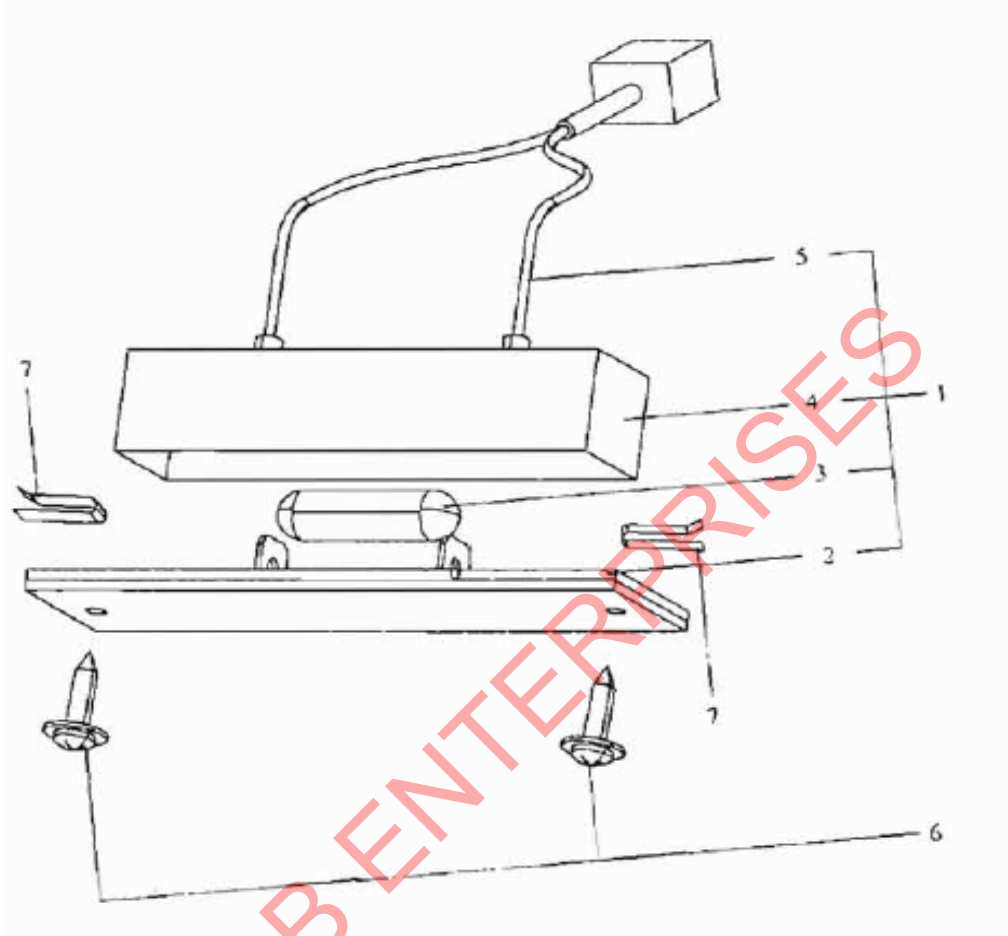


FIGURE 90 LICENSE PLATE LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	LICENSE PLATE LAMP ASM	HFJ3717100DA	2	

GLB ENTERPRISES

FIGURE 91 STEERING SUPPORT MEMBER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	MEMBER STEERING SUPPORT ASM	AC38015100	1	
2	MEMBER STEERING SUPPORT	AC38010101	1	
3	BRACKET STEERING SUPPORT LH	AC38010103	1	
4	BRACKET STEERING SUPPORT RH	AC38010104	1	
5	PAD BRACKET ASM	AC38010110	4	
6	BRACKET STEERING SHAFT ASM	AC38010106	1	
7	REINFORCED STEERING SHAFT BRACKET UPPER	AC38010107	1	
8	REINFORCED STEERING SHAFT BRACKET FRONT	AC38010108	1	
9	REINFORCED STEERING SHAFT BRACKET MEMBER	AC38010111	1	
10	STAY INSPECTION CENTER ASM	AC38010130	1	
11	SIDE BRACKET ASM LH	AC38010105	1	
12	BRACKET FUSE BOX RH	AC38010109	1	
13	BRACKET	AC38010123	1	
14	PNL SUPPORT BRACKET GLOVE BOX BRACKET	AC38010135	1	
15	LH	AC38010128	1	
16	BOLT	Q/2A-CJ-61A-M8X45	4	

FIGURE 92 DASHBOARD

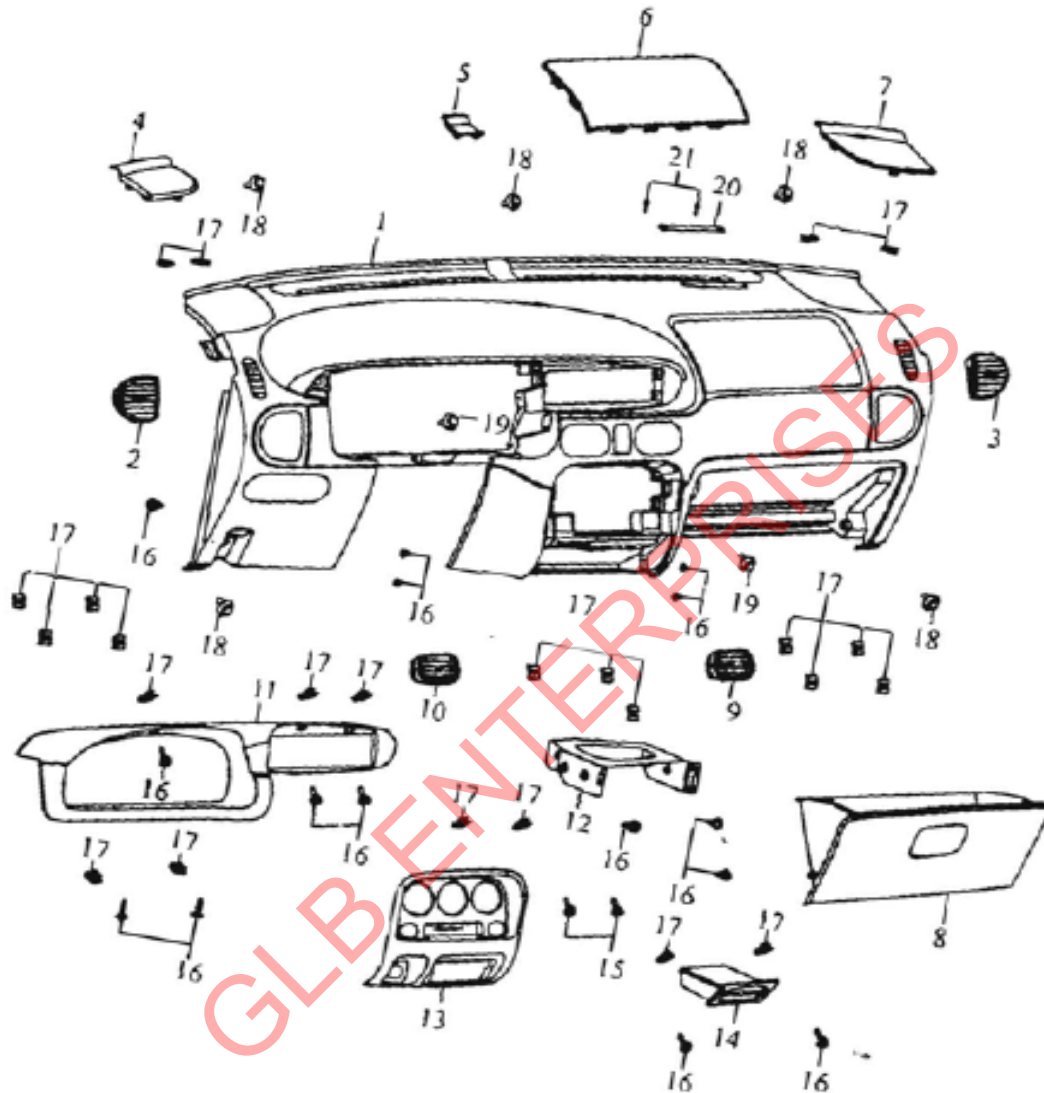


FIGURE 92 DASHBOARD

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DASHBOARD FRAME	AC38011100	1	
2	SIDE VENT ASM LH	AC38010900	1	
3	SIDE VENT ASM RH	AC38011000	1	
4	SPEAKER COVER LH	AC38010500	1	
5	SCREW COVER	AC38011200	1	
6	TRIM COVER	AC38011500	1	
7	SPEAKER COVER RH	AC38010600	1	
8	GLOVE BOX ASM	AC38011400	1	
9	CENTER VENT RH	AC38010800	1	
10	CENTER VENT LH	AC38010700	1	
11	COMBINATION METER BEZEL	AC38010200	1	
12	GPS BRACKET	AC38011700	1	
13	CONTROL BEZEL	AC38010300	1	
14	ASHTRAY	AC38011900	1	
15	SCREW	Q/2A-CJ13A--5X16F2	2	
16	SCREW	Q/2A-CJ-13A-5X16	15	
17	NUT	Q/2AM13-5-2	24	
18	SCREW	Q/2A-CJ-474-M6X16	5	
19	SCREW-COMBINATION	Q/2A-CJ-36-M6X16	2	
20	VIN PLATE	AC39030091	1	
21	RIVET	Q4400308	2	

GLB ENTERPRISES

FIGURE 93 SWITCHES, RELAY & LIGHTER

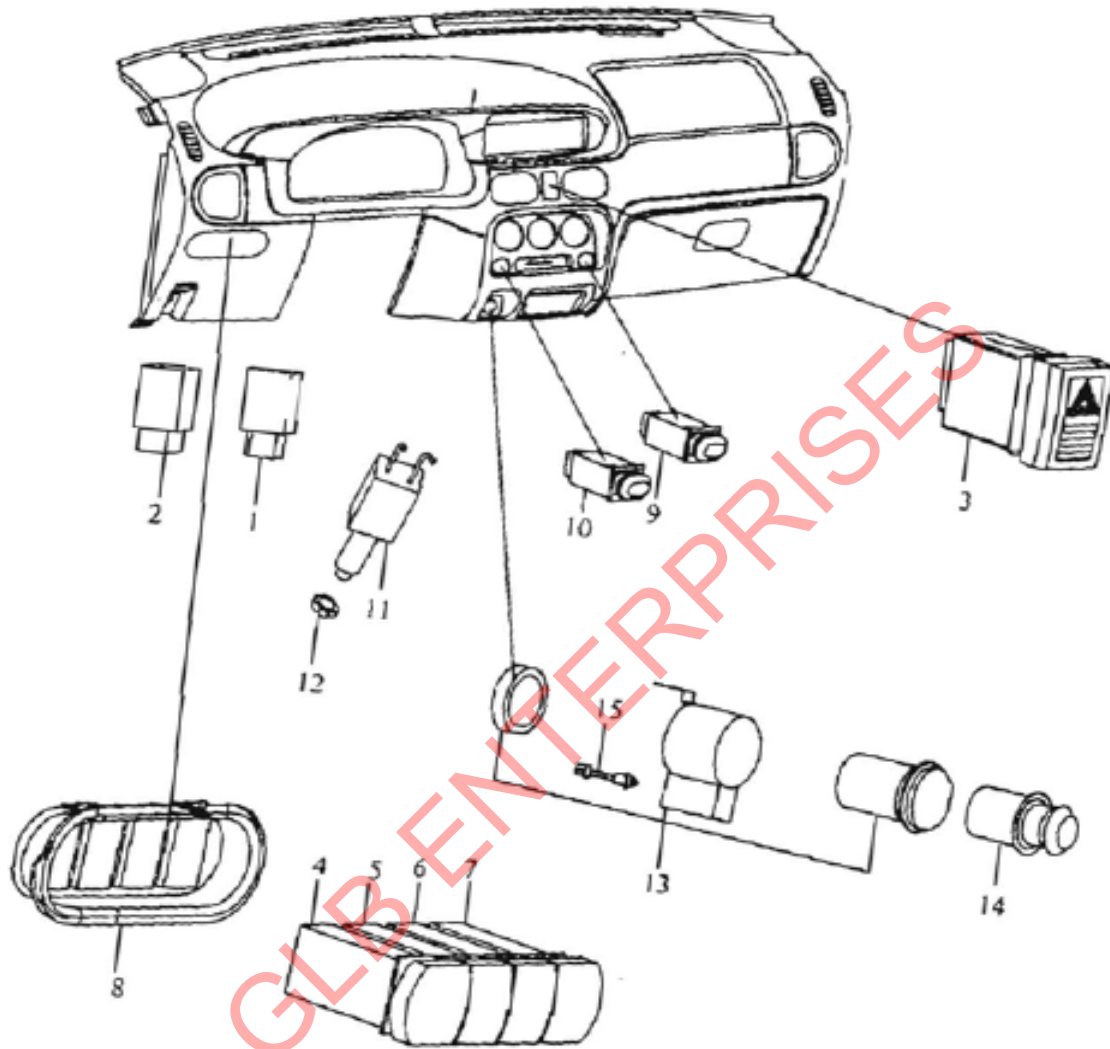


FIGURE 93 SWITCHES, RELAY & LIGHTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FLASHING RELAY	AB37220002	1	
2	FUEL PUMP RELAY	HFJ3735310DA	1	
3	HAZARD SWITCH	AC37330001	1	
4	FRONT FOG LAMP SWITCH	AC37340001	1	
	FRONT FOG LAMP SWITCH DECORATING	AC37340003	1	OPTIONAL
5	REAR WIPER SWITCH	AC37360001	1	
	REAR WIPER SWITCH DECORATING	AC37360004	2	OPTIONAL
6	REAR WASHER SWITCH	AC37360002	1	
7	FRONT FOG LAMP SWITCH	AC37340002	1	
8	SWITCH PANEL	AC37360003	1	
9	REAR DEFOGGER	AC37350001	1	
	REAR DEFOGGER DECORATING	AC37350002	2	OPTIONAL
10	A/C SWITCH	AC37370001	1	
11	STOP LAMP SWITCH	AC37410001	1	
12	NUT	AC37410002	1	
13	CIGARETTE LIGHTER BASE	AA37510001	1	
14	CIGARETTE LIGHTER CORE	AA37510003	1	
15	CIGARETTE LIGHTER LAMP	AB37510002	1	

FIGURE 94 SWITCHES, RELAY & HORN

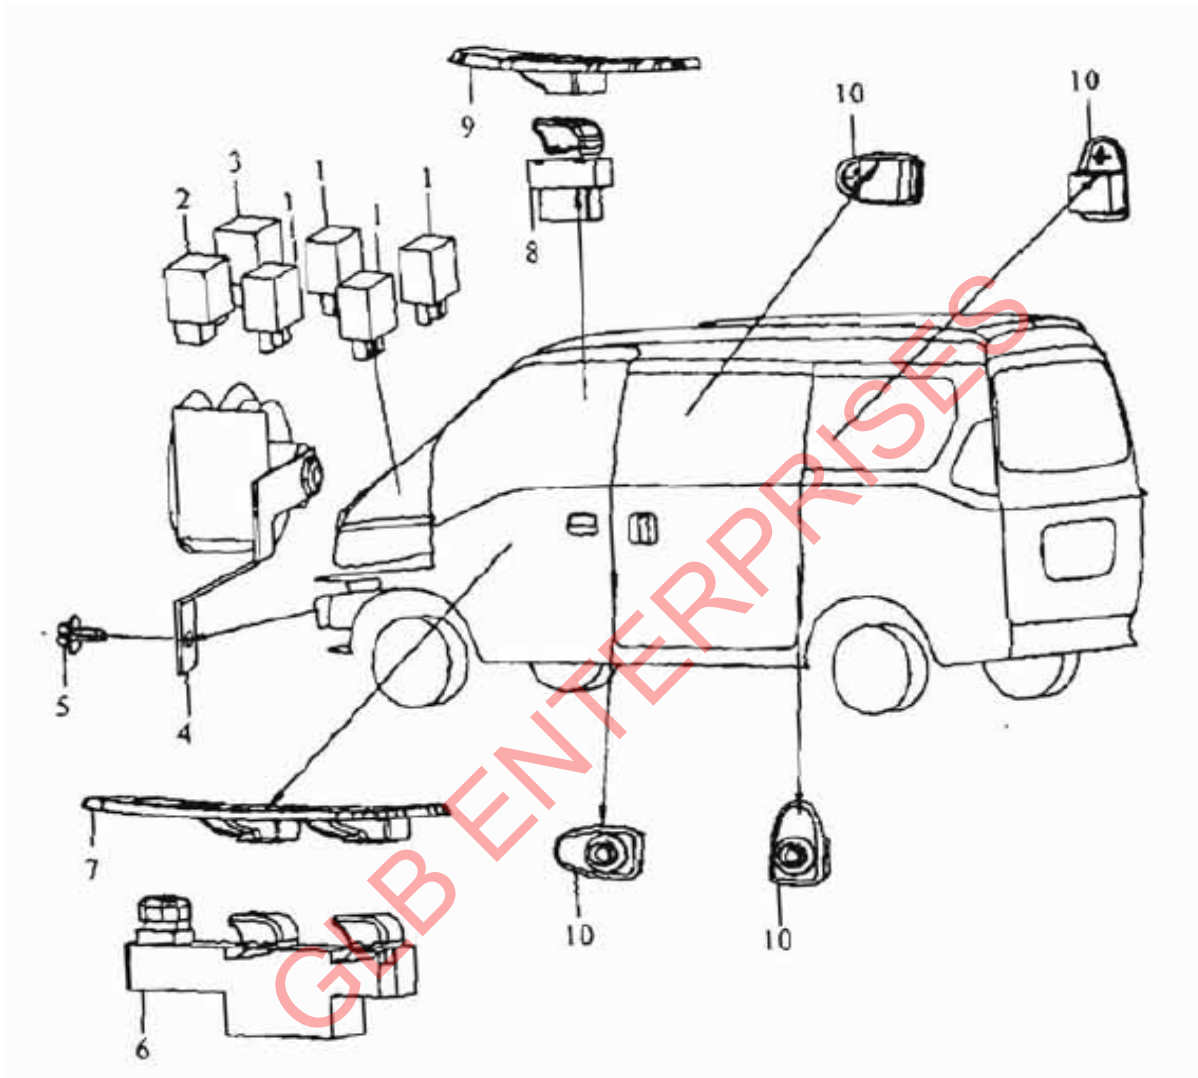


FIGURE 94 SWITCHES, RELAY & HORN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	POWER RELAY #2	AA37220002	4	3735030-01, COOLING FAN
2	POWER RELAY #3	AA37220003	1	
3	ABS RELAY	AA37220005	1	
4	HORN	AC37520001	1	
5	BOLT	Q/2A-CJ-290-M8X20	1	
6	POWER WINDOW MAIN SWITCH	AC37380001	1	
7	POWER WINDOW PANEL FRONT LH	AC37380003	1	
8	POWER WINDOW SUB. SWITCH	AC37380002	1	
9	POWER WINDOW PANEL FRONT RH	AC37380004	1	
10	DOOR SWITCH	AC37440001	4	

GLB ENTERPRISES

FIGURE 95 RADIO

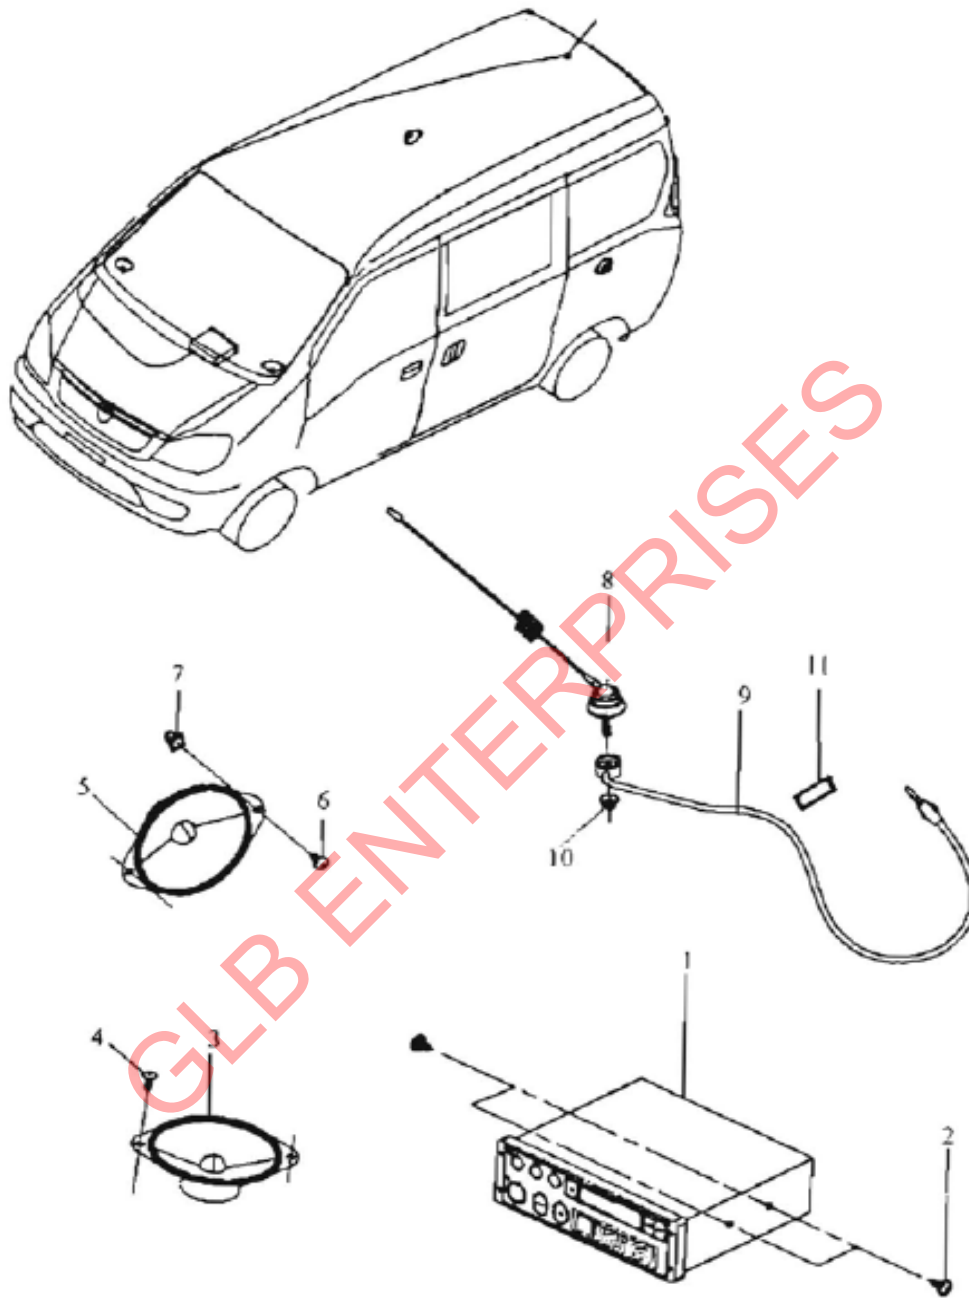


FIGURE 95 RADIO

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	RAIDO	AC79010001	1	
		AC79010005	1	
2	SCREW	M5X8 GB973	4	
3	FRONT SPEAKER	AC79010002	2	
4	SCREW	Q/2A-CJ-13A-5X16	4	
5	REAR SPEAKER	AC79010003	2	
6	SCREW	Q271B4213	4	
7	NUT	Q/2AM35-4	4	
8	ANTENNA ASM	AC79030001	1	
	ANTENNA FEEDER			
9	CABLE	AC79030002	1	
10	NUT	GB6177-M5	1	
11	TAPE	AA79010005	6	

GLB ENTERPRISES

FIGURE 96 SPEEDOMETER CLUSTER

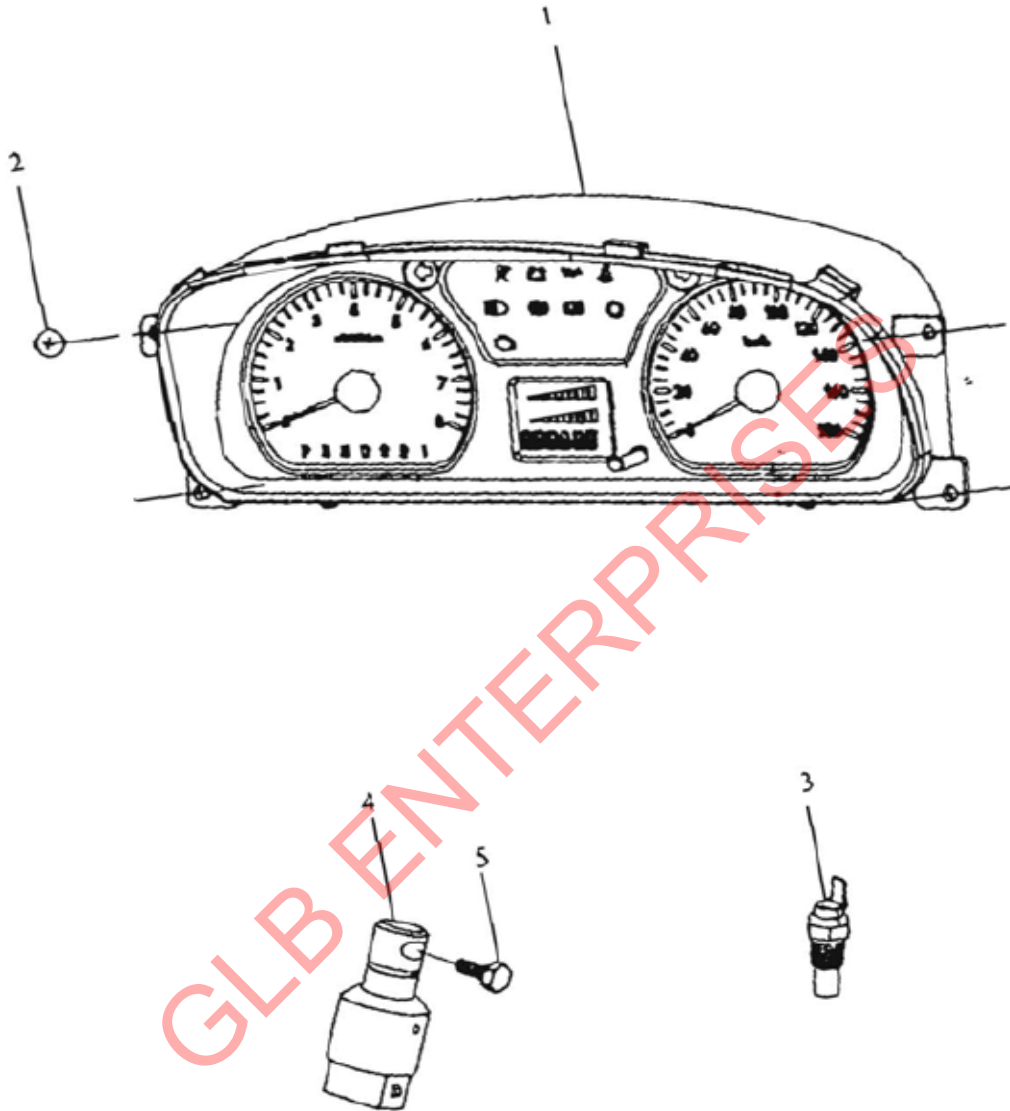


FIGURE 96 SPEEDOMETER CLUSTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SPEEDOMETER CLUSTER	AC38200001	1	HFJ6370K
		AC38200002	1	HFJ6370G,H,F
2	SCREW	Q/2A-CJ-104-5X16	4	
3	TEMPERATURE SENSOR	AC38080001	1	
4	SPEED SENSOR	AC38020001	1	
5	SCREW	BS10-2-1701208-A	1	

GLB ENTERPRISES

[illegible]

FIGURE 97 FRONT WIPER MOTOR & BLADES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WIPER MOTOR	AC52050007	1	
	WIPER ARM/BLADE ASM			
2	RH	AC52050001	1	
	WIPER ARM/BLADE ASM			
3	LH	AC52050004	1	
	WIPER BLADE LH/RH	AC52050006	2	
4	WIPER COVER	AC52050016	1	
5	WIPER NUT	AC52050017	1	
6	WIPER LINK ASM	AC52050008	1	
7	BOLT	Q/2A-CJ-33-M6X16	1	
8	NUT	Q/2A-CJ-44-M6	1	

GLB ENTERPRISES

FIGURE 98 REAR WIPER MOTOR & BLADES

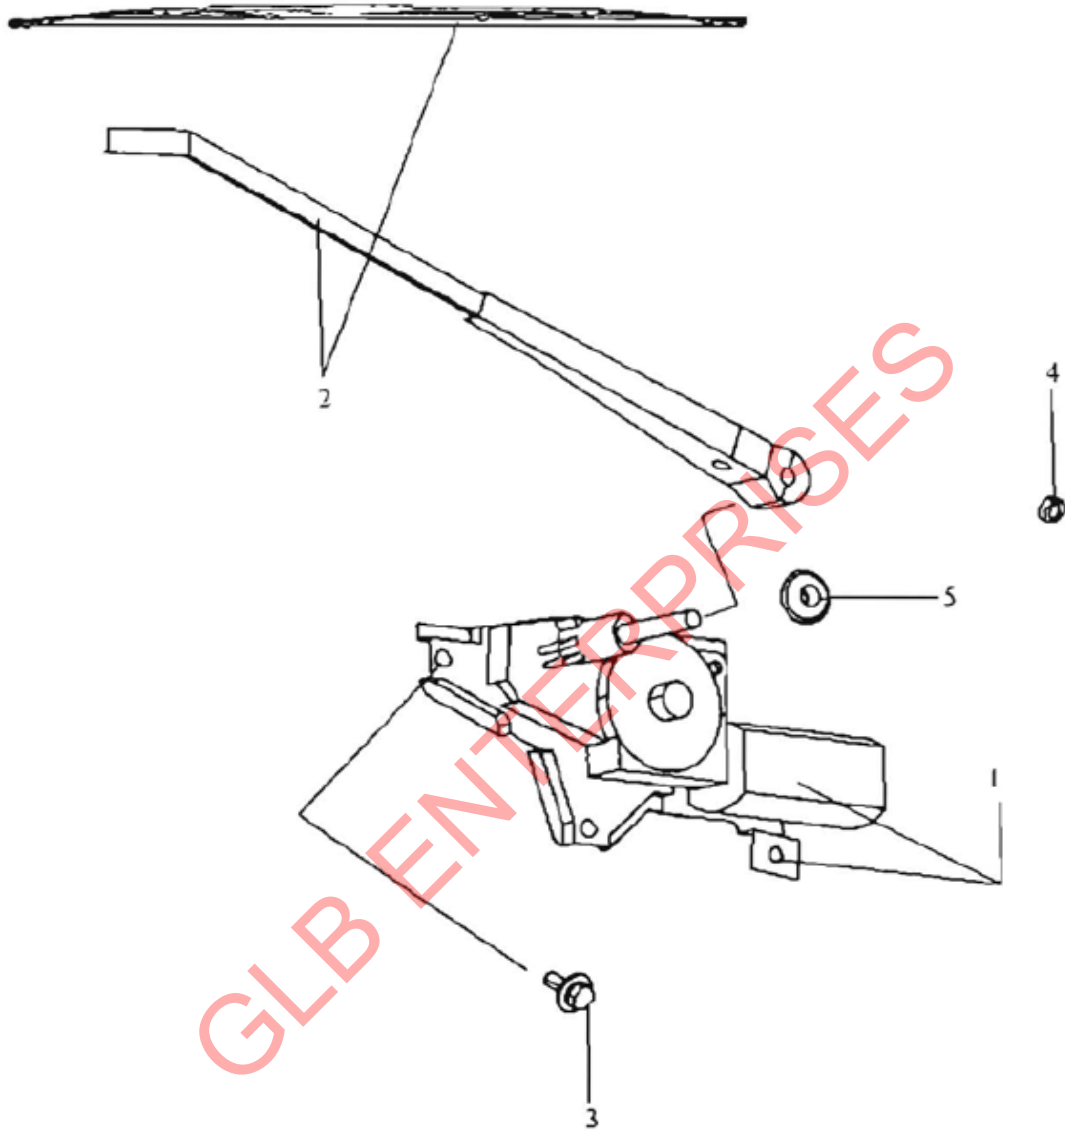


FIGURE 98 REAR WIPER MOTOR & BLADES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WIPER MOTOR	AC52050015	1	
2	WIPER ARM/WIPER BLADE ASM	AC52050009	1	
3	BOLT	Q/2A-CJ-33-M6	3	
4	NUT	Q340B06	1	
5	GASKET	AC52050014	1	

GLB ENTERPRISES

FIGURE 99 FRONT WINDSHIELD WASHER

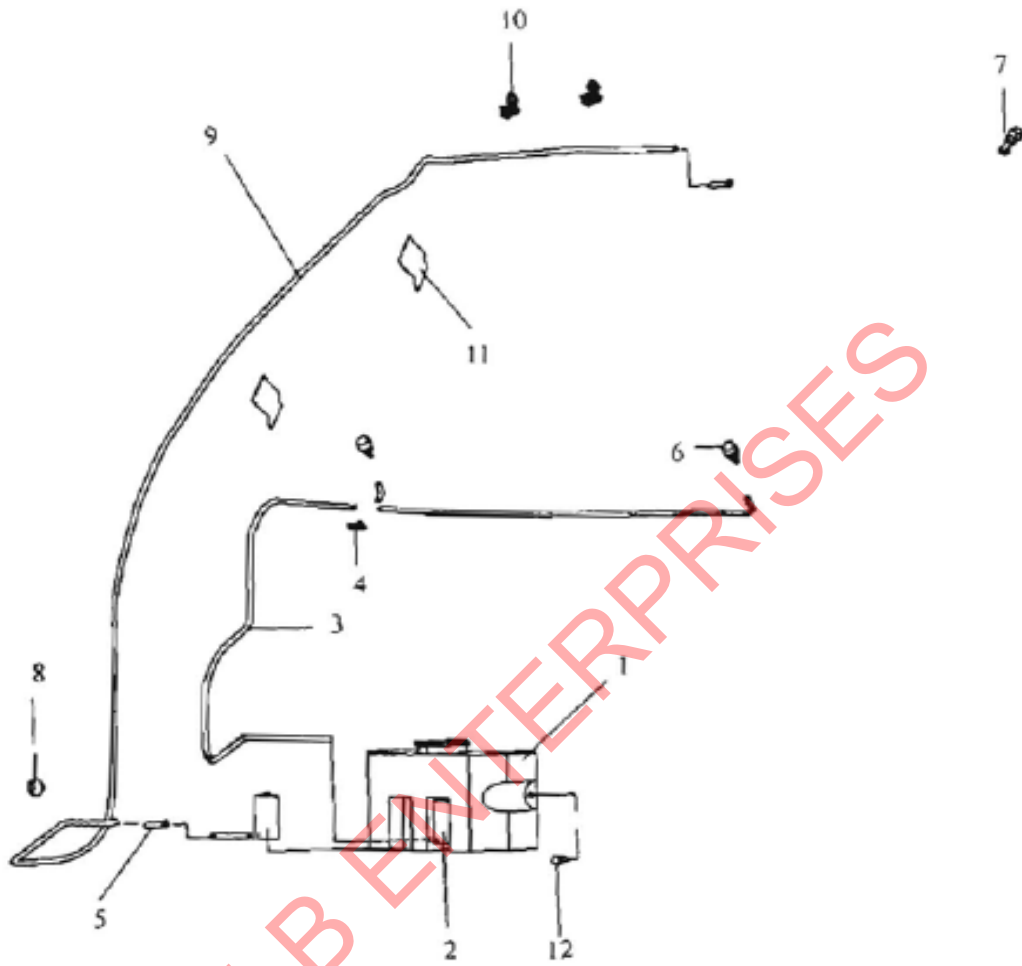


FIGURE 99 WINDSHIELD WASHER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WASHER TANK ASM	AC52070001	1	WITHOUT REAR WASHER
		AC52070002	1	WITH REAR WASHER
2	WASHER MOTOR	AC52070004	2	SEE AC52070001, 70002
3	FRONT WASHER HOSE	AC52070007	1	
4	3-WAY CONNECTOR	AC52070010	1	
5	TIE IN	AC52070011	2	
6	FRONT WASHER NOZZLE	AC52070012	2	
7	REAR WASHER NOZZLE	AC52070013	1	
8	GASKET	AC52070014	1	
9	REAR WASHER HOSE	AC52070016	1	
10	CLAMP	AC52070017	2	
11	PROTECTOR	HFJ3724301EA	2	
12	BOLT	Q/2A-CJ-61-M16X14	2	

GLB ENTERPRISES

FIGURE 100 HEATER CONTROL

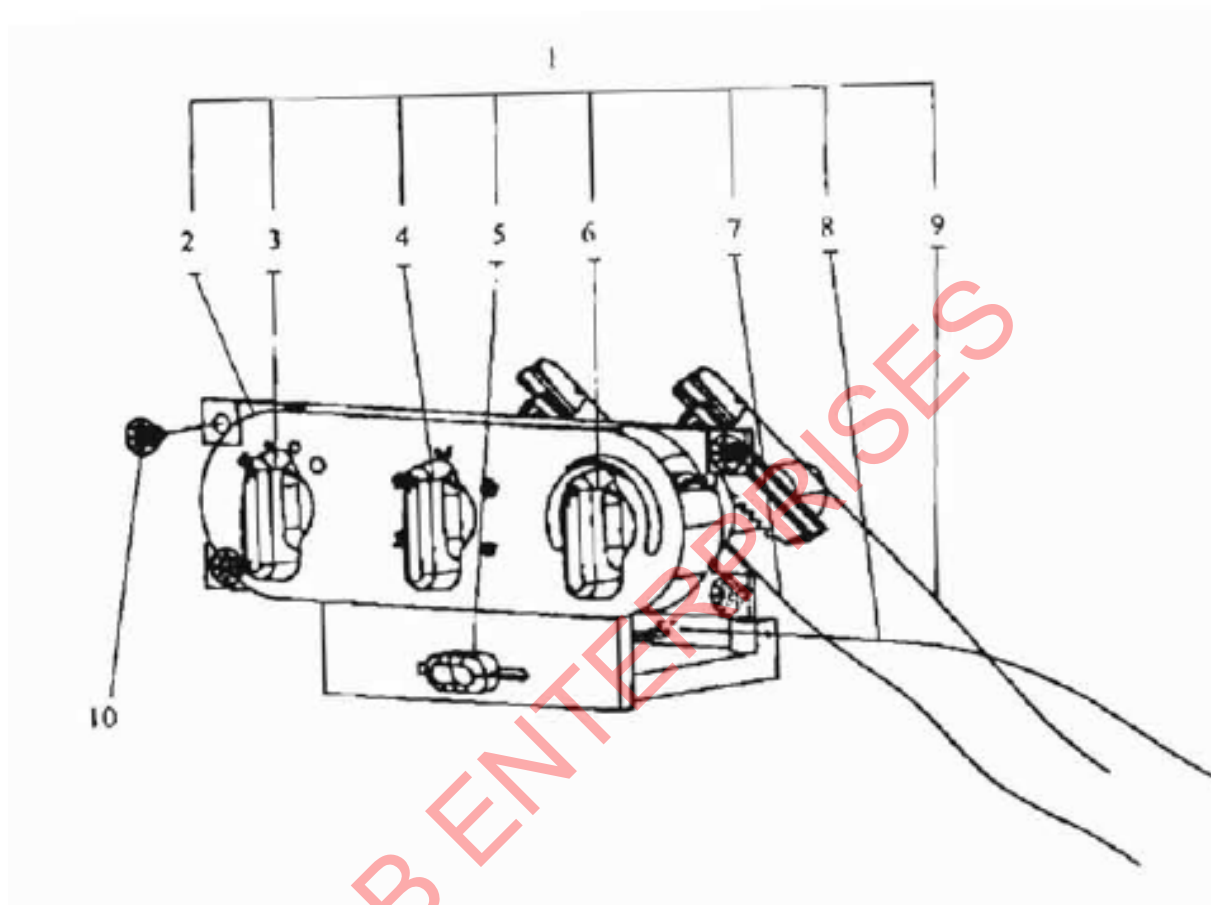


FIGURE 100 HEATER CONTROL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEATER CONTROL MECHANISM	AC81120001	1	
2	HEATER CONTROL MECHANISM PANEL	AC81120001-1	1	
3	FAN & MOTOR SWITCH	AC81120001-2	1	
4	CONTROL KNOB	AC81120001-3	1	
5	CONTROL KNOB RECIRCULATING/ OUTSIDE DAMPER CONTROL	AC81120001-4	1	
6	CONTROL KNOB TEMPERATURE CONTROL	AC81120001-5	1	
7	MODE CONTROL CABLE	AC81120001-6	1	
8	RECIRCULATING/ OUTSIDE DAMPER CONTROL CABLE	AC81120001-7	1	
9	TEMPERATURE CONTROL CABLE	AC81120001-8	1	
10	SCREW	Q/2A-CJ-13A-5X16	4	

GLB ENTERPRISES

FIGURE 101 AIR DUCTS

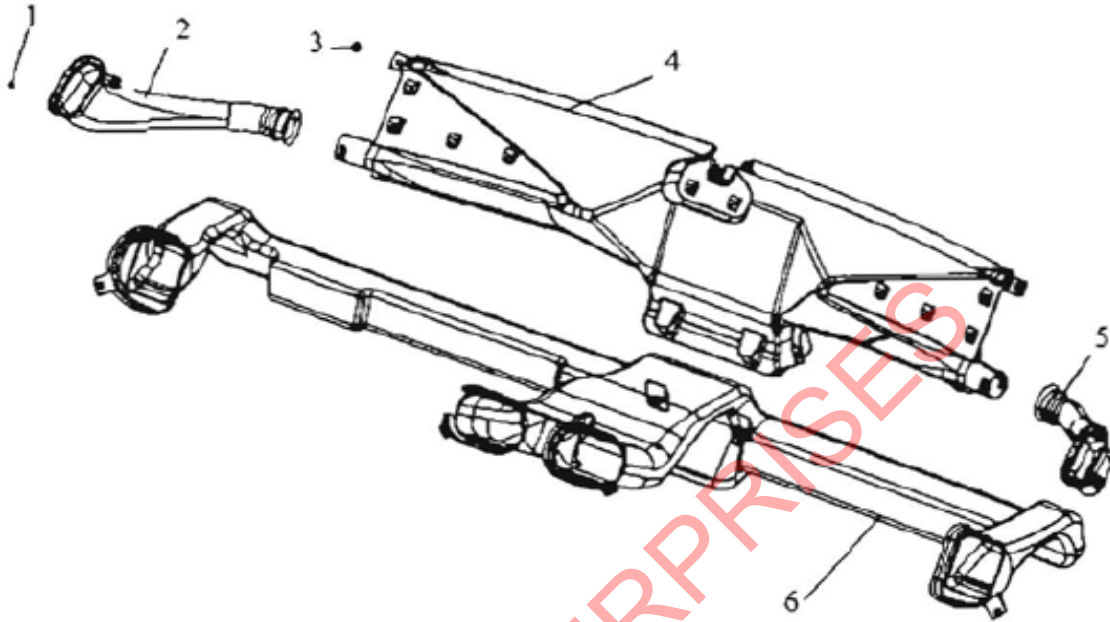


FIGURE 101 AIR DUCTS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SCREW	Q/2A-CJ-47A-ST3.5X13	8	
2	DEFROSTER DUCT LH	AC81100001	1	
3	SCREW	Q/2A-CJ-24A-5X14	5	
4	DEFROSTER NOZZLE	AC81100002	1	
5	DEFROSTER DUCT RH	AC81100004	1	
6	VENTILATION DUCT	AC81100003	1	

GLB ENTERPRISES

FIGURE 102 HEATER HOSES

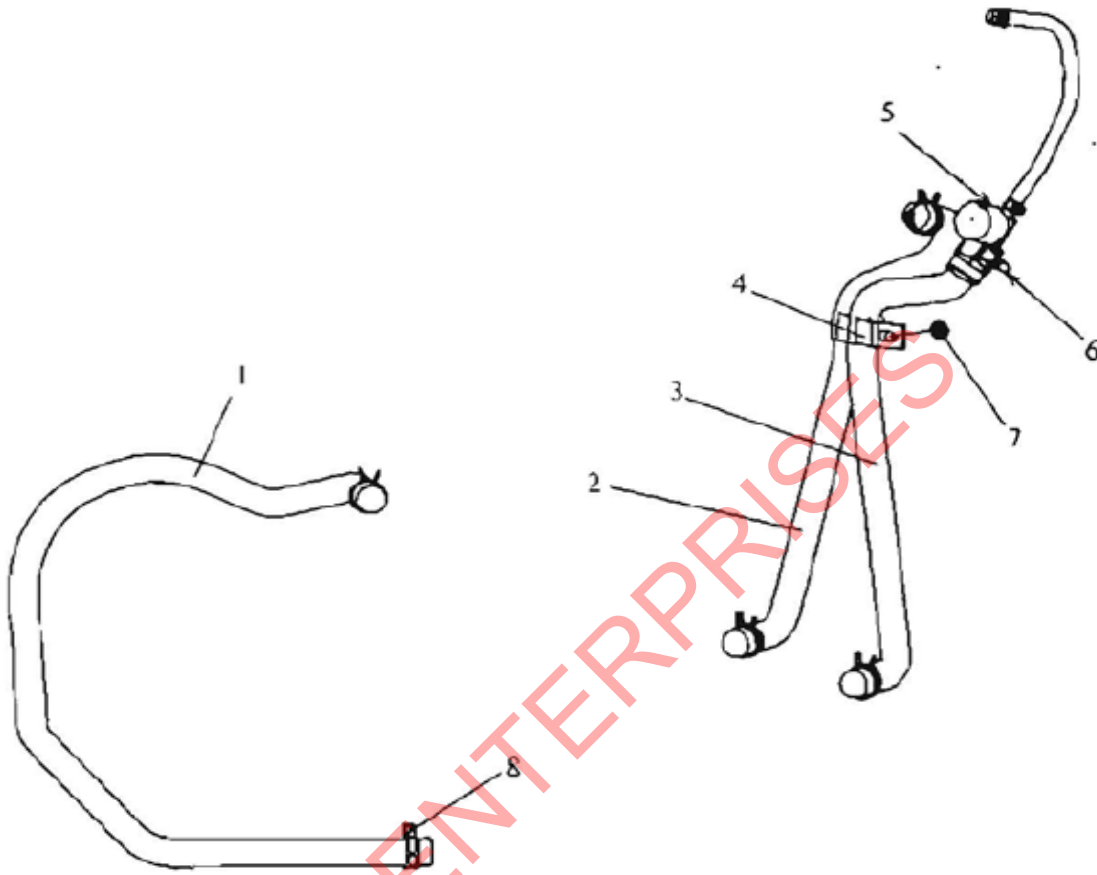


FIGURE 102 HEATER HOSES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ENGINE DISCHARGE WATER HOSE	AC81020001	1	
2	HEATER INTAKE WATER HOSE	AC81020002	1	
3	HEATER DISCHARGE WATER HOSE	AC81020003	1	
4	CLAMP	AC81020004	1	
5	3-WAY CONNECTOR	AC81010004	1	
6	CLAMP	Q/2A-CJ-336-217BF6	1	
7	NUT	Q34OB06T12	1	
8	CLAMP	HFJ8101027CA	5	

GLB ENTERPRISES

FIGURE 103 HEATER BOX W/O A/C


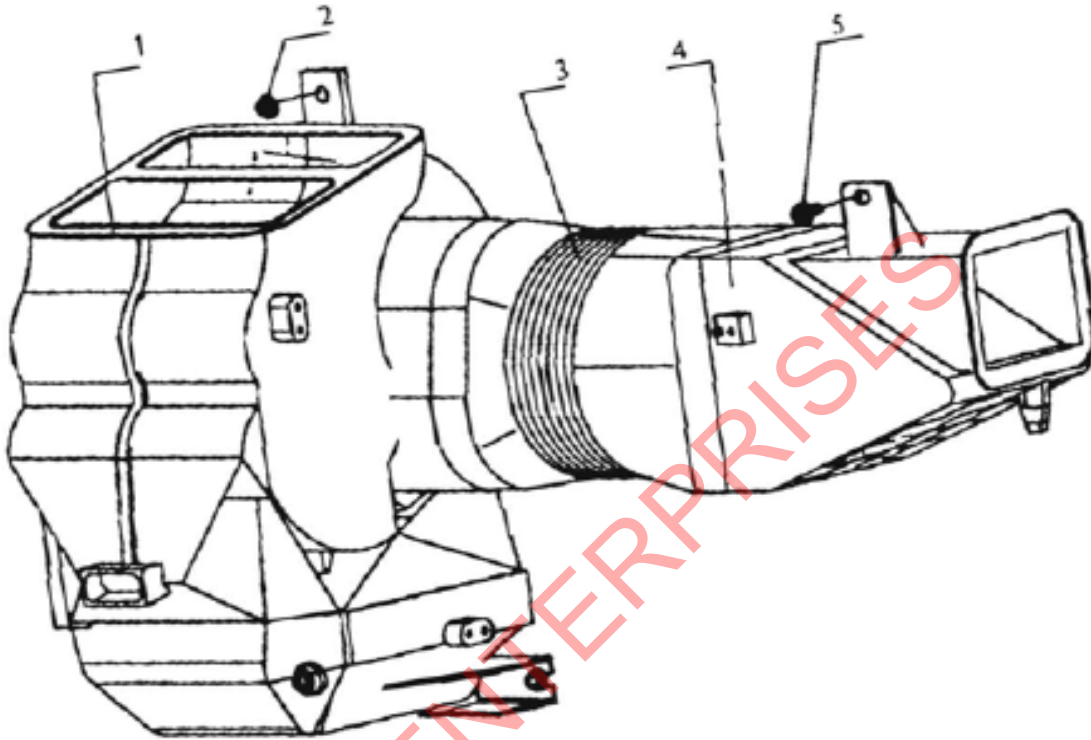


FIGURE 103 HEATER BOX W/O A/C

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEATER BOX ASM	AC81010001	1	
2	NUT	Q/2A-CJ-117-M6	3	
3	CONNECTOR	AC81010003	1	
4	BELLOWS	AC81010002	1	
5	BOLT	Q/2A-CJ-28-M6X16	1	

GLB ENTERPRISES

FIGURE 104 HEATER BOX ASM

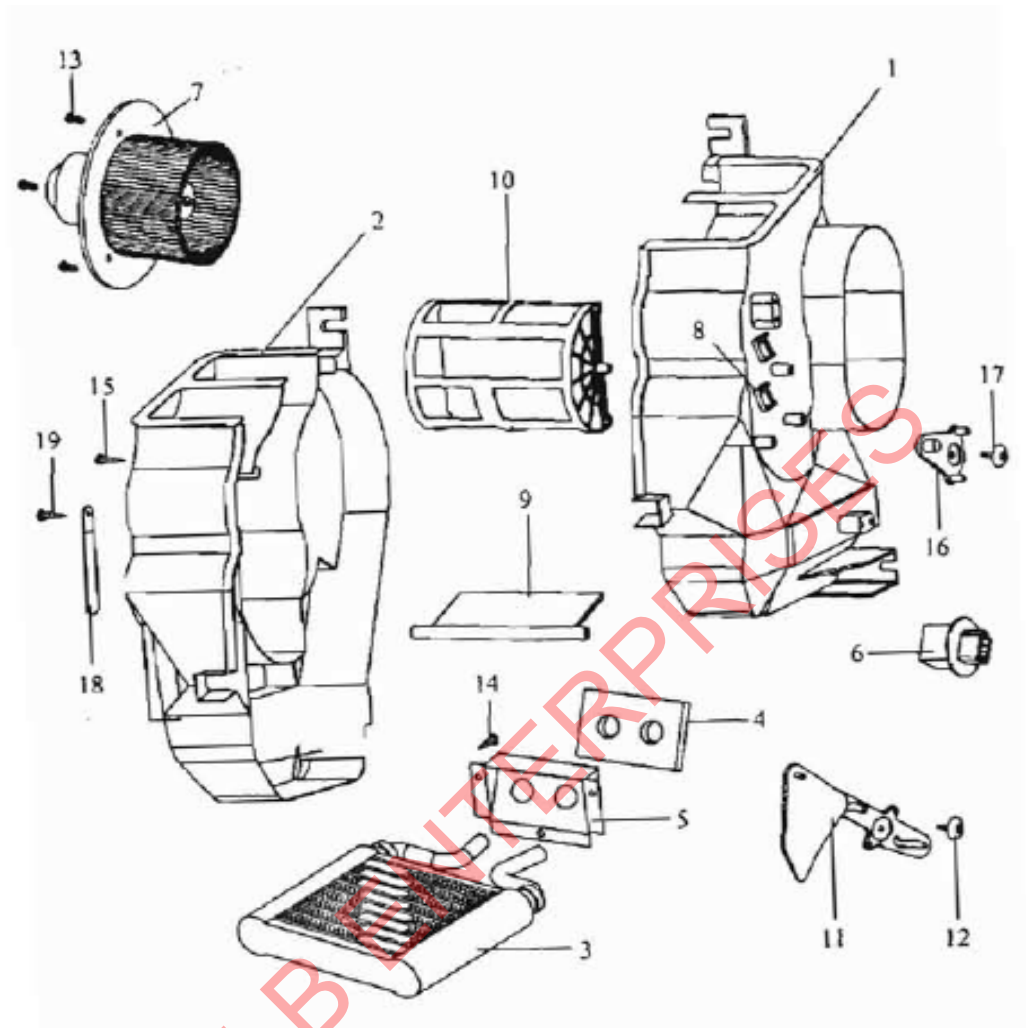

Copyright © GLB2014 R.26

FIGURE 104 HEATER BOX ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CASE RH	AC81010001-1	1	
2	CASE LH	AC81010001-2	1	
3	HEATER CORE	AC8101B010	1	5-3/4" X 7"
		AC8101B011	1	
4	SEAL	AC81010001-4	1	
5	FIXING PANEL	AC81010001-5	1	
6	RESISTOR	AC81010001-6	1	
7	FAN & MOTOR ASM	AC81010001-7	2	
8	CLIP	AC81010001-8	1	
9	TEMPERATURE CONTROL DAMPNER	AC81010001-9	1	
10	MODE CONTROL DAMPNER	AC81010001-10	1	
11	OPERATING LINK ASM	AC81010001-11	1	
12	SCREW	AC81010001-12	1	
13	SCREW	AC81010001-13	3	
14	SCREW	AC81010001-14	3	
15	SCREW	AC81010001-15	7	
16	ADJUSTOR	AC81010001-16	1	
17	SCREW	AC81010001-17	2	
18	CLAMP	AC81010001-18	1	
19	SCREW	AC81010001-19	1	

FIGURE 105 A/C PIPES & HOSES

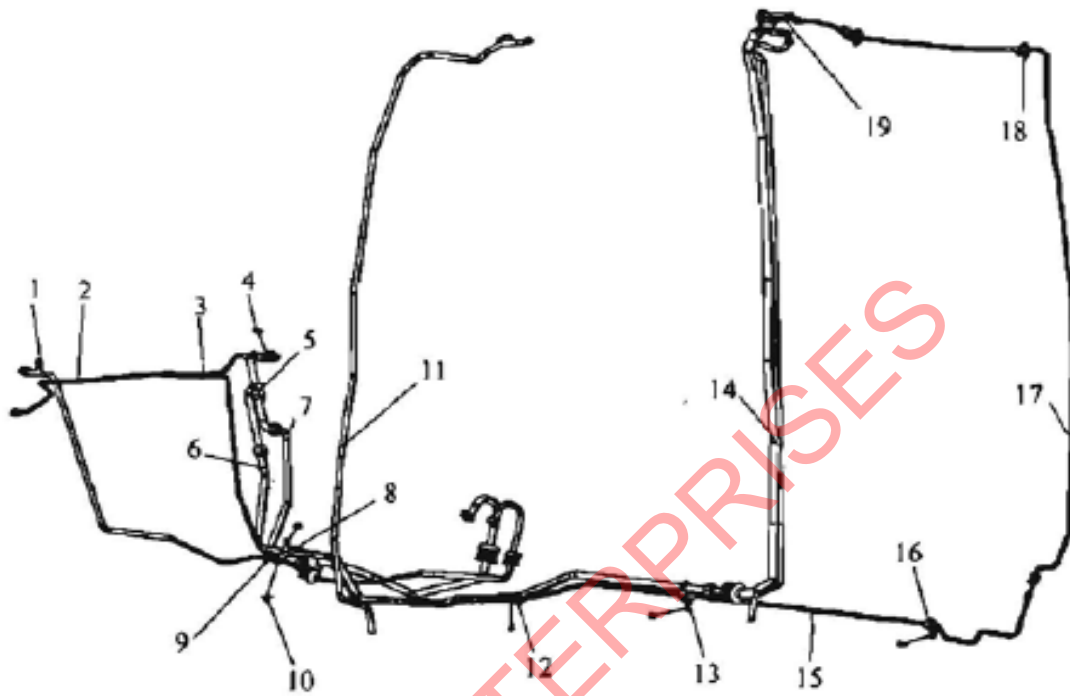
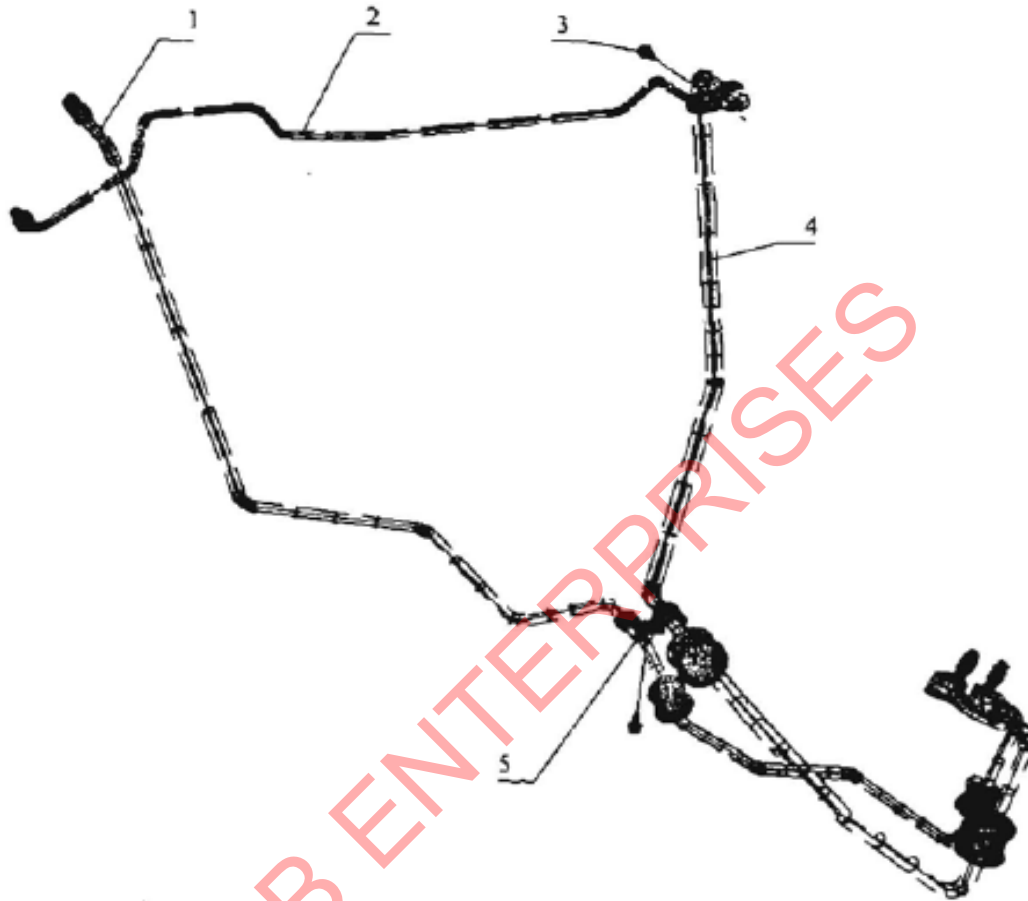


FIGURE 105 A/C PIPES & HOSES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	COMPRESSOR DISCHARGE HOSE	AC81080001	1	JSS96-HZ1A
		AC81080030	1	WHH13-066
2	3-WAY HIGHT PRESSURE PIPE	AC81080002	1	
3	HIGH PRESSURE PIPE A	AC81080004	1	
4	BOLT	Q/2A-CJ-36-M6X20	1	
5	3-WAY LOW PRESSURE PIPE	AC81080003	1	
6	LOW PRESSURE PIPE	AC81080009	1	
7	SOMPRESSOR SUCTION HOSE	AC81080005	1	
		AC81080031	1	
8	CLAMP C	AC81080014	1	
9	CLAMP B	AC81080015	1	
10	BOLT	A/2Q-CJ-36-M6X20	5	
	DISCHARGE WATER HOSE	AC81070013	2	
12	CLAMP A	AC81080013	1	
13	CLAMP B	AC81080012	1	
14	EVAP DISCHARGE HOSE	AC81080007	1	
15	HIGH PRESSURE PIPE B	AC81080006	1	
16	CLAMP A	AC81080011	1	
17	EVAP INTAKE HOSE	AC81080008	1	
18	CLAMP	HFJ3724101EA	2	
19	MUD GLUE	AC81080010	1	

**FIGURE 106 A/C PIPES & HOSES
(SINGLE FRONT EVAP STATUS)**

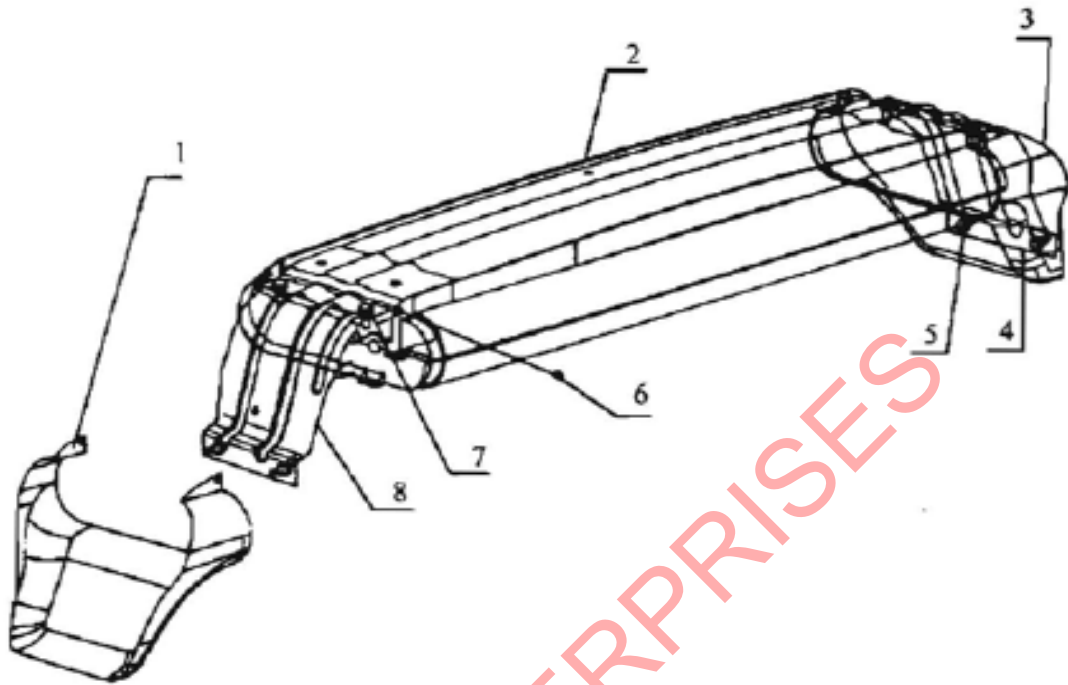


**FIGURE 106 A/C PIPES & HOSES
(SINGLE FRONT EVAP STATUS)**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	COMPRESSOR DISCHARGE HOSE	AC81080020	1	
2	HIGH PRESSURE PIPE	AC81080021	1	
3	BOLT	Q/2A-CJ-36-M6X20	2	
4	COMPRESSOR SUCTION HOSE	AC81080023	1	
5	CLAMP B	AC81080015	1	

GLB ENTERPRISES

FIGURE 107 UPPER EVAP



GLB ENTERPRISES

FIGURE 107 UPPER EVAP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER EVAP SIDE COVER LH	AC81070014	1	
2	UPPER EVAP ASM	AC81070011	1	
3	UPPER EVAP SIDE COVER RH	AC81070017	1	
4	UPPER EVAP BRACKET RH	AC81070017	1	
5	BOLT	Q/2A-CJ-36-M6X18	4	
6	SCREW	Q/2A-CJ-13A-4X8	4	
7	NUT	Q/2A-CJ-105-M6	4	
8	UPPER EVAP BRACKET LH	AC81070016	1	

GLB ENTERPRISES

FIGURE 108 UPPER EVAP ASM

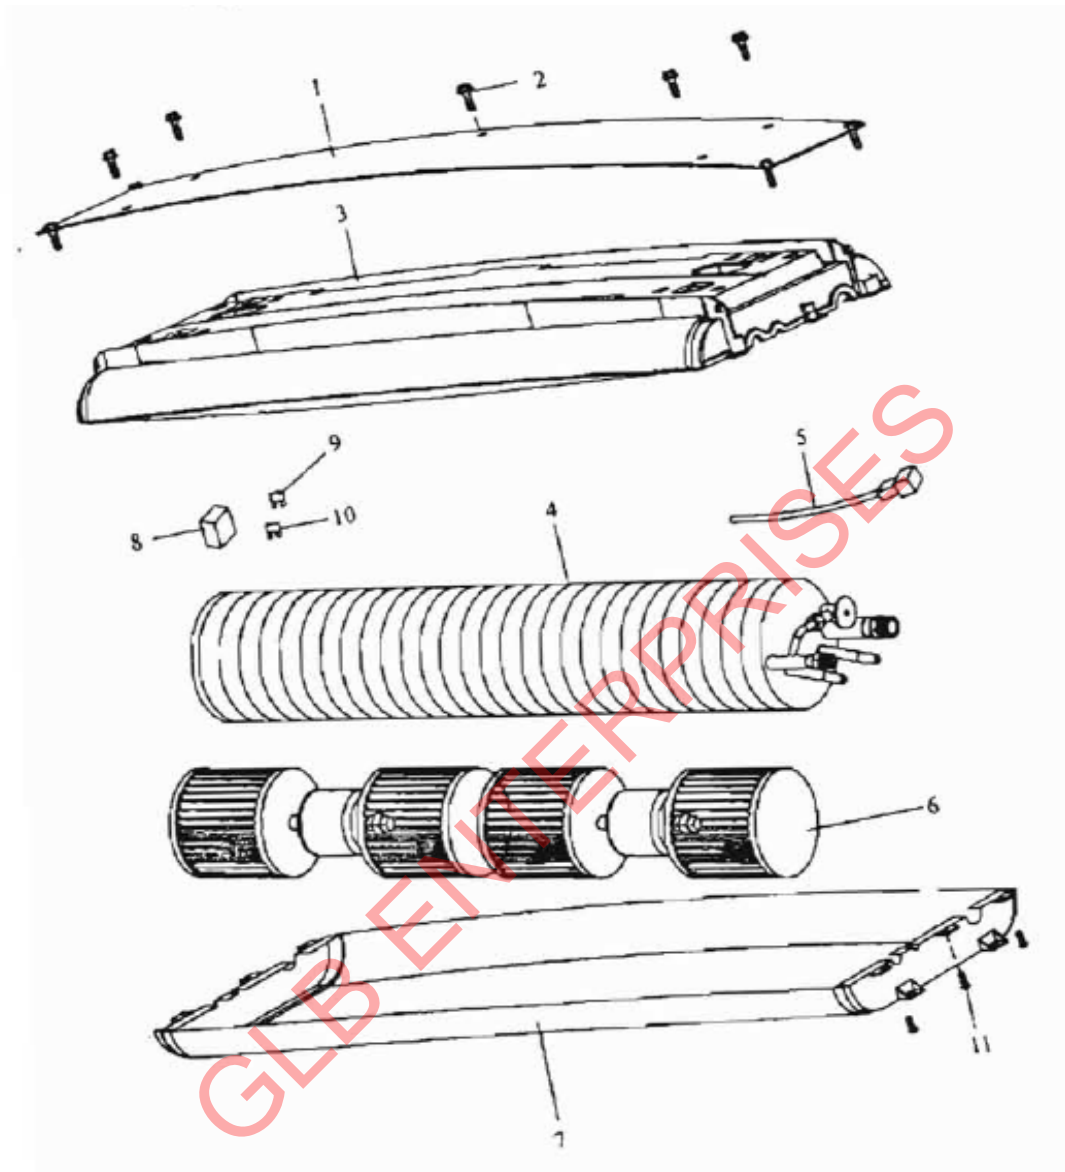


FIGURE 108 UPPER EVAP ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
	UPPER EVAP UPPER			
1	BRACKET	AC81070011-1	1	
2	BOLT	AC81070011-2	5	
3	UPPER CASE	AC81070011-3	1	
4	UPPER EVAP CORE	AC81070011-4	1	
5	WIRING HARNESS	AC81070011-5	1	
6	FAN & MOTOR	AC81070011-6	2	
7	LOWER CASE	AC81070011-7	1	
8	RELAY FUSE	AC81070011-8	1	
9	FUSE	AC81070011-9	1	
10	FUSE	AC81070011-10	1	
11	SCREW	AC81070011-11	6	

GLB ENTERPRISES

FIGURE 109 FRONT EVAP

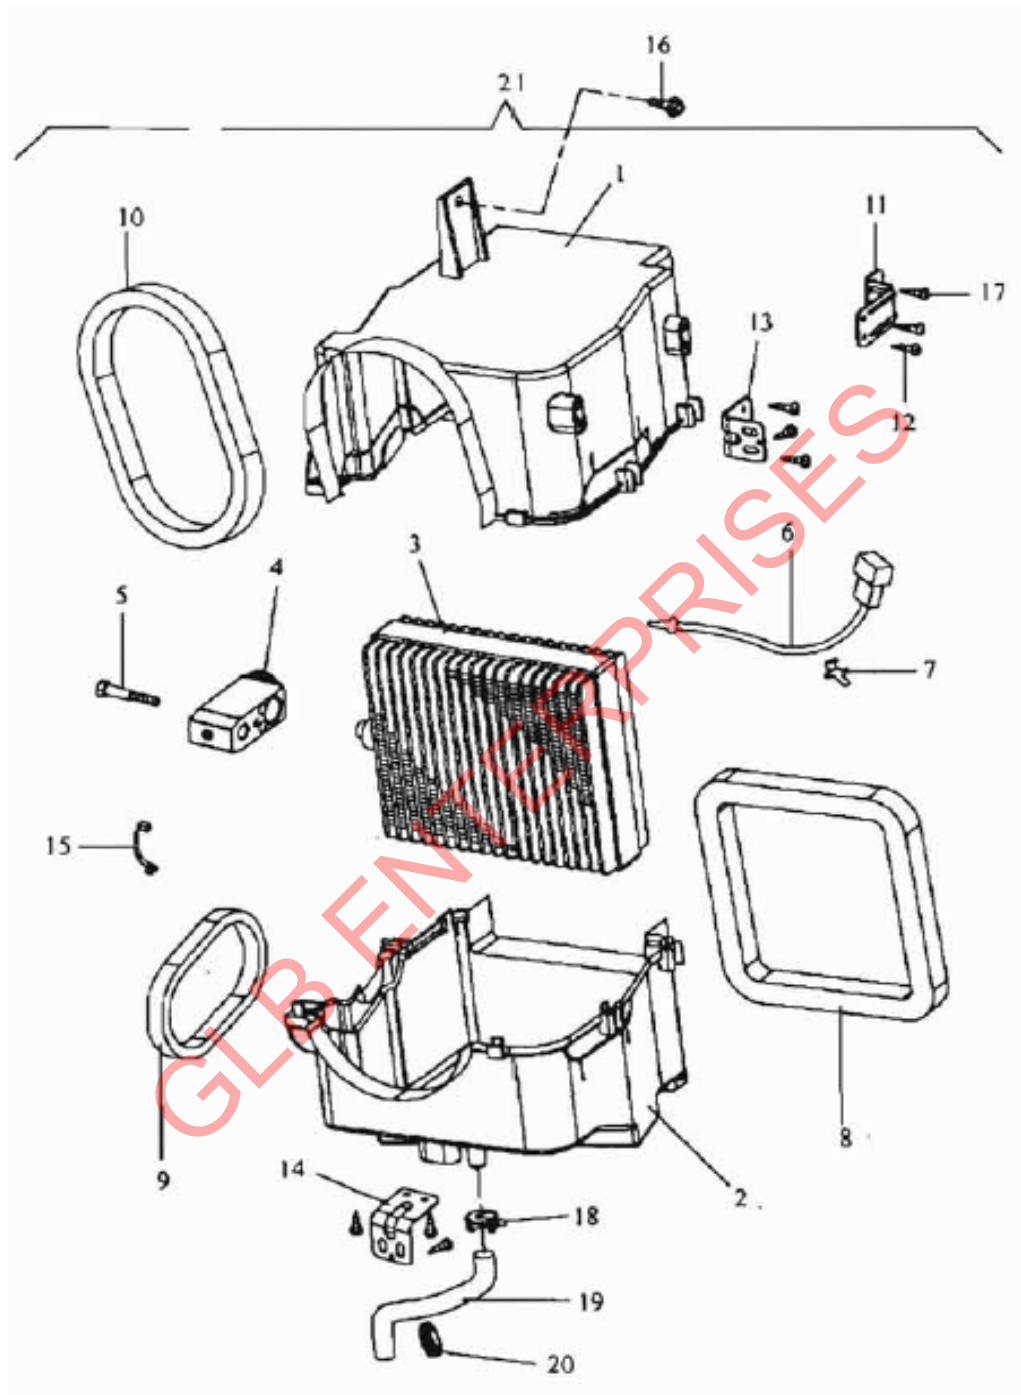


FIGURE 109 FRONT EVAP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER CASE	AC81070001-1	1	
2	LOWER CASE	AC81070001-2	1	
3	FRONT EVAP CORE	AC81070001-3	1	
4	EXPANSION VALVE	AC81070001-4	1	
5	BOLT	AC81070001-5	1	
6	TEMPERATURE SENSOR	AC81070001-6	1	
7	CLAMP	AC81070001-7	1	
8	CUSHION SEAL	AC81070001-8	1	
9	CUSHION SEAL	AC81070001-9	1	
10	CUSHION SEAL	AC81070001-10	1	
11	BRACKET B	AC81070001-11	1	
12	SCREW	AC81070001-12	6	
13	BRACKET A	AC81070001-13	1	
14	BRACKET C	AC81070001-14	1	
15	CLIP	AC81070001-15	5	
16	BOLT	Q/2A-CJ-28-M6X16	1	
17	SCREW	Q271B4813	3	
18	CLAMP	AC81070004	1	
	FRONT EVAP DISCHARGE WATER			
19	HOSE	AC81070004	1	
20	CLAMP	AC81070002	1	
21	FRONT EVAP ASM	AC81070001	1	

FIGURE 110 CONDSER

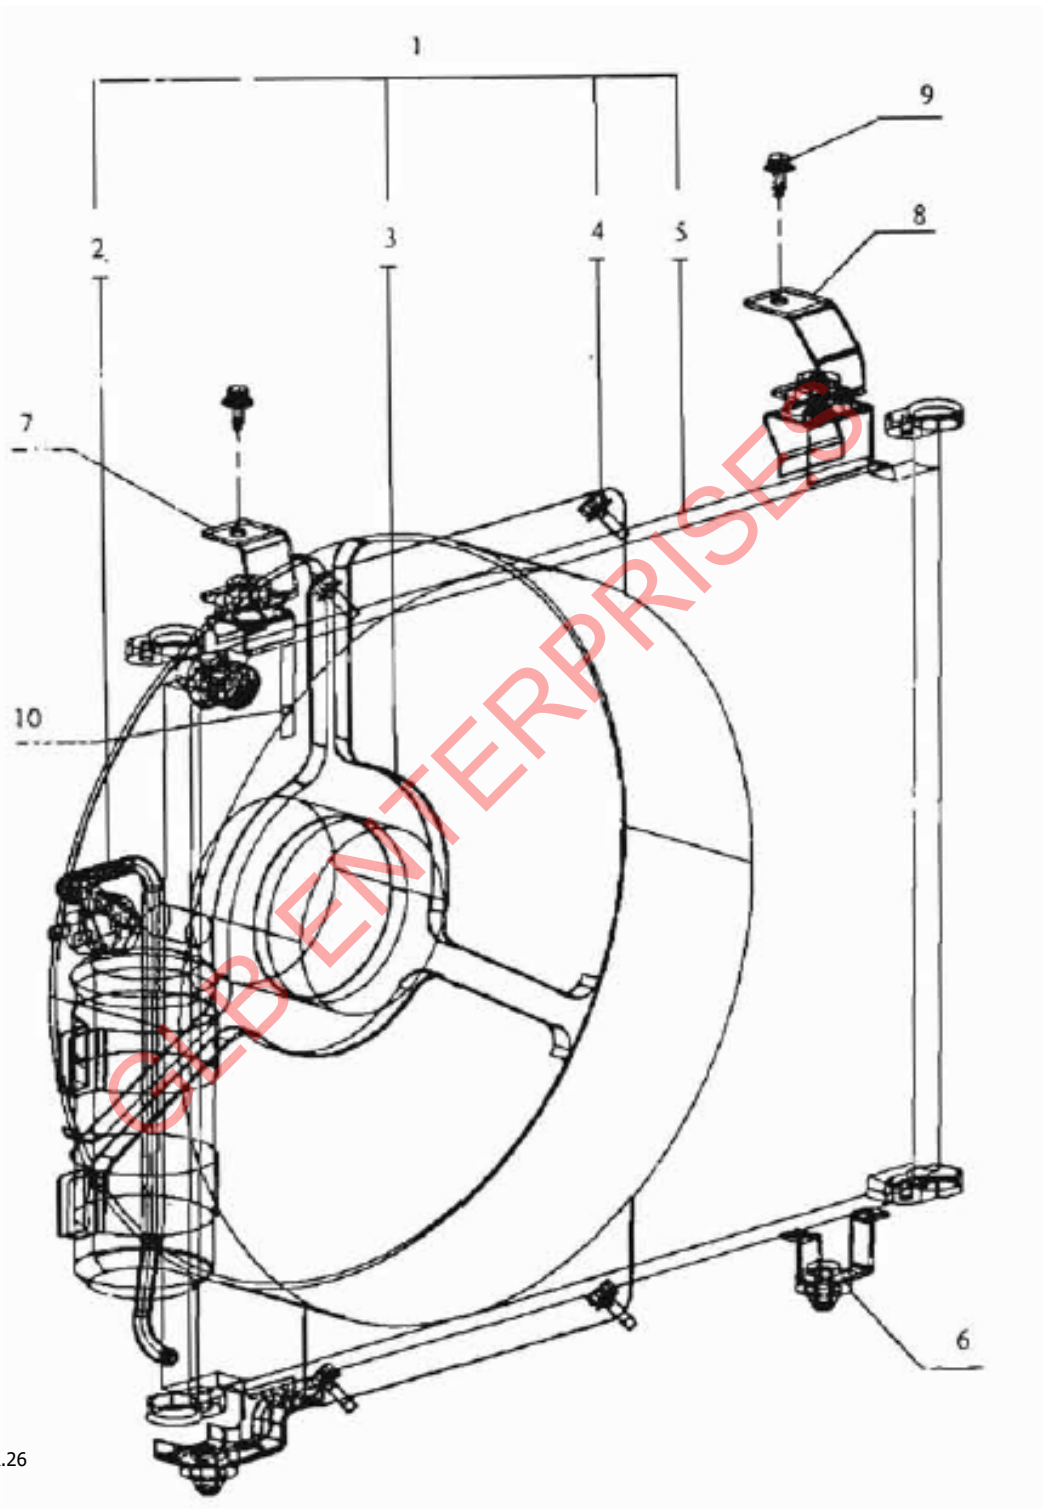
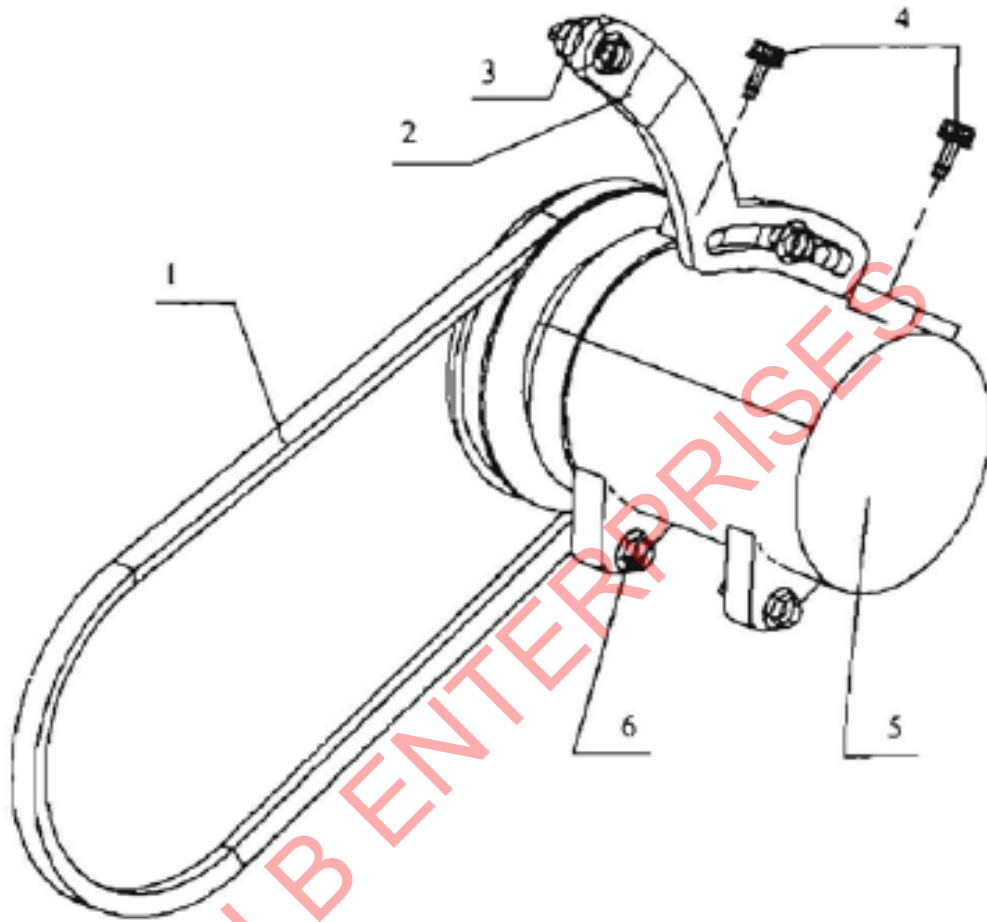


FIGURE 110 CONDSENER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CONDENSER ASM	AC81050001	1	
2	RECEIVER	AC81050001-1	1	
	CONDENSER FAN &			
3	MOTOR	AC81050001-2	1	
4	BOLT	AC81050001-3	4	
5	CONDENSER CORE	AC81050001-4	1	
6	RUBBER CUSHION	AC81050001-5	2	
	CONDENSER BRACKET			
7	LH	AC81050002	1	
	CONDERSER BRACKET			
8	RH	AC81050003	1	
9	BOLT	Q/2A-CJ-296-M6X18-8.8	2	
10	CLAMP	AC81050001-6	1	

GLB ENTERPRISES

**FIGURE 111 A/C COMPRESSOR
(JSS96-HA1A)**



**FIGURE 111 A/C COMPRESSOR
(JSS96-HA1A)**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	A/C DRIVE BELT	AC81040003	1	
2	COMPRESSOR			
2	ADJUSTING BRACKET	AC81040002	1	
3	NUT	Q/2A-CJ-105-M8-8	1	
4	BOLT	AC81040001-1	2	
5	A/C COMPRESSOR ASM	AC81040001-1	1	
6	BOLT	Q/2A-CJ-101-M8X25-8.8	4	

GLB ENTERPRISES

FIGURE 112 A/C COMPRESSOR (SP-10)

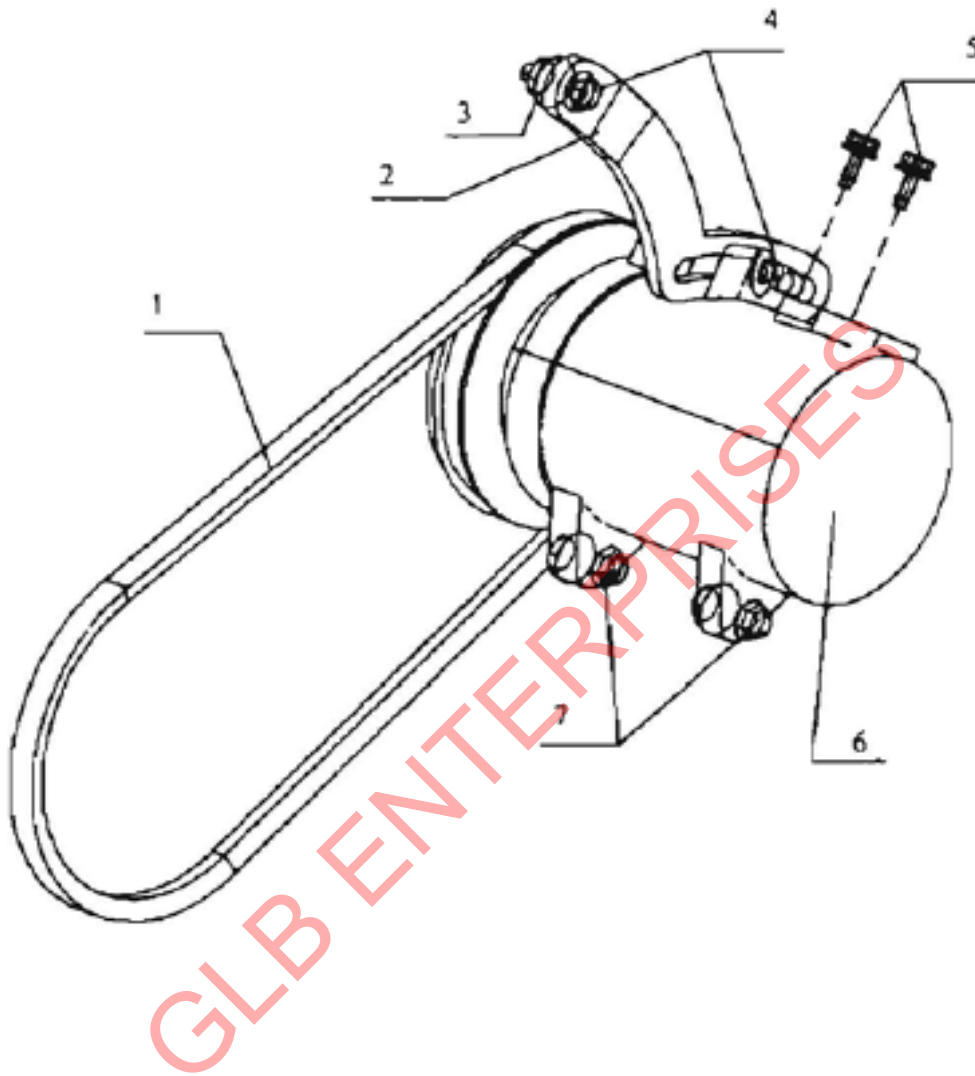
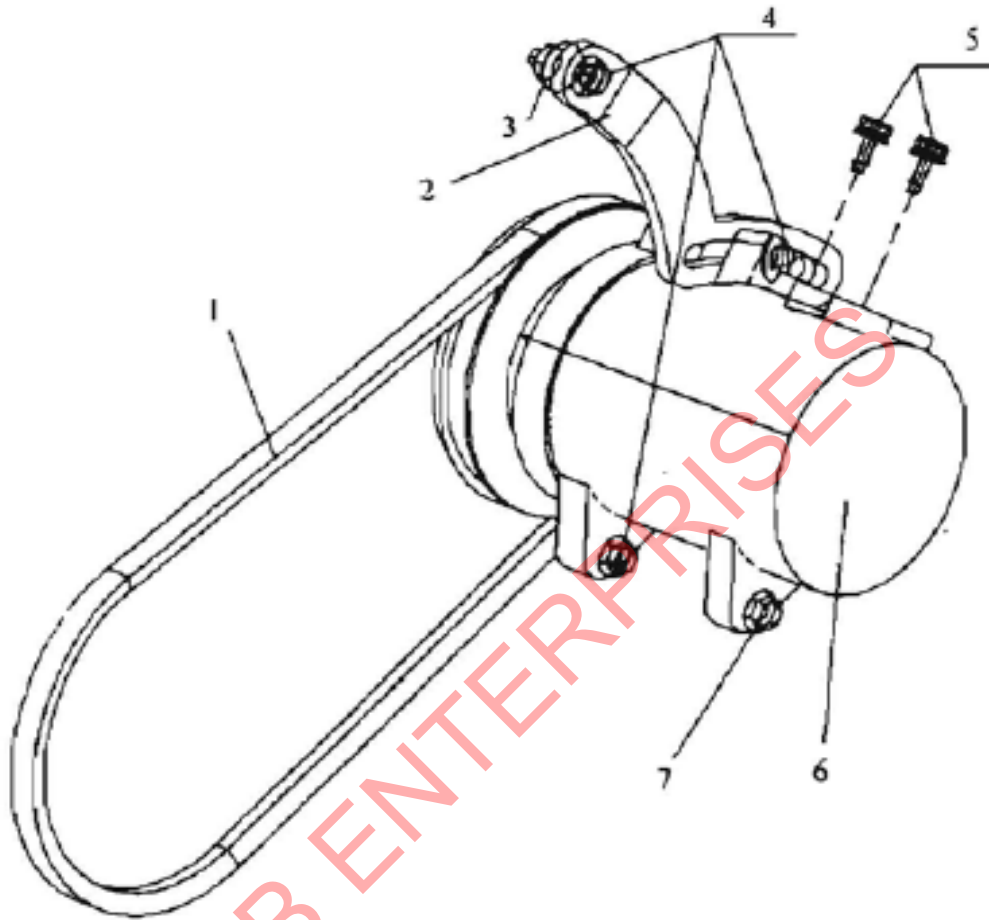


FIGURE 112 A/C COMPRESSOR (SP-10)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	A/C DRIVE BELT	AC81040003	1	
	COMPRESSOR			
2	ADJUSTING BRACKET	HFJ8104006DG	1	
3	NUT	Q/2A-CJ-105-M8-8	3	
4	BOLT	Q/2A-CJ-101-M8-25-8.8	2	
5	BOLT	HFJ8104100DG-1	2	
6	COMPRESSOR ASM	HFJ8104100DG	1	
7	BOLT	Q/2A-CJ-101-M8-35-8.8	2	

GLB ENTERPRISES

**FIGURE 113 A/C COMPRESSOR
(WXH13-066)**



**FIGURE 113 A/C COMPRESSOR
(WXH13-066)**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	A/C DRIVE BELT	AC81040013	1	
2	COMPRESSOR			
2	ADJUSTING BRACKET	AC81040012	1	
3	NUT	Q/2A-CJ-105-M8-8	1	
4	BOLT	Q/2A-CJ-101-M8X25-8.8	3	
5	BOLT	AC81040011-1	2	
6	COMPRESSOR ASM	AC81040011	1	
7	BOLT	Q/2A-CJ-101-M8-35-8.8	1	

GLB ENTERPRISES

FIGURE 114 CONTROL BOX ASM

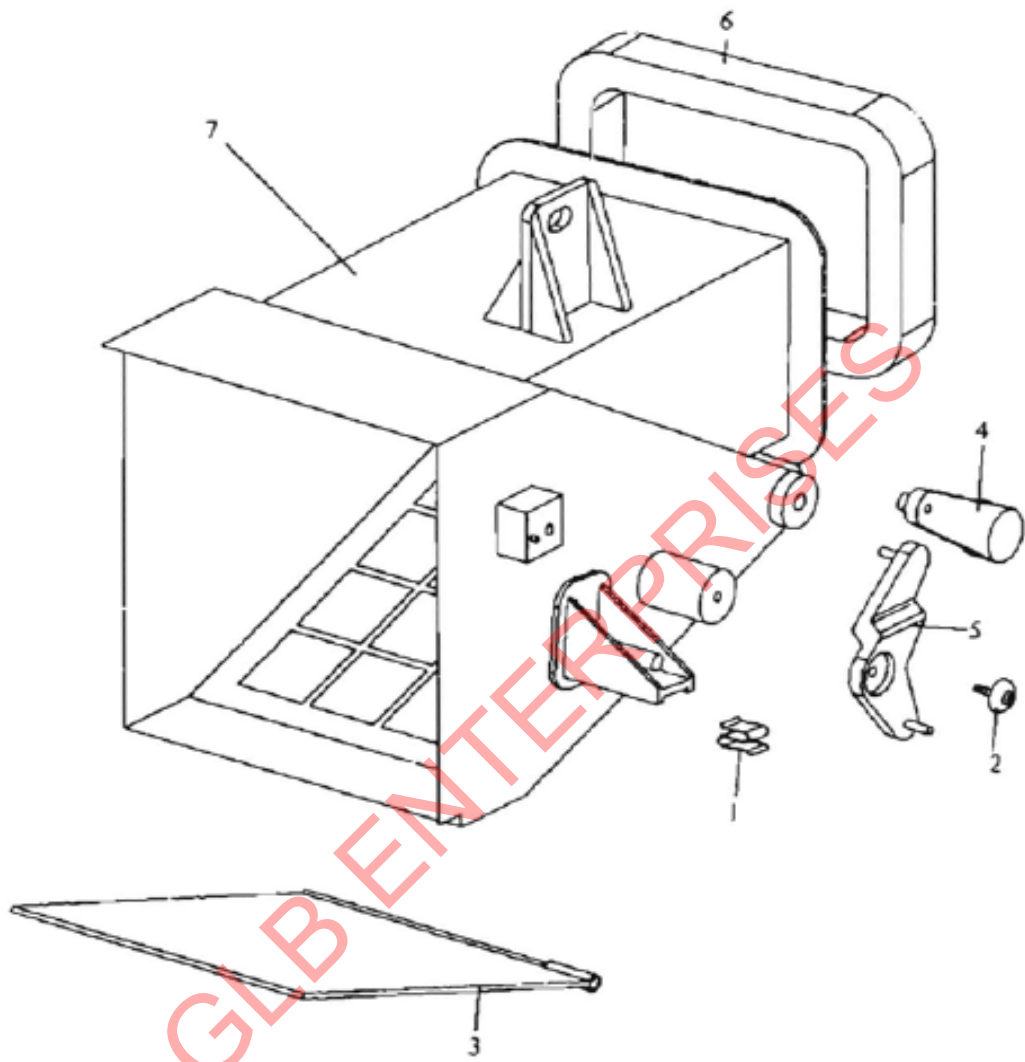


FIGURE 114 CONTROL BOX ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CLIP	AC81010002-1	1	
2	SCREW	AC81010002-2	1	
3	DAMPNER	AC81010002-3	1	
4	DAMPNER CONTROL LINK	AC81010002-4	1	
5	DAMPNER OPERTING LINK	AC81010002-5	1	
6	INSULATOR SEAL	AC81010002-6	1	
7	CASE	AC81010002-7	1	

GLB ENTERPRISES

FIGURE 115 VAN BODY ASM

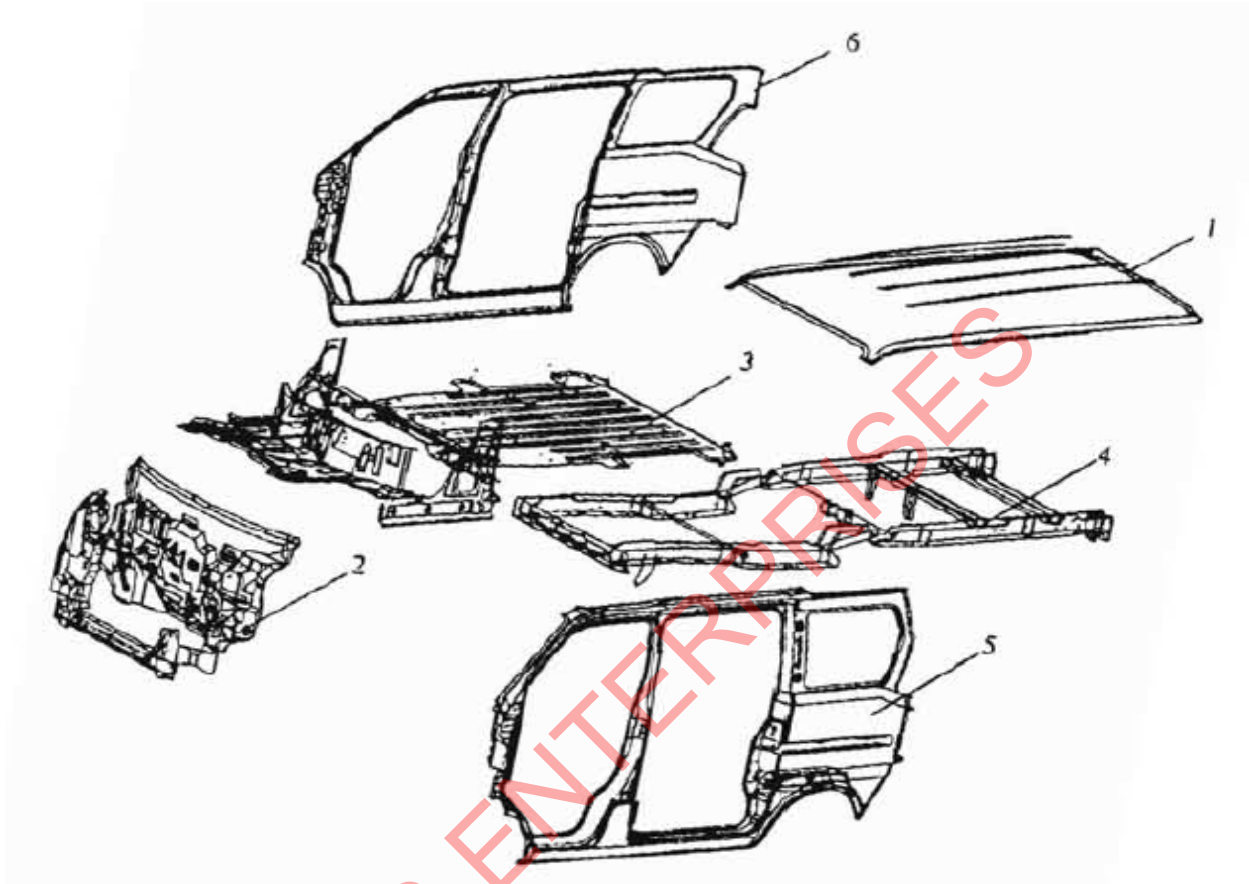


FIGURE 115 VAN BODY ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ROOF PANEL ASM	5701AC010	1	
2	UNER BODY ASM	8400AC010	1	
3	FLOOR ASM	5101AC010	1	
4	FRAME ASM	2801AC010	1	5-SPEED
		2801AC050		4-SPEED
		2801AC070		5-SPEED
		2801AC080		4-SPEED
		2801AC090		5-SPEED
		2801AC100		4-SPEED
		2801AC110		5-SPEED
		2801AC120		4-SPEED
5	BODY SIDE ASM LH	5401AC010	1	STANDARD TRIM
		5401AC030		DELUX TRIM
		5401AC050		
		5401AC070		
		5401AC110		
		5401AC130		
		5401AC150		
		5401AC170		
		5401AC210		
6	BODY SIDE ASM RH	5401AC020	1	STANDARD TRIM
		5401AC040		DELUX TRIM
		5401AC060		
		5401AC080		
		5401AC120		

GLB ENTERPRISES

FIGURE 116 VAN HEAD LINER

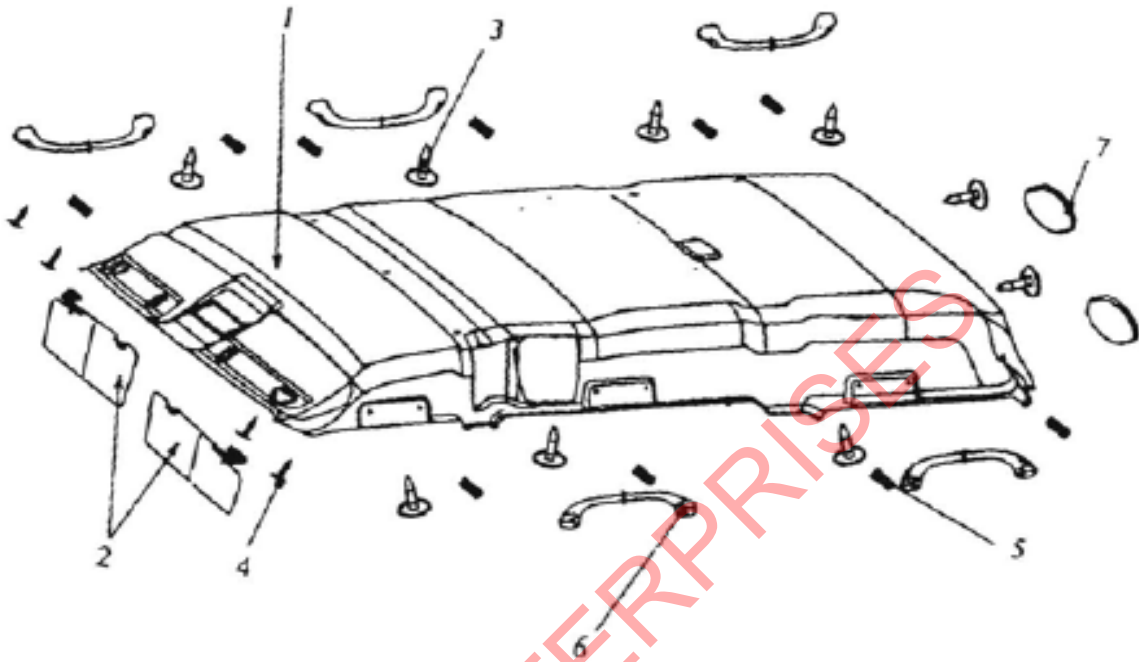


FIGURE 116 VAN HEAD LINER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD LINER	AC57021102	1	W/ AIR
		AC57021103	1	W/ O AIR
2	SUN VISOR LH	AC82041100	1	
	SUN VISOR RH	AC82041200	1	
3	CLIP	Q/2A-CJ-92C	9	
4	SCREW	Q/2A-CJ-20A-5X16	4	
5	BOLT	Q/2A-CJ-118-M6X25	10	
6	HAND GRAB	AC57022101	5	
	TAIL DOOR HING			
7	ADJUSTING CAP	AC5702112	2	

GLB ENTERPRISES

FIGURE 117 EXTERNAL SEALS & TRIM

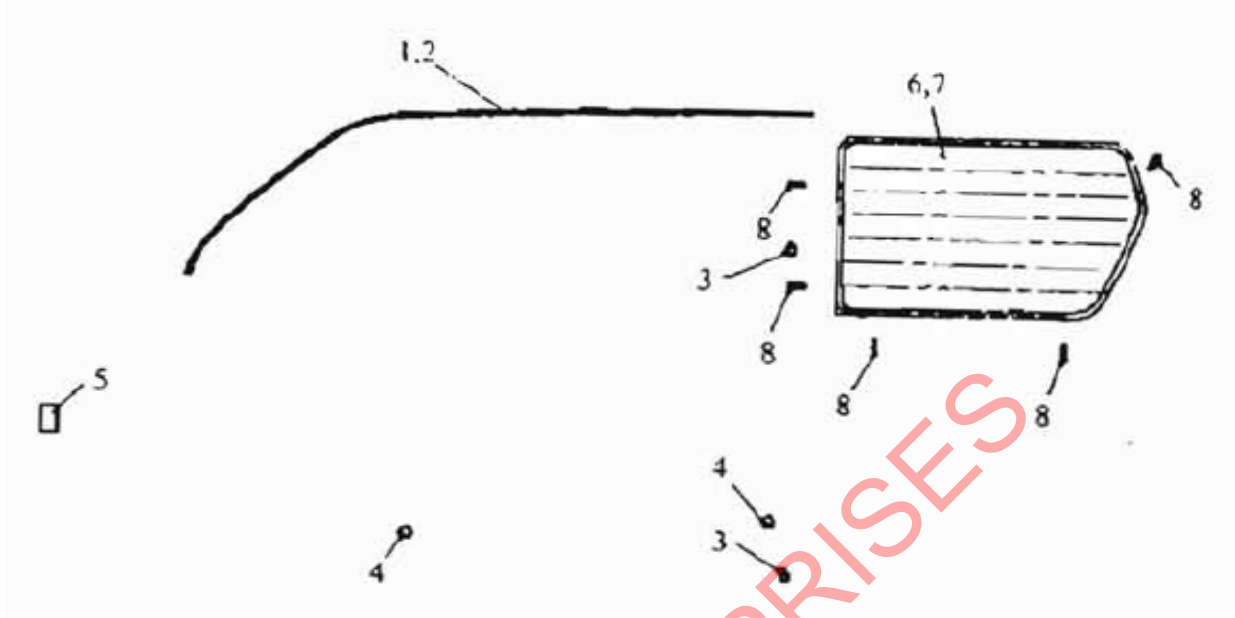


FIGURE 117 EXTERNAL SEALS & TRIM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WATER PROOF SEAL UPPER LH	AC54000100	1	
2	WATER PROOF SEAL UPPER RH	AC54000200	1	
3	PLUG	Q/2A-CJ-387	4	
4	PLUG	HFJ5400101DE	4	
5	SEAL PATCH	HFJ6300008FA	2	
6	SIDE GLASS PARTITION LH	AC54000300	1	
	SIDE GLASS PARTITION RH	AC54000400	1	
7	RIVET	Q4400508	10	

GLB ENTERPRISES

FIGURE 118 SIDE GLASS (VAN)

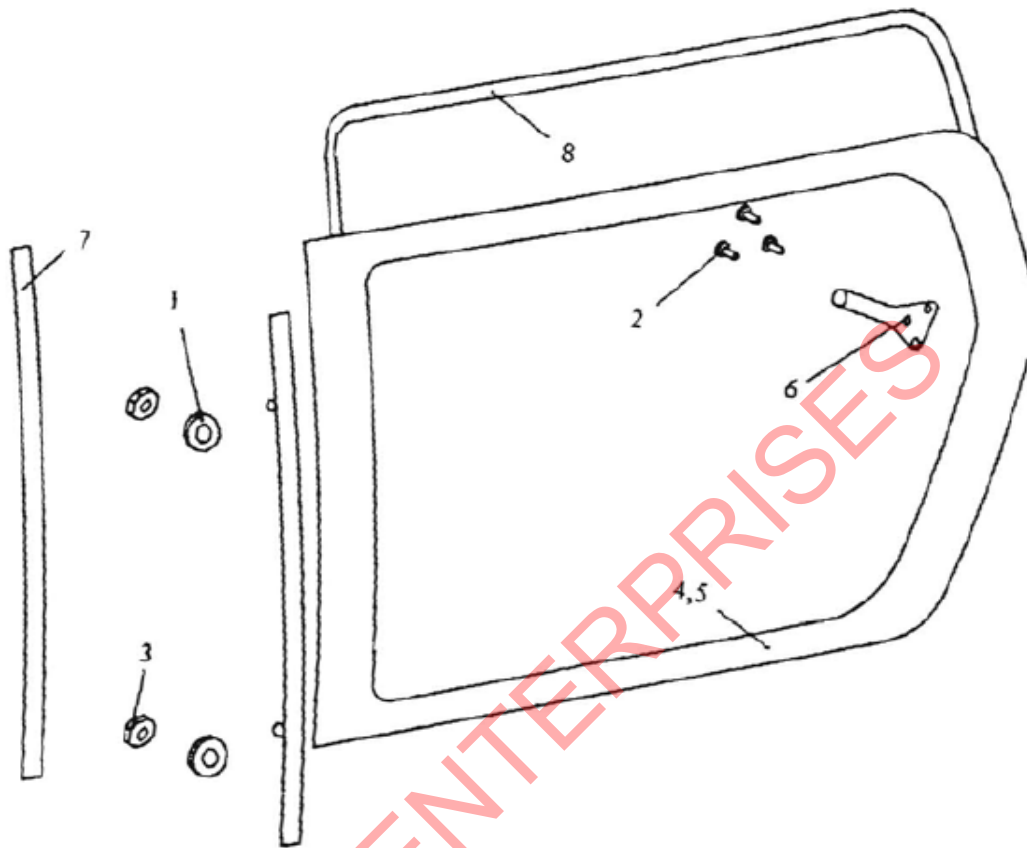


FIGURE 118 SIDE GLASS (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	GROMMET	Q/2A-CJ-482	4	
2	BOLT	Q/2A-CJ-28A-M6X25	6	
3	NUT	Q/2A-CJ-286-M6	4	
4	SIDE GLASS ASM LH	AC54031001	1	
5	SIDE GLASS ASM RH	AC54031002	1	
6	SIDE GLASS STRIKER ASM	AC54031007	2	
7	SIDE GLASS DUSTPROOF SEAL	AC54031009	2	
8	SIDE GLASS SEAL LH/RH	AC54031010		

GLB ENTERPRISES

FIGURE 119 A-PILLAR TRIM

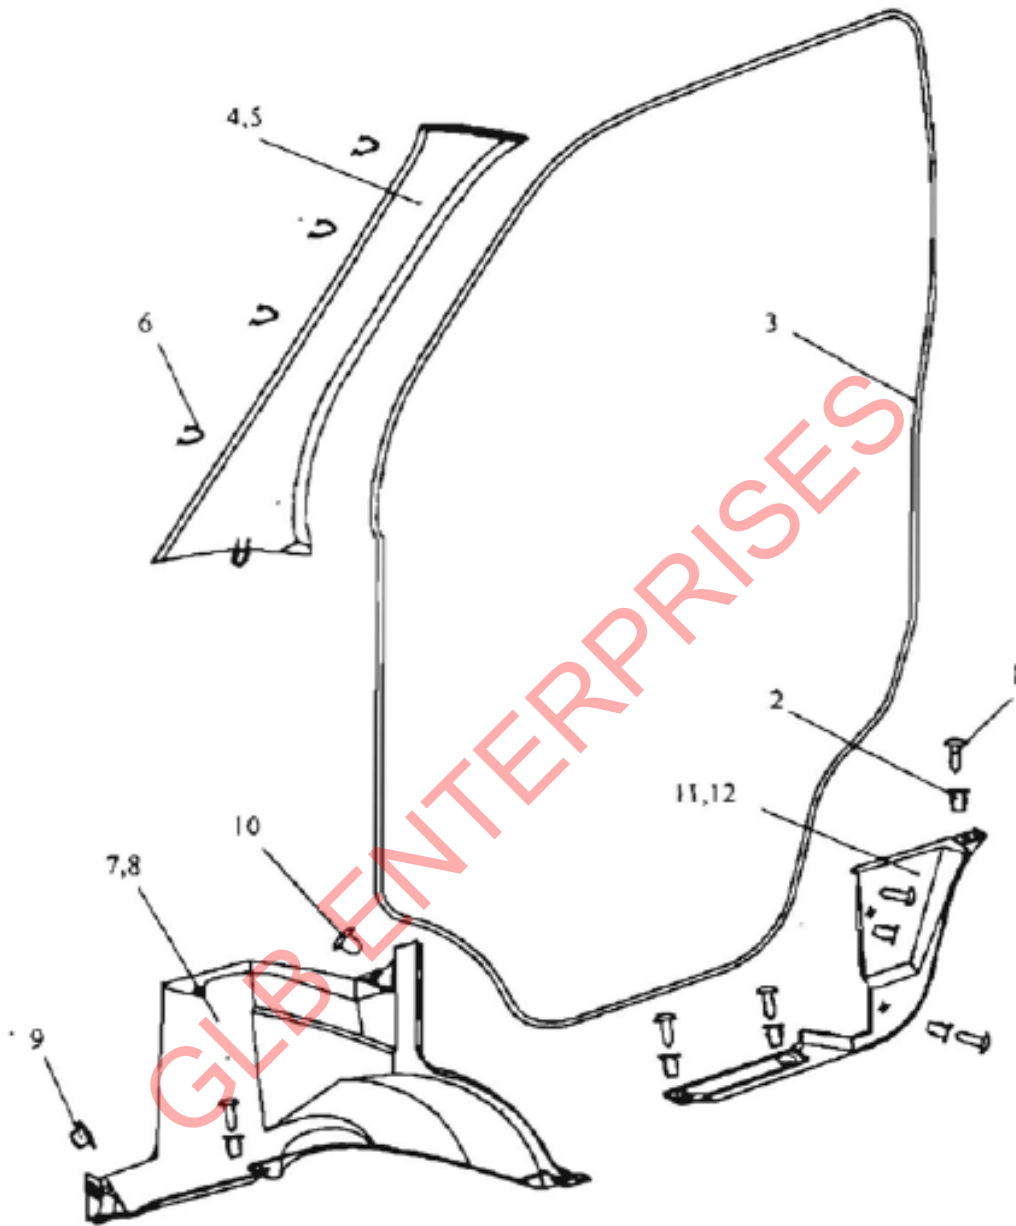


FIGURE 119 A-PILLAR TRIM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SCREW	Q/2A-CJ-104-4.8X20	12	
2	CLIP	Q/2A-CJ-319A	12	
	FRONT DOOR SEAL			
3	LH/RH	AC54020100	2	
	A-PILLAR TRIM UPPER			
4	LH	AC54021001	1	
	A-PILLAR TRIM UPPER			
5	LH	AC54021002	1	
6	SPRING CLIP	Q/2A-CJ-391	8	
	A-PILLAR TRIM LOWER			
7	LH	AC54021003	1	
	A-PILLAR TRIM LOWER			
8	RH	AC54021004	1	
9	CLIP	Q/2A-CJ-321	2	
10	CLIP	Q/2A-CJ-135	2	
	FRONT SILL GARNISH			
11	LH	AC54021005	1	
	FRONT SILL GARNISH			
12	RH	AC54021006	1	

FIGURE 120 CENTER-PILLAR TRIM (DELUXE)

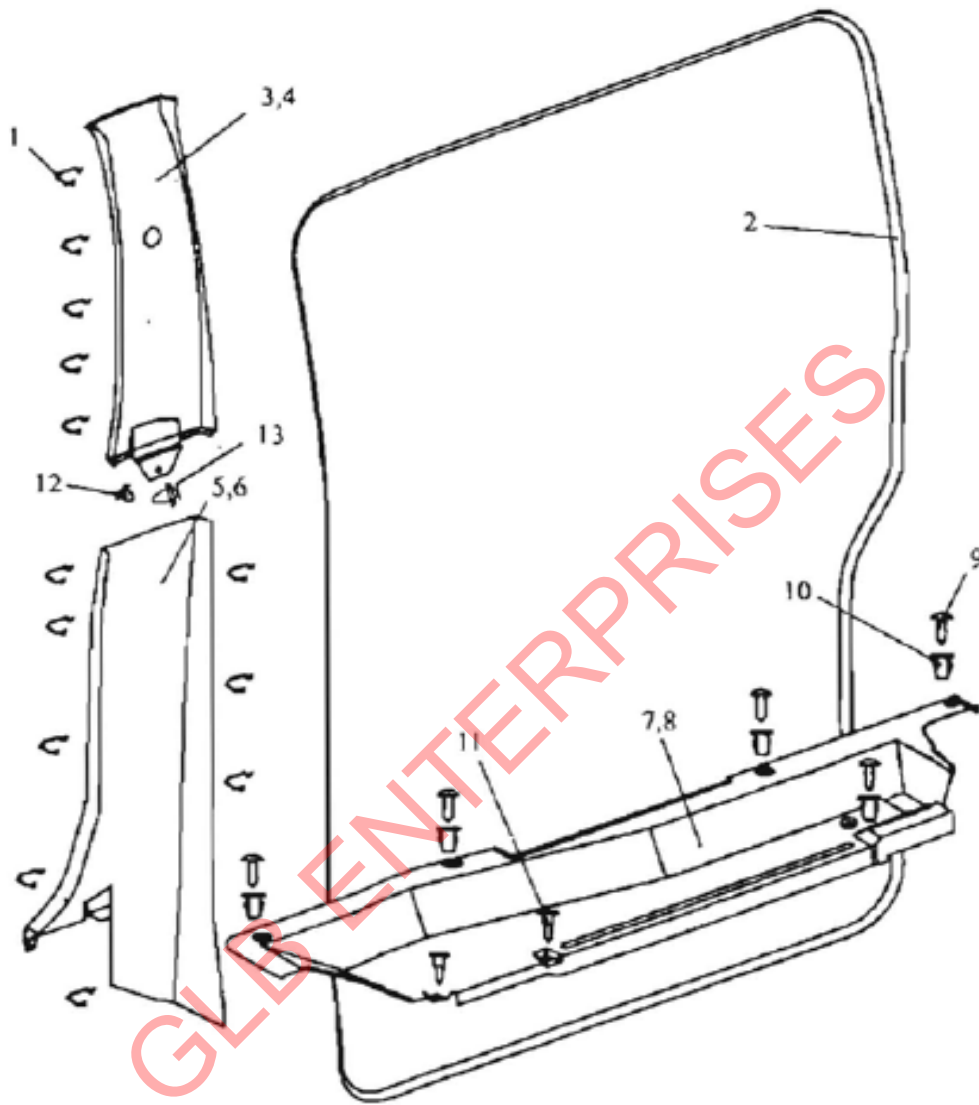


FIGURE 120 CENTER-PILLAR TRIM (DELUXE)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SPRING CLIP	Q/2A-CJ-391	26	
2	REAR DOOR SEAL LH	AC54020200	1	
3	REAR DOOR SEAL RH	AC54020201	1	
4	CENTER PILLAR TRIM UPPER LH	AC54022003	1	
5	CENTER PILLAR TRIM UPPER RH	AC54022004	1	
6	CENTER PILLAR TRIM LOWER LH	AC54022005	1	
7	CENTER PILLAR TRIM LOWER RH	AC54022006	1	
8	GARNISH REAR FLOOR LH	AC54022007	1	
9	GARNISH REAR FLOOR RH	AC54022008	1	
10	SCREW	Q/2A-CJ-104-4.8X20	10	
11	CLIP	Q/2A-CJ-319A	10	
12	CLIP COMBINATION	Q/2A-CJ-301	4	
13	CLIP	Q/2A-CJ-312	2	

FIGURE 121 CENTER-PILLAR TRIM (STANDARD)

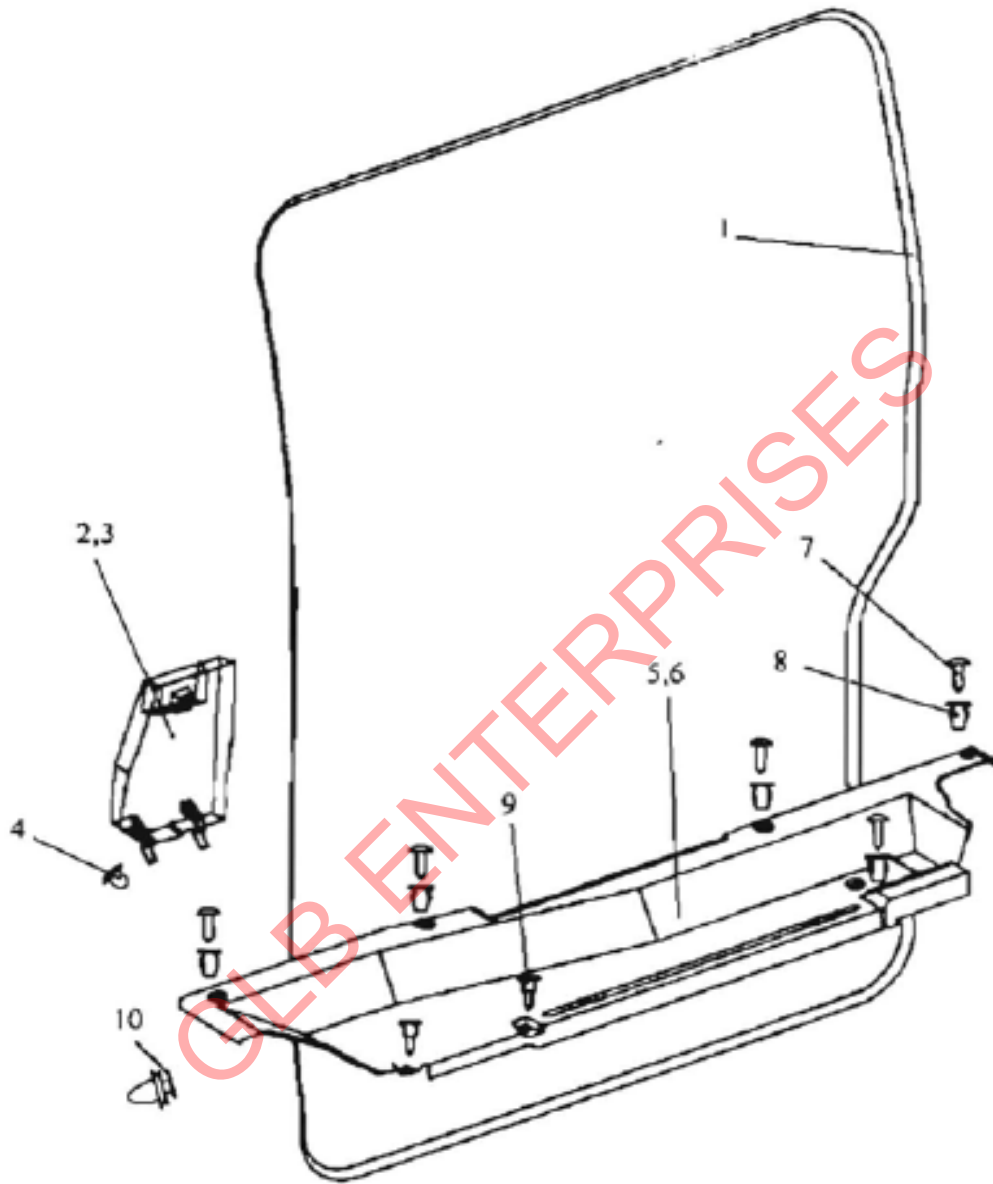
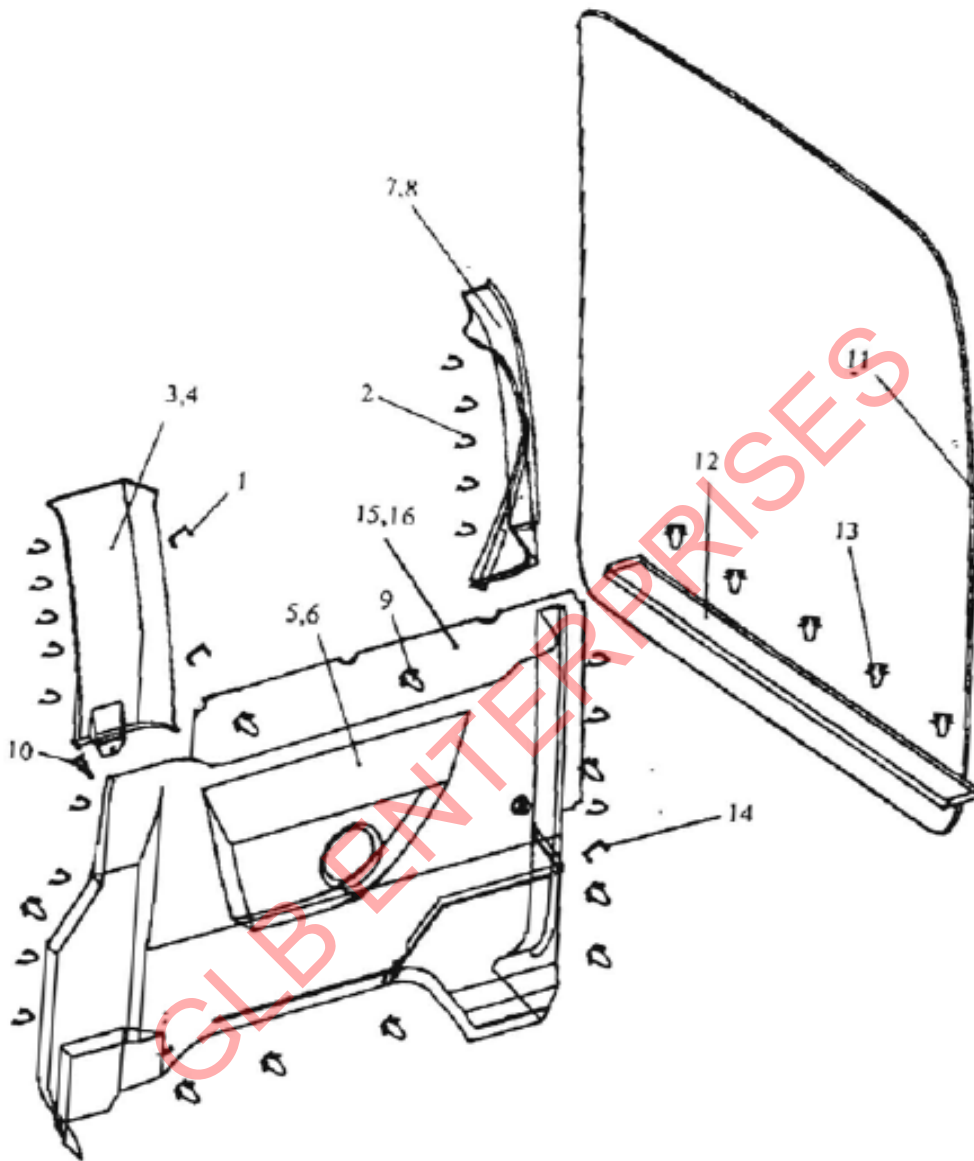


FIGURE 121 CENTER-PILLAR TRIM (STANDARD)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR DOOR SEAL LH	AC54020200	1	
2	REAR DOOR SEAL RH	AC54020201	1	
3	SAFETY BELT RETRACTOR COVER LH	AC54022001	1	
4	SAFETY BELT RETRACTOR COVER RH	AC54022002	1	
5	CLIP	Q/2A-CJ-135	2	
6	GARNISH REAR FLOOR LH	AC54022007	1	
7	GARNISH REAR FLOOR RH	AC54022008	1	
8	CLIP	Q/2A-CJ-319A	10	
9	SCREW	Q/2A-CJ-104-4.8X20	10	
10	CLIP COMBINATION	Q/2A-CJ-301	4	

GLB ENTERPRISES

**FIGURE 122 QUARTER TRIM & REAR
END TRIM (DELUX)**

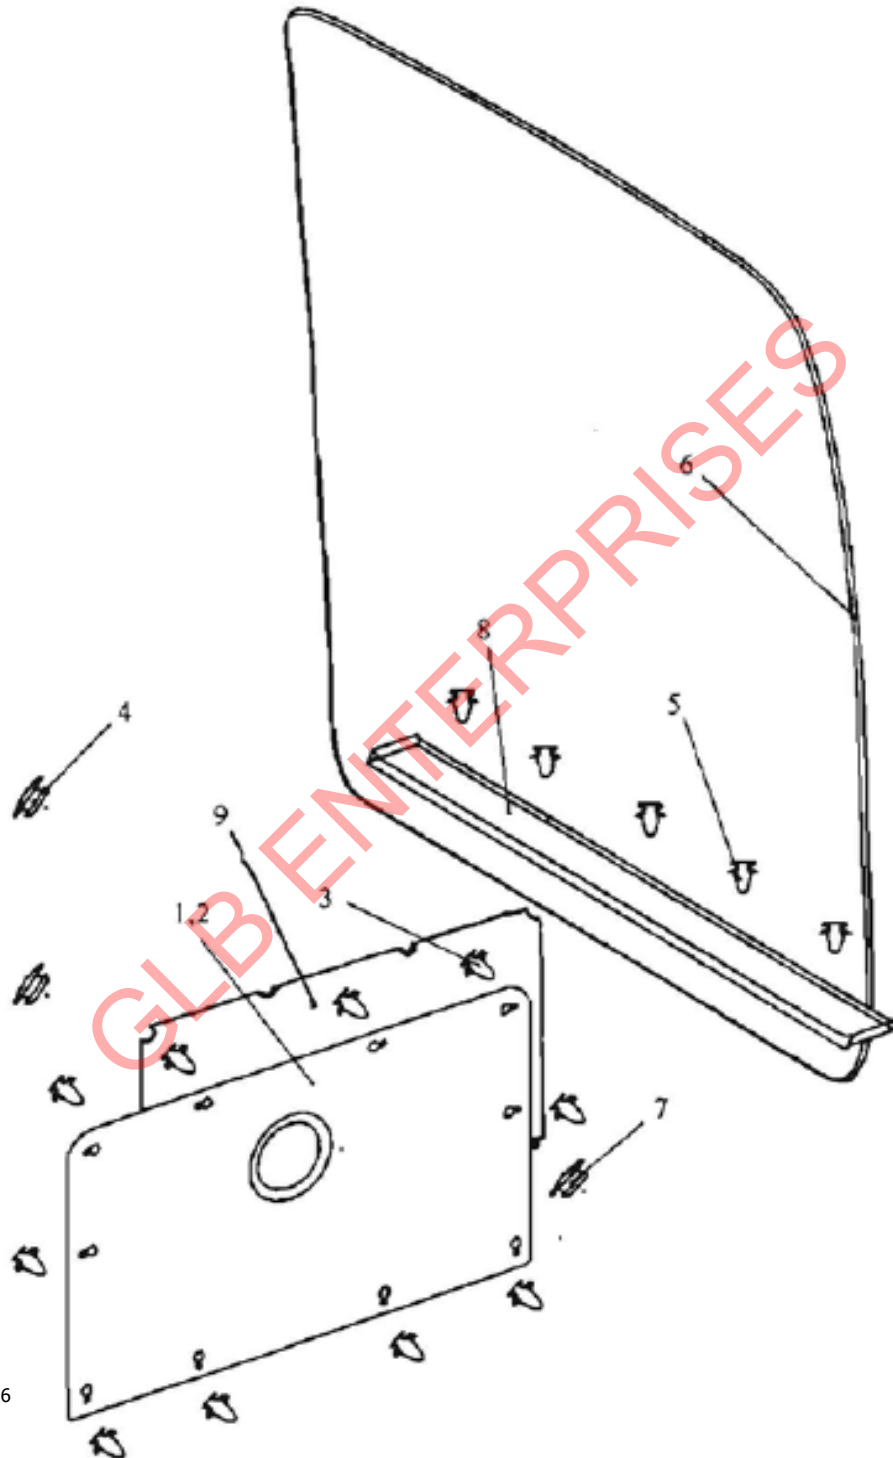


**FIGURE 122 QUARTER TRIM & REAR
END TRIM (DELUX)**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PLUG 4	AC54023011	4	
2	CLIP	Q/2A-CJ-391	34	
3	C PILLAR TRIM ASM LH	AC54023009	1	
4	C PILLAR TRIM ASM RH	AC54023010	1	
5	TRIM QUARTER PILLAR UPPER LH	AC54023003	1	
6	TRIM QUARTER PILLAR UPPER RH	AC54023004	1	
7	REAR PILLAR TRIM LH	AC54023007	1	
8	REAR PILLAR TRIM RH	AC54023008	1	
9	CLIP	Q/2A-CJ-313	18	
10	CLIP COMBINATION	Q/2A-CJ-312	2	
11	REAR DOOR SEAL (HATCH)	AC54020400	1	
12	REAR SILL PLATE	AC54024001	1	
13	CLIP	Q/2A-CJ-176	5	
14	PLUG 3	AC54023012	2	
15	DUSTPROOF FILM	AC54023020	1	
16	DUSTPROOF FILM	AC54023021	1	

GLB ENTERPRISES

**FIGURE 123 QUARTER TRIM & REAR
END TRIM (STANDARD)**



Copyright © GLB2014 R.26

**FIGURE 123 QUARTER TRIM & REAR
END TRIM (STANDARD)**

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	COVER REAR BODY INNER LH	AC54023001	1	
2	COVER REAR BODY INNER RH	AC54023002	1	
3	CLIP	Q/2A-CJ-313	20	
4	PLUG 2	AC54020002	4	
5	CLIP	Q/2A-CJ-310	5	
6	REAR DOOR SEAL (HATCH)	AC54020300	1	
7	PLUG 1	AC54020001	2	
8	REAR SILL PLATE	AC54024001	1	
9	DUSTPROOF FILM	AC54023022	2	

GLB ENTERPRISES

FIGURE 124 FRONT FLOOR

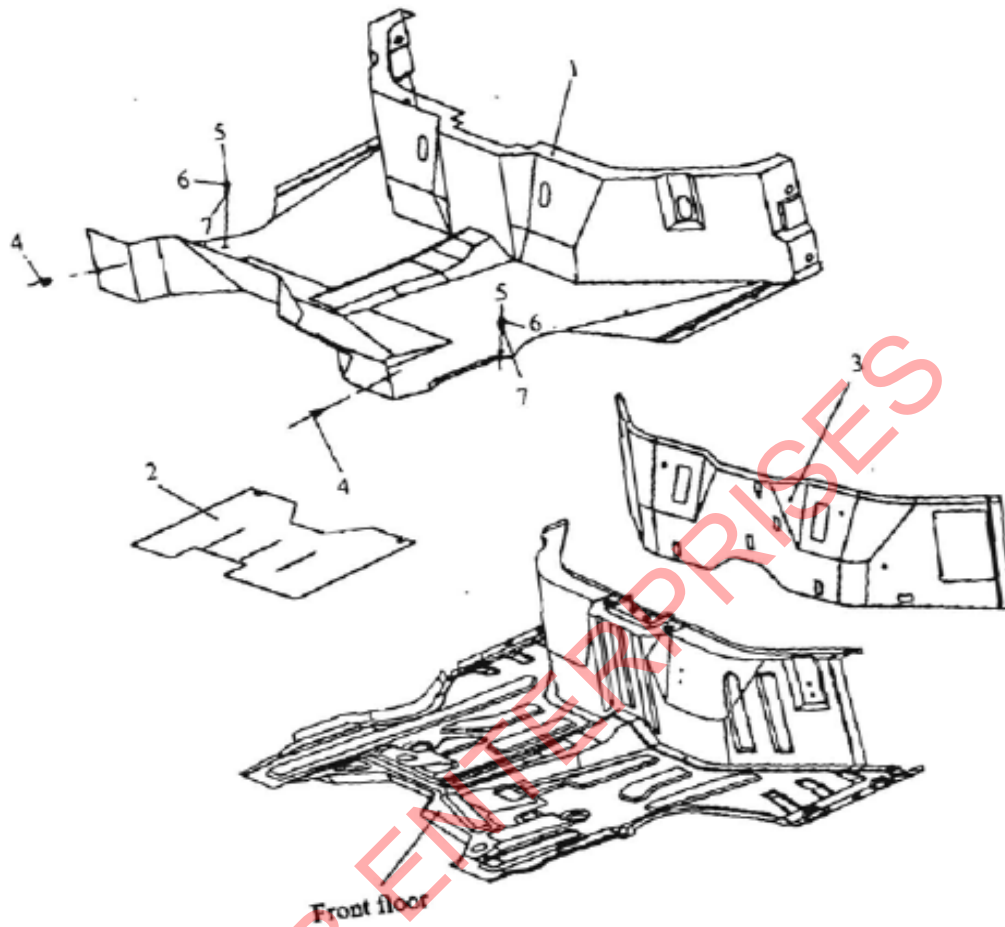


FIGURE 124 FRONT FLOOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT FLOOR	AC51091001	1	FLOOR MAT
		AC81091002	1	
	PANEL ENGINE FRONT			
2	PAD	AC51100020	2	
3	PLUG	HFJ5109103EA	2	SIMPLE INTERIOR TRIM
4	CLIP	Q/2A-CJ-321	2	SIMPLE INTERIOR TRIM
5	SCREW	Q/2A-CJ-104-4.8X20	2	SIMPLE INTERIOR TRIM
6	BIG COLLAR	Q40206	2	SIMPLE INTERIOR TRIM
7	CLIP	Q/2A-CJ-319	2	SIMPLE INTERIOR TRIM

GLB ENTERPRISES

FIGURE 125 REAR FLOOR

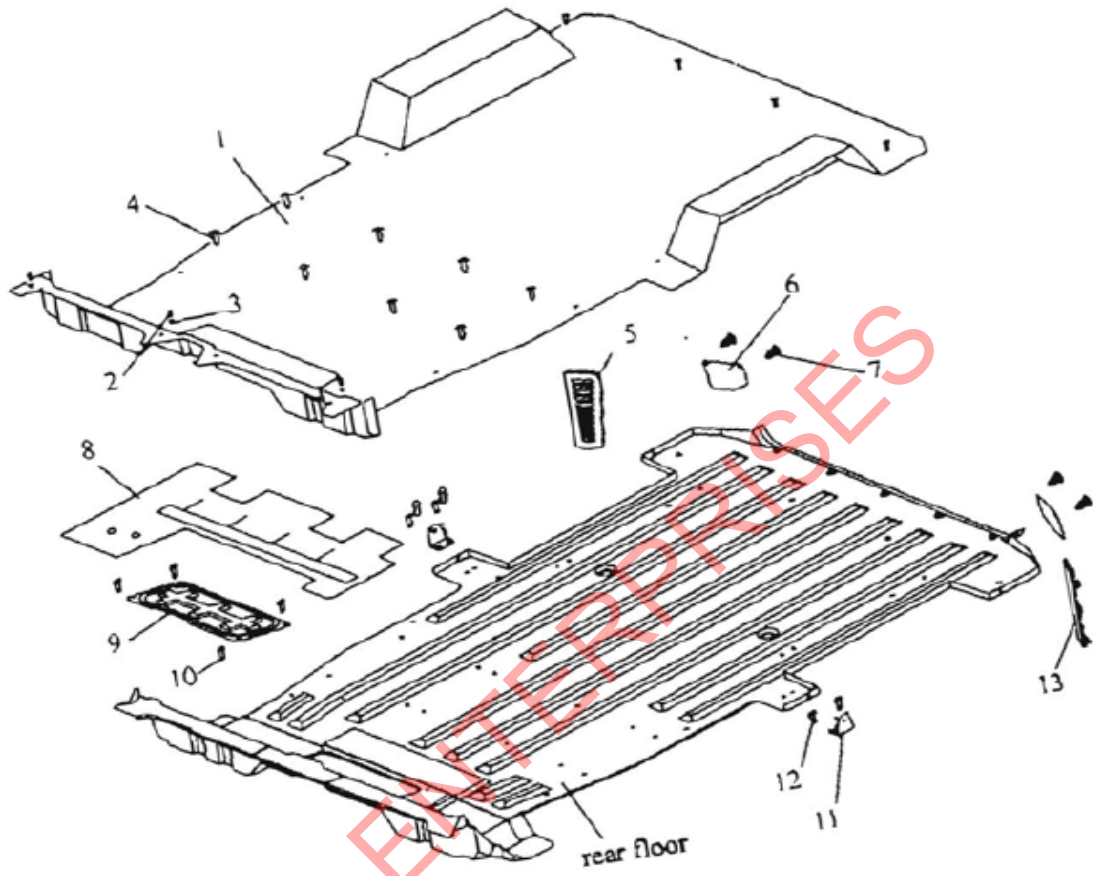


FIGURE 125 REAR FLOOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	MID & REAR SAFETY BELT	AC51091005	1	REAR FLOOR
	MOULDING CARPENT	AC51091006	1	REAR FLOOR
	W/O REAR SAFETY BELT	AC51091007	1	REAR FLOOR
2	SCREW	Q/2AJ18-M-5	2	
3	SCREW	Q/2AJ17-5	2	
4	CLIP	Q/2A-CJ-92A	A/R	
	AIR GRILL TRIM COVER			
5	RH	AC51110006	1	
6	AIR TRIM GRILL	AC51110001	2	
7	CLIP	Q/2A-CJ-109	2	
8	PLUG	HFJ5109103EA	4	
	ENGINE INSPRCTION			
9	LID ASM	AC51070002	1	
10	BOLT	Q/2A-CJ-62-M6X20	4	
	SAFETY BELT LOWER REINFORCED ASM	AC51000005	2	
12	BOLT	Q/2A-CJ-62-M8X25	4	
	AIR TRIM GRILL COVER			
13	LIGHT	AC51110005	1	

GLB ENTERPRISES

FIGURE 126 FRONT DOOR ASM

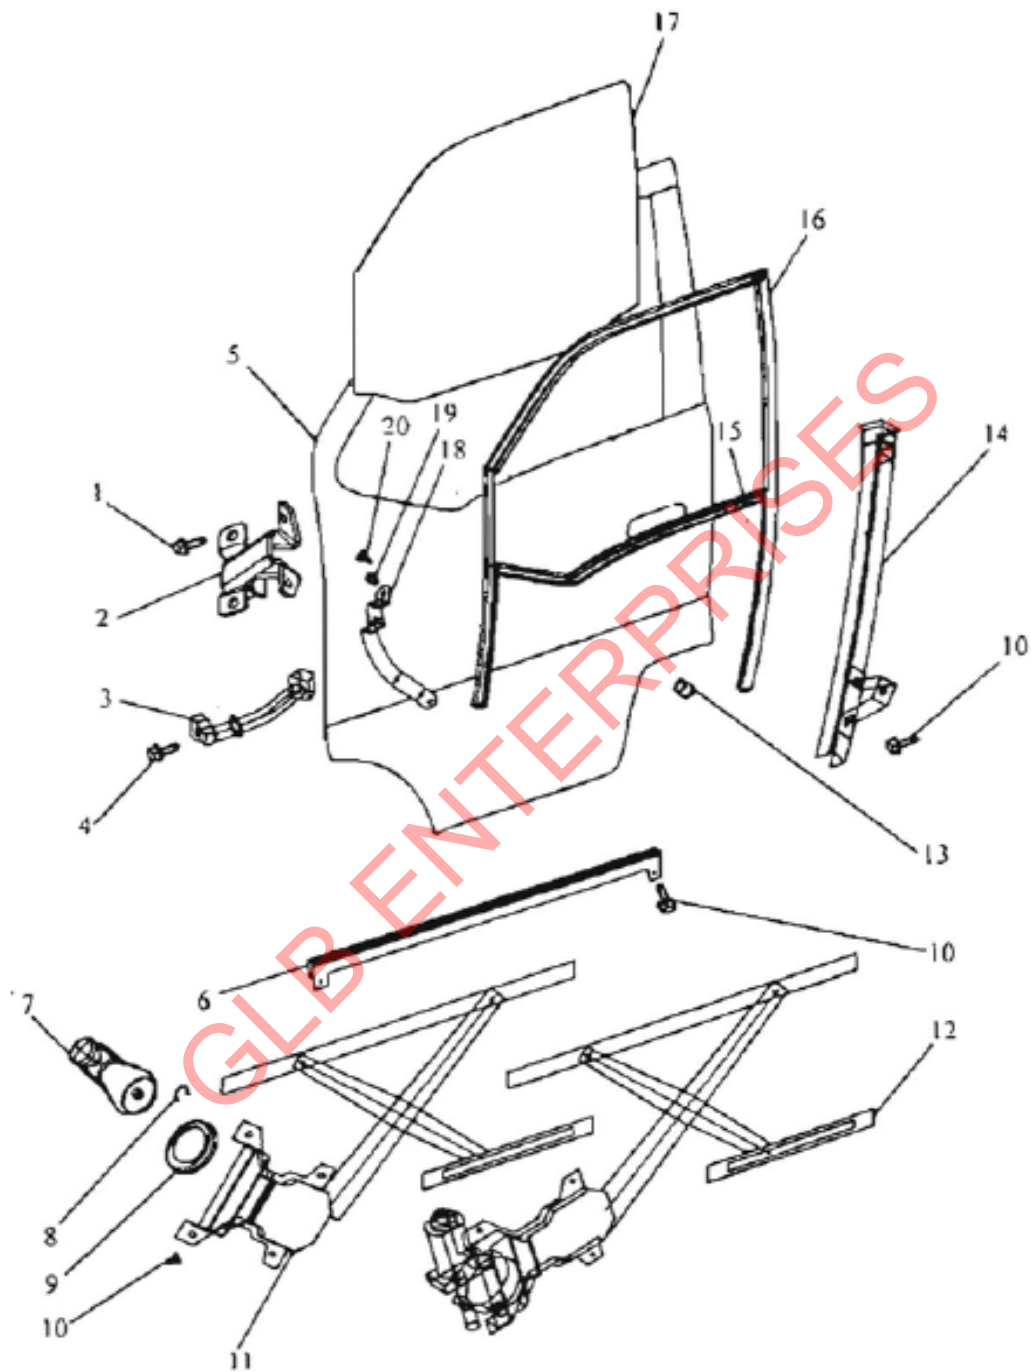


FIGURE 126 FRONT DOOR ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT	Q/2A-CJ-101A-M8-25.9.8	16	
2	DOOR HINGE LH/RH	AC64060001	4	
3	DOOR STOPPER	AC64090001	2	
4	BOLT	Q/2A-CJ-118-M6X18	6	
5	FRONT DOOR ASM LH	AC64010001	1	
	FRONT DOOR ASM RH	AC64010002	1	
6	GLASS BOTTOM CHANNEL	AC64040010	2	
7	WINDOW CRANK ASM	AC64040020	2	
8	SPRING	AC64020022	2	SEE AC64040020
9	WINDOW CRANK COVER	AC64020021	2	SEE AC64040020
10	SCREW	Q/2A-CJ-118-M6X14	18	
11	FRONT DOOR WINDOW REGULATOR LH	AC64040003	1	MANUAL
		AC64040001	1	ELECTRIC
	FRONT DOOR WINDOW REGULATOR RH	AC64040004	1	MANUAL
		AC64040002	1	ELECTRIC
13	CUSHION	Q/2A-CJ-345A	2	
14	FRONT DOOR REAR SASH LH	AC64000011	1	
	FRONT DOOR REAR SASH RH	AC64000012	1	
15	FRONT DOOR OUTER WEATHERSTRIP LH	AC64070003	1	
	FRONT DOOR OUTER WEATHERSTRIP RH	AC64070004	1	
16	FRONT DOOR WEATERSTRIP LH	AC64070005	1	
	FRONT DOOR WEATERSTRIP RH	AC64070006	1	
17	FRONT DOOR GLASS LH	AC64030001	1	
	FRONT DOOR GLASS RH	AC64030002	1	
18	JOINT LH	AC64030001	1	ELECTRIC REGULATOR
	JOINT RH	AC64030002	1	ELECTRIC REGULATOR
19	NUT	Q/2A-CJ-90A	4	
20	SCREW	Q/2A-CJ-104-4.2X16	4	

FIGURE 127 FRONT DOOR TRIM

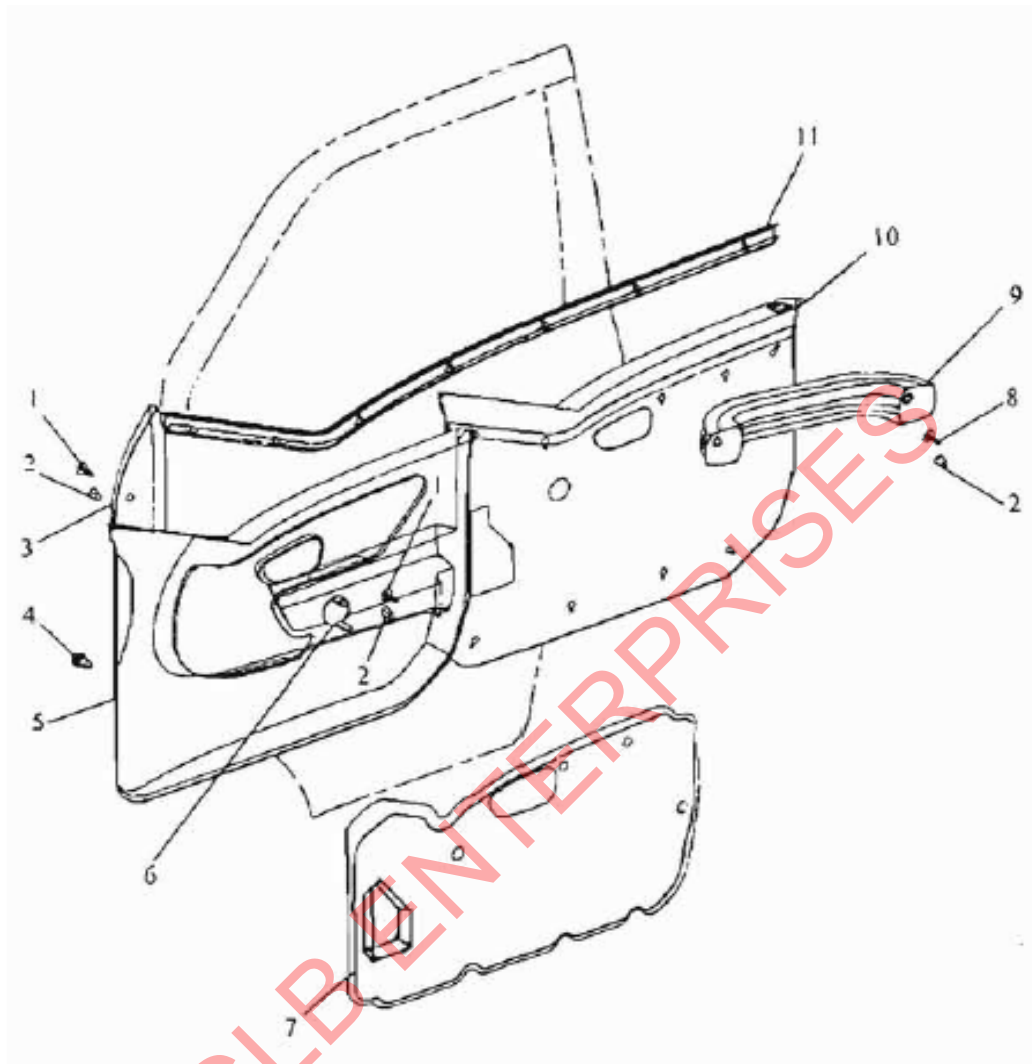


FIGURE 127 FRONT DOOR TRIM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SCREW	Q/2A-CJ-13A-6X20	6	
2	NUT	Q/2A-CJ-309	10	
3	MIRROR O/S COVER LH	AC640200021	1	
	MIRROR O/S COVER RH	AC640200022	1	
4	SNAP FASTENER	Q/2A-CJ-313	2	
5	FRONT DOOR PANEL ASM LH	AC64020003	1	DELUXE TRIM
	FRONT DOOR PANEL ASM RH	AC64020004	1	DELUXE TRIM
6	PLUG LH	AC64020015	2	
	PLUG RH	AC64020016	2	
7	WATER PROOF FILM	AC64020031	4	
8	SCRW	Q/2A-CJ-14A-6X25	4	
9	INNER DOOR PULL LH/RH	AC64020010	2	
10	FRONT DOOR PANEL TRIM LH	AC64020001	1	STANDARD TRIM
	FRONT DOOR PANEL TRIM RH	AC64020002	1	STANDARD TRIM
11	FRONT DOOR INNER WEATERSTRIP LH/RH	AC64070001	4	

GLB ENTERPRISES

FIGURE 128 FRONT DOOR LOCKS & HANDLES

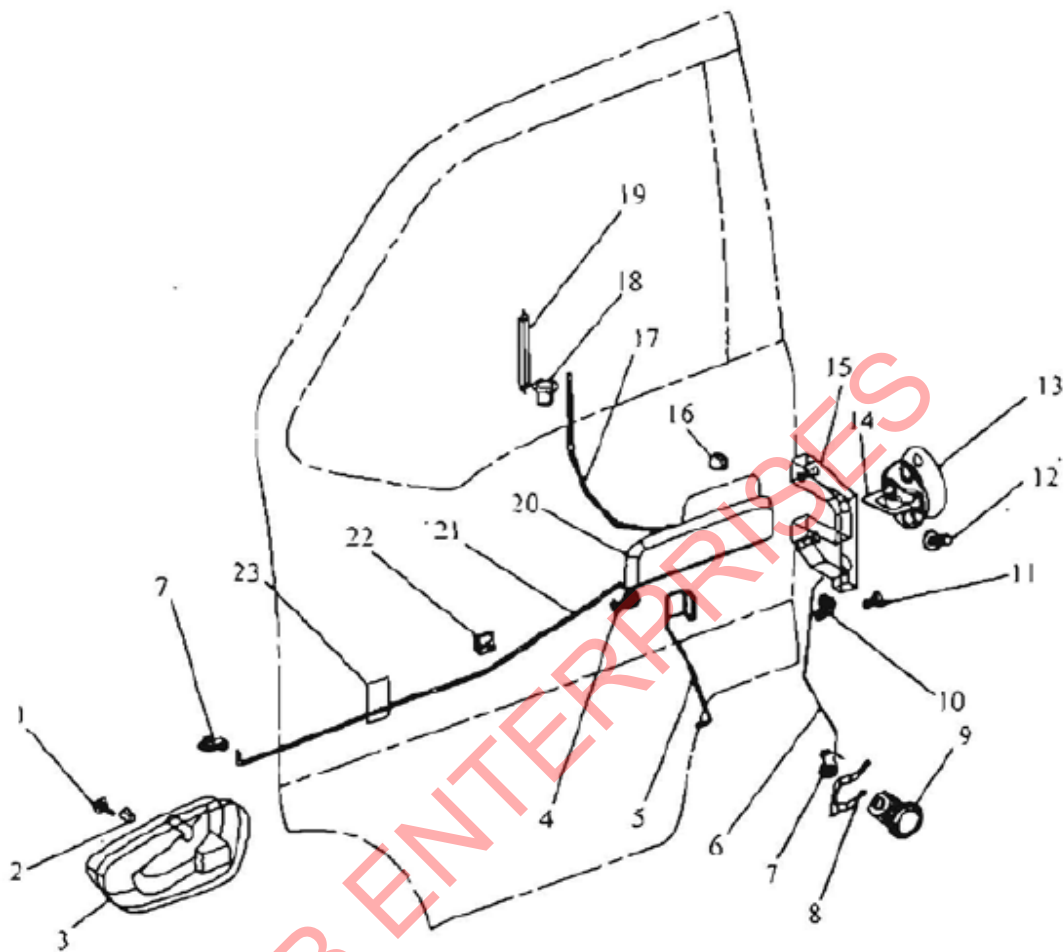


FIGURE 128 FRONT DOOR LOCKS & HANDLES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SCREW	Q/2A-CJ-13A-6X16	2	
2	NUT	Q/2A-CJ-309	2	
3	INNER DOOR HANDLE BEZEL LH	AC64050041	1	
	INNER DOOR HANDLE BEZEL RH	AC64050042	1	
4	CLIP	AC64050051	2	
5	OUTER DOOR HANDLE PULL ROD LH	AC64050003	1	
	OUTER DOOR HANDLE PULL ROD RH	AC64050004	1	
6	OUTER DOOR LOCK ROD LH	AC64050011	1	
	OUTER DOOR LOCK ROD RH	AC64050012	1	
7	CLIP	AC64050033	4	
8	FRONT DOOR LOCK CLIP	AC64050034	2	
9	FRONT DOOR O/S LOCK CYLINDER LH	AC64050031	1	
	FRONT DOOR O/S LOCK CYLINDER RH	AC64050032	1	
10	CLIP	AC64050052	A/R	
11	SCRW	Q/2A-CJ-20A-M6X16	6	
12	SCREW	Q/2A-CJ-379-M8X20-9.8	4	
13	ADJUSTING WASHER	AC64050014	A/R	
14	FRONT DOOR STRIKER	AC64050013		
15	FRONT DOOR LATCH ASM LH	AC64050001	1	
	FRONT DOOR LATCH ASM RH	AC64050002	1	
16	NUT	Q/2A-CJ-105-M6		
17	FRONT DOOR INNER LOCK ROD LH	AC64050007	1	
	FRONT DOOR INNER LOCK ROD RH	AC64050008	1	
18	LOCK KNOB SEAT	AC64050010	2	
19	LOCK KNOB	AC64050009	2	
20	FRONT DOOR HANDLE O/S LH	AC64050021	1	
	FRONT DOOR HANDLE O/S RH	AC64050022	1	
21	FRONT DOOR INNER OPEN ROD LH	AC64050005	1	
	FRONT DOOR INNER OPEN ROD RH	AC64050006	1	
22	BUTTON	AC64050053	2	
23	SPONGE FILM	AC64050054	2	

FIGURE 129 SLIDING DOOR COMPONENTS

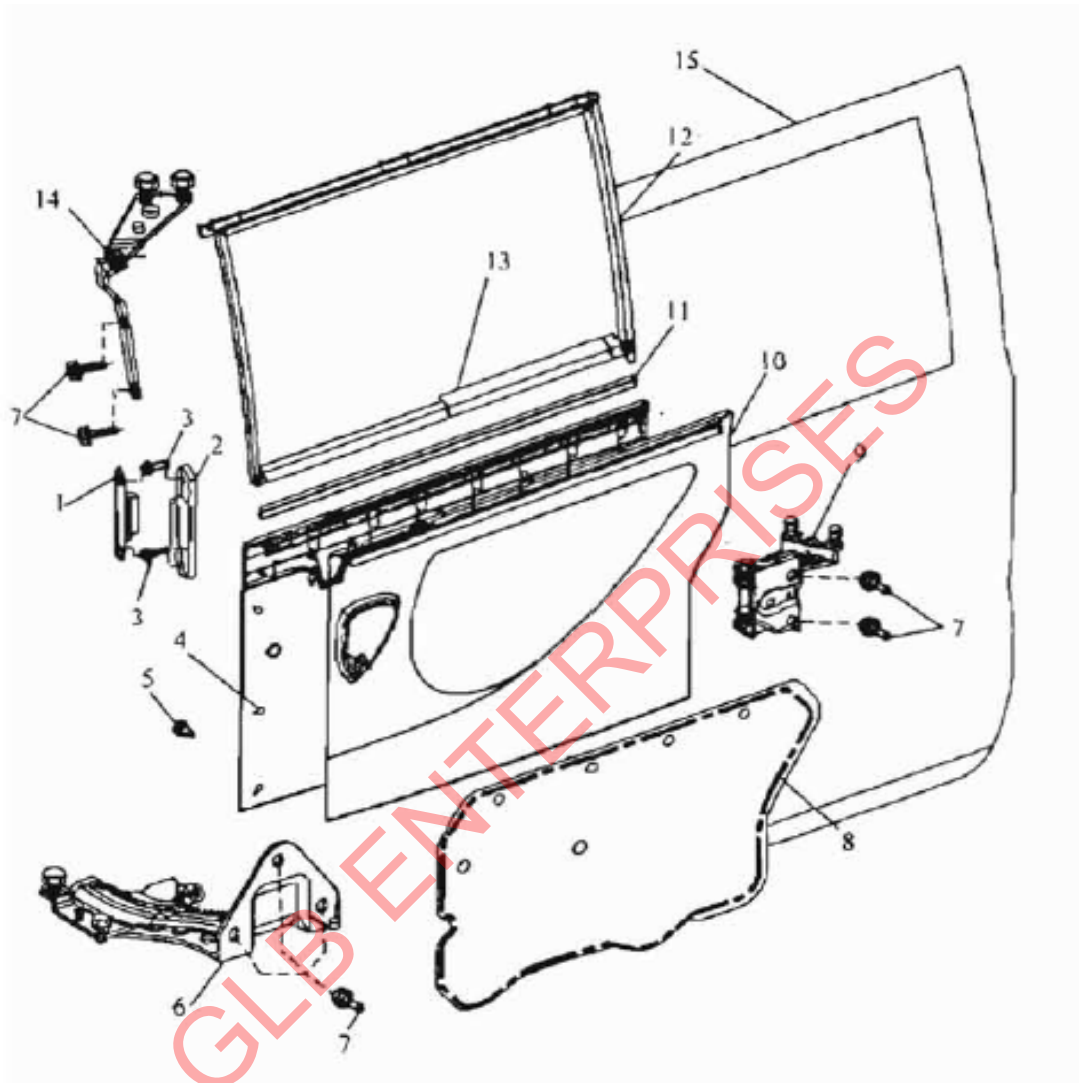


FIGURE 129 SLIDING DOOR COMPONENTS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BUMPER SEAT	AC62000001	4	
2	BUMPER	AC62000002	4	
3	BOLT	Q/2A-CJ-118-M6X18	8	
4	SLIDING DOOR TRIM PANEL LH	AC62020001	1	
	SLIDING DOOR TRIM PANEL RH	AC62020002	1	
5	SNAP FASTNER	Q/2A-CJ-313	10	STANDARD & DELUX TRIM
6	LOWER HINGE ASM LH	AC62060001	1	
	LOWER HINGE ASM RH	AC62060002	1	
7	SCREW/WASHER	Q/2A-CJ-101A-M8X25-9.8	14	
8	WATER PROOF FILM	AC62020014	2	
9	MIDDLE HING ASM LH	AC62060011	1	
	MIDDLE HING ASM RH	AC62060012	1	
10	SLIDING DOOR TRIM ASM LH	AC62020003	1	
	SLIDING DOOR TRIM ASM RH	AC62020004	1	
11	SLIDING DOOR INNER WEATHERSTRIP LH	AC62070001	1	
	SLIDING DOOR INNER WEATHERSTRIP RH	AC62070002	1	
12	SLIDING DOOR O/S WEATHERSTRIP LH	AC62070005	1	
	SLIDING DOOR O/S WEATHERSTRIP RH	AC62070006	1	
13	SLIDING DOOR O/S WEATHERSTRIP TRIM LH	AC62070003	1	
	SLIDING DOOR O/S WEATHERSTRIP TRIM RH	AC62070004	1	
14	UPPER HINGE ASM LH	AC62060021	1	
	UPPER HINGE ASM RH	AC62060022	1	
15	SLIDING DOOR ASM LH	AC62010001	1	
	SLIDING DOOR ASM RH	AC62010002	1	

FIGURE 130 SLIDING DOOR STOPPER

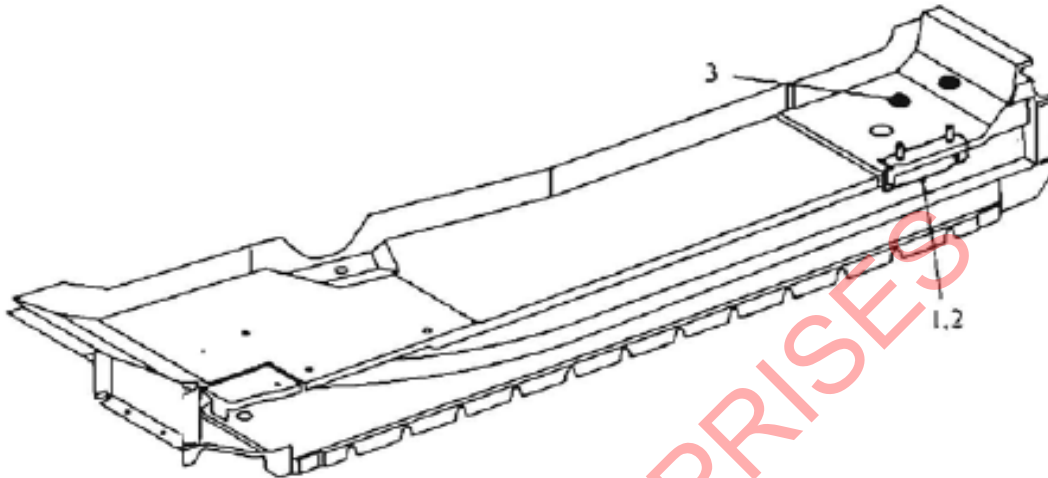


FIGURE 130 SLIDING DOOR STOPPER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SLIDING DOOR STOPPER LH	AC28012300	1	
2	SLIDING DOOR STOPPER LH	AC28012400	1	
3	FLANGE BEARING SURFACE WITH TOOTH NUT	Q/2A-CJ-117-M6		

GLB ENTERPRISES

FIGURE 131 SLIDING DOOR WINDOW

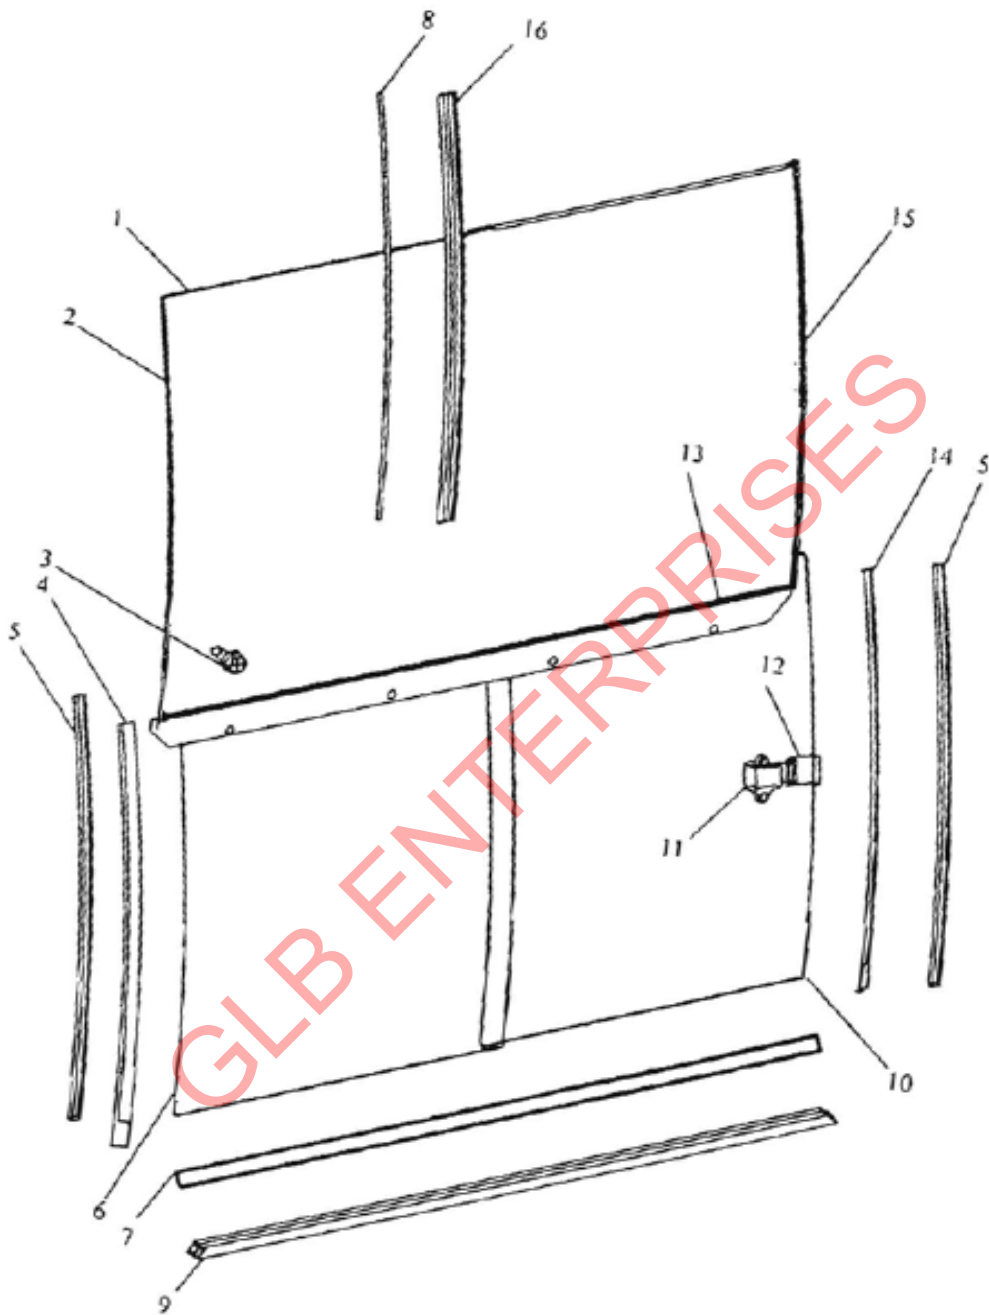


FIGURE 131 SLIDING DOOR WINDOW

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SLIDE WINDOW UPPER SASH LH	AC62031003	1	
	SLIDE WINDOW UPPER SASH RH	AC62031004	1	
2	FRONT SLIDE WINDOW SASH LH	AC62031007	1	
	FRONT SLIDE WINDOW SASH LH	AC62031008	1	
3	SCREW	Q/2A-CJ-118-M6X18	8	
4	SLIDE WINDOW DECO STRIP	AC62030007	2	
5	SLIDE WINDOW DAMPING SEAL STRIP	AC62030010	4	
6	SLIDE WINDOW GLASS LH	AC62030005	1	
	SLIDE WINDOW GLASS RH	AC62030006	1	
7	SLIDE WINDOW DAMPING SEAL STRIP	AC62031013	2	
8	SLIDE WINDOW MIDDLE STRIP	AC62030012	2	
9	SLIDE WINDOW CHANNEL STRIP	AC62030009	2	
10	SLIDE WINDOW SLIDING GLASS	AC6203	2	
11	SLIDE WINDOW LOCK SYSTEM	AC62030020	2	
12	SLIDE WINDOW LOCK STRIKER	AC62030021	2	
13	LOWER WINDOW SASH LH	AC62031005	1	
	LOWER WINDOW SASH RH	AC62031006	1	
14	SLIDE WINDOW DECO STRIP	AC62030008	2	
15	REAR SLIDING WINDOW SASH LH	AC62031000	1	
	REAR SLIDING WINDOW SASH RH	AC62031010	1	
16	SLIDING WINDOW MIDDLE SEAL STRIP	AC62030011	2	

FIGURE 132 SLIDING DOOR LOCKS & HANDLE

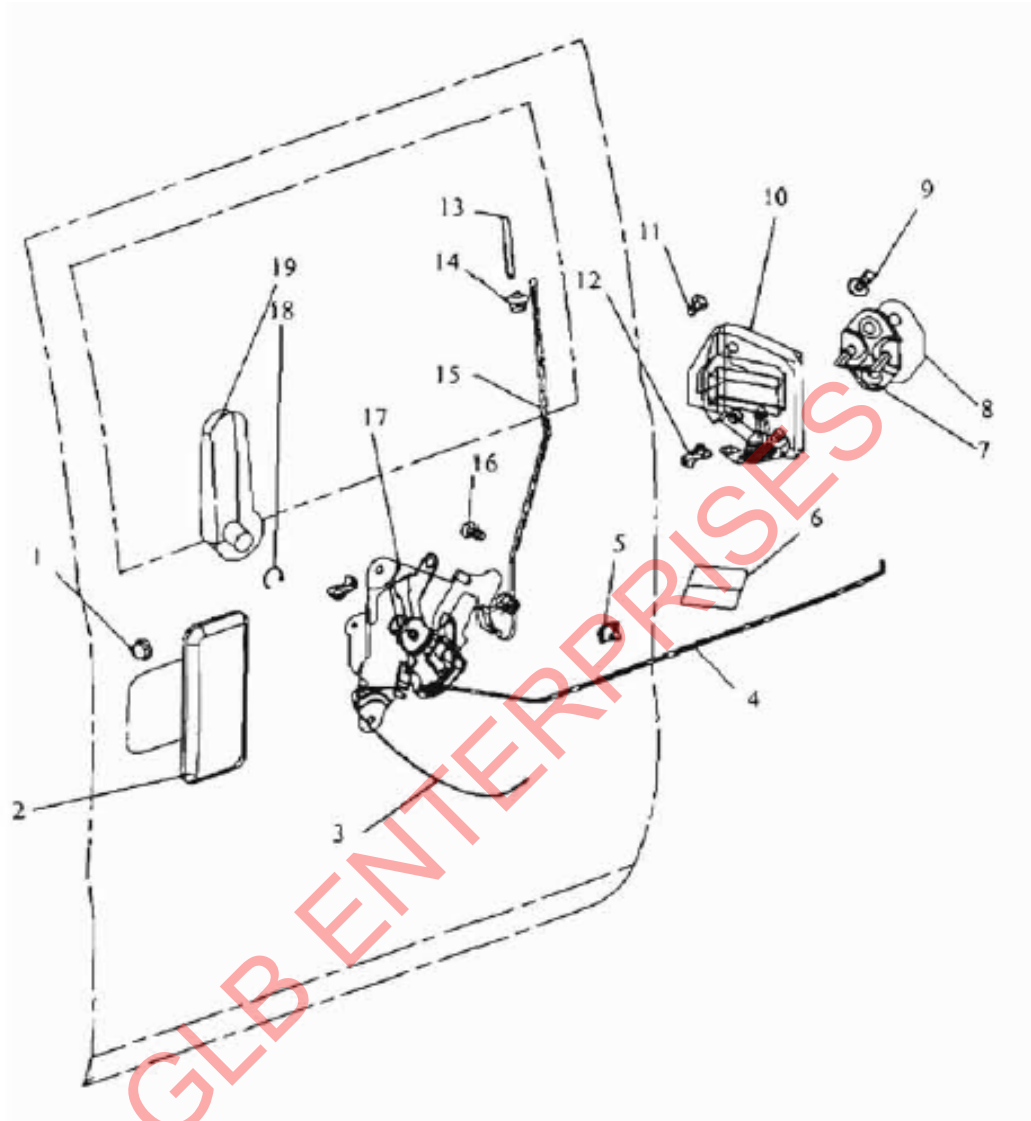


FIGURE 132 SLIDING DOOR LOCKS & HANDLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NUT	Q/2A-CJ-105-M6	4	
	SLIDING DOOR HANDLE			
2	O/S LH	AC62050021	1	
	SLIDING DOOR HANDLE			
	O/S LH	AC62050022	1	
	SLIDING DOOR OUTER			
3	RELEASE CABLE	AC62050003	2	
	SLIDING DOOR INNER			
4	OPEN ROD LH	AC62050005	1	
	SLIDING DOOR INNER			
	OPEN ROD RH	AC62050006	1	
5	SNAP FASTNER	AC64050053	2	
6	SPONGE FILM	AC64050054	2	
	SLIDING DOOR			
7	STRIKER	AC62050010	2	
	ADJUSTMENT WASHER	AC64050011	A/R	
9	SCREW	Q/2A-CJ-379-M8X20-9.8	4	
	SLIDING DOOR LATCH			
10	ASM LH	AC62050001	1	
	SLIDING DOOR LATCH			
	ASM RH	AC62050002	1	
11	SCREW	Q/2A-CJ-118-M6X12	6	
12	JOINT BUTTON	AC64050051	4	
13	LOCK KNOB	AC64050009	2	
14	LOCK KNOB SEAT	AC64050010	2	
	SLIDING DOOR INNER			
15	LOCK ROD LH	AC62050007	1	
	SLIDING DOOR INNER			
	LOCK ROD RH	AC62050008	1	
16	SCREW	Q/2A-CJ-118-M6X12	6	
	SLIDING DOOR LOCK			
17	ASM LH/RH	AC62050042	2	
18	C-CLIP	AC62050032	2	
	INNER RELEASE			
19	HANDLE	AC62050031	2	

FIGURE 133 REAR HATCH DOOR

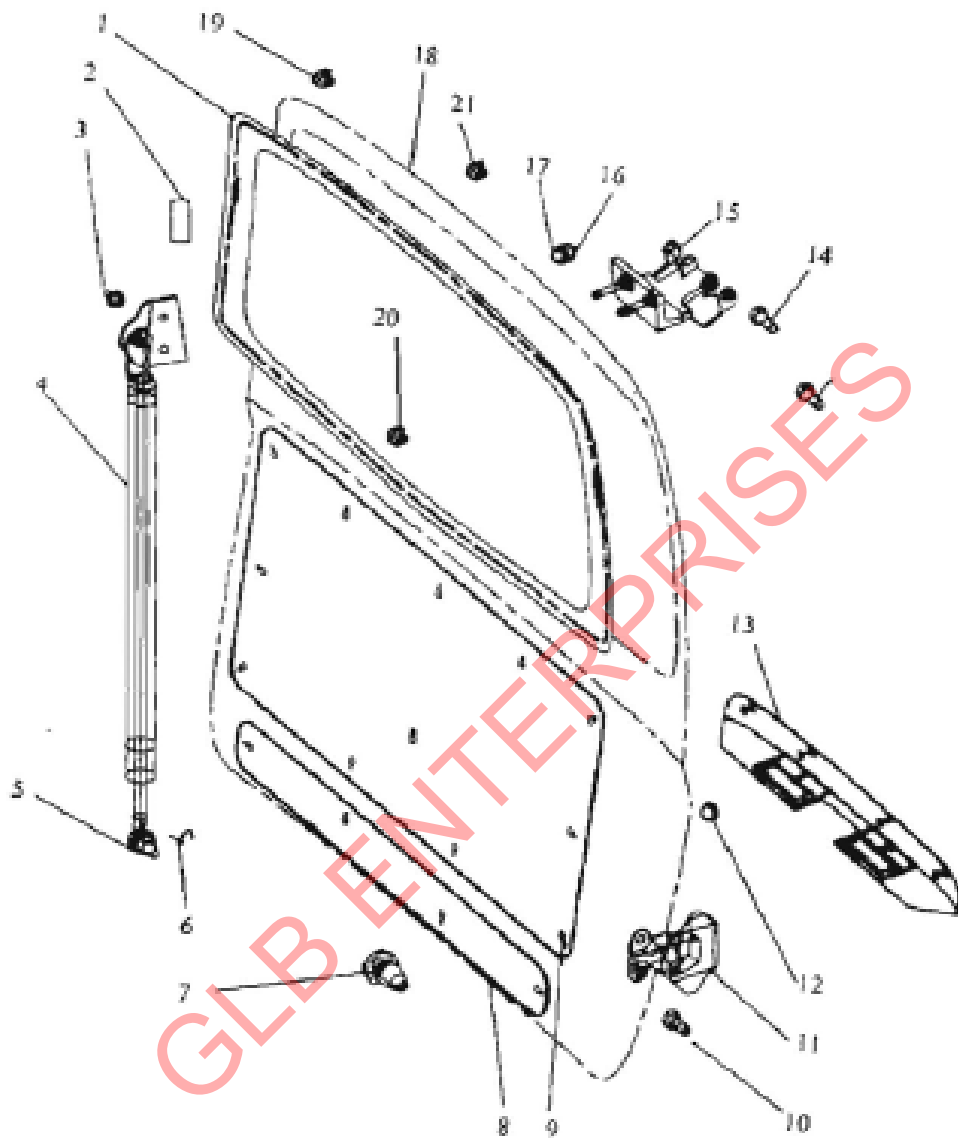


FIGURE 133 REAR HATCH DOOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HATCH REAR GLASS	AC63030000	1	
		AC63030010	1	DEFROSTER
2	NYLON FIBULA	AC63030020	8	
3	BOLT	Q/2A-CJ-101A-M6X14	8	
4	HATCH LIFT STRUT LH	AC63090001	1	
	HATCH LIFT STRUT RH	AC93090002	1	
5	BOLT	AC63090003	2	
6	C-CLIP	AC63090004	2	
7	SNAP FASTENER	Q/2A-CJ-142A	18	
8	HATCH LOWER TRIM	AC63020003	1	
	HATCH INNER TRIM			
9	PANEL	AC63020001	1	
10	BOLT	Q/2A-CJ-30-M6X14	4	
11	STOPPER	HFJ6300020DA	2	
12	BOLT	Q/2A-CJ-117-M5	4	
	LICENSE PLATE LAMP			
13	ASM	AC63060010	1	
14	BOLT	Q/2A-CJ-101A-M8-20-9.8	4	
15	HATCH DOOR HINGE	AC63060000	2	
16	NUT	Q/2A-CJ-45-M8	4	
17	WASHER	Q/2A-CJ-158-8	4	
	REAR HATCH DOOR			
18	ASM	AC63010001	1	
19	REAR WINDOW NOZZLE	HFJ6300004FA	1	
20	REAR SCALE COVER	AC63000006	1	
21	COVER	Q/2A-CJ-412	1	

FIGURE 134 REAR HATCH DOOR LOCK

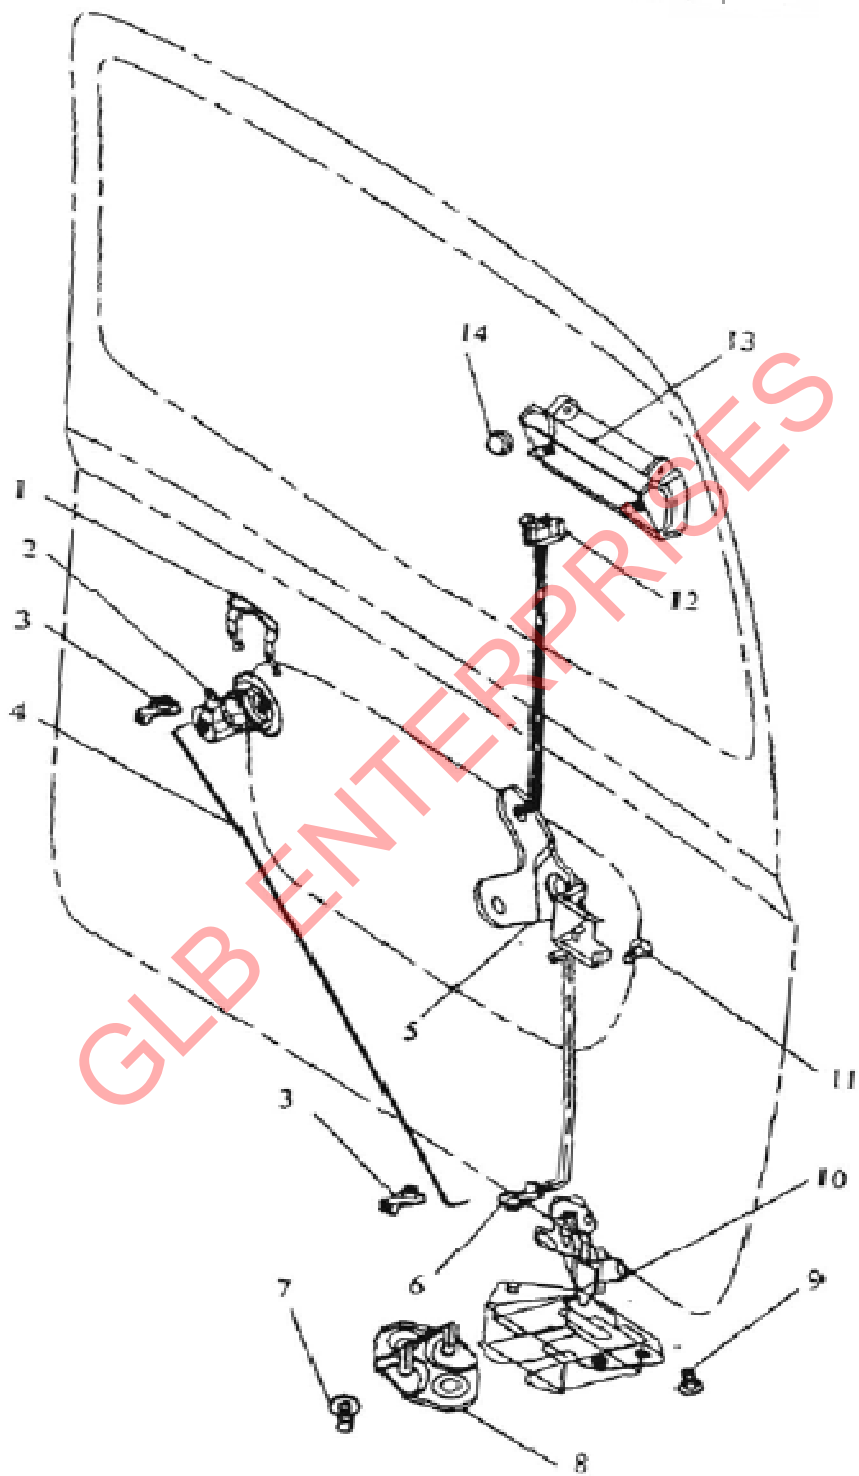


FIGURE 134 REAR HATCH DOOR LOCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR HATCH KEY CLINDER CLIP	AC63050012	1	
2	REAR HATCH KEY CYLINDER ASM	AC63050011	1	
3	JOINT BUTTON	AC63050002	2	
4	REAR HATCH KEY CYLINDER ROD	AC63050021	1	
5	REAR HATCH OUTER HANDLE ROD	AC63050020	1	
6	REAR HATCH OUTER HANDLE ROD JOINT BUTTON	AC63050003	1	
7	SCREW	Q/2A-CJ-379-M8X20-9.8	2	
8	REAR HATCH STRIKER	AC63050030	1	
9	BOLT	Q/2A-CJ-30-M6X14	3	
10	REAR HATCH DOOR LATCH ASM	AC63050001	1	
11	SCREW	Q/2A-CJ-118-M6X12	2	
12	JOINT BUTTON	AC63050004	1	
13	REAR HATCH O/S DOOR HANDLE	AC63050004	1	
14	WASHER	Q/2A-CJ-286-M6	2	

GLB ENTERPRISES

FIGURE 135 WINDSHIELD GLASS

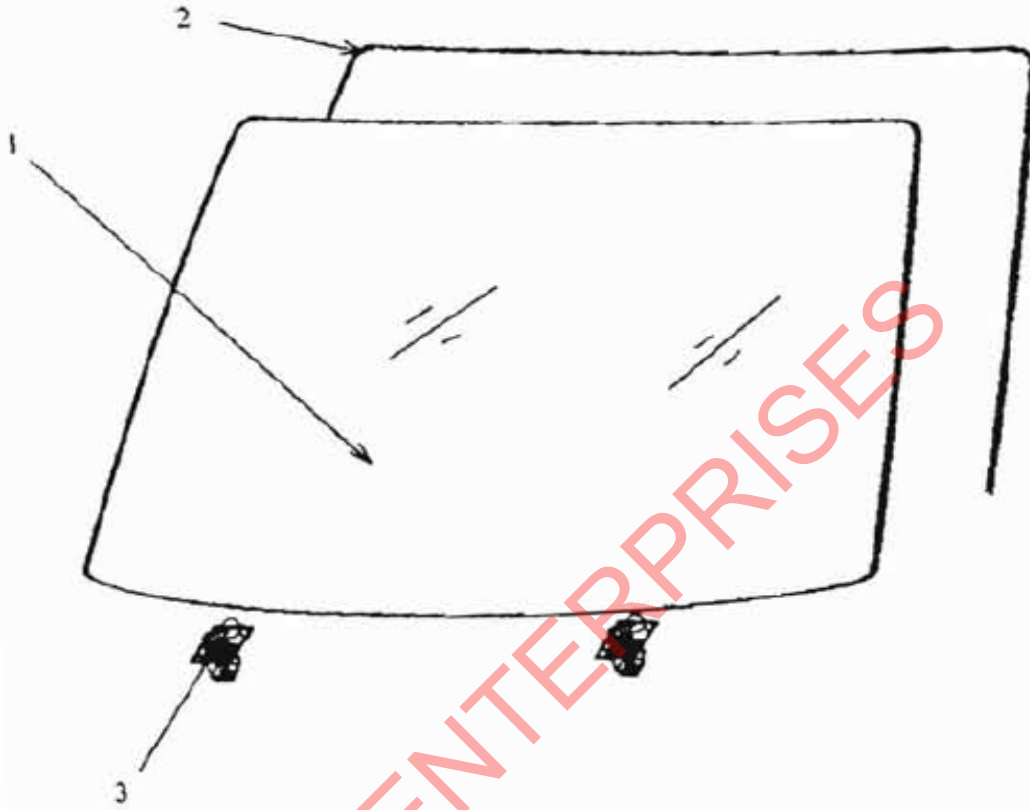


FIGURE 135 WINDSHIELD GLASS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WINDSHIELD GLASS	AC52061000	1	
	WINDSHIELD GLASS			
2	SEAL	AC52062000	1	
3	SET CLIP	AC52063000	2	

GLB ENTERPRISES

FIGURE 136 FRONT BUMPER

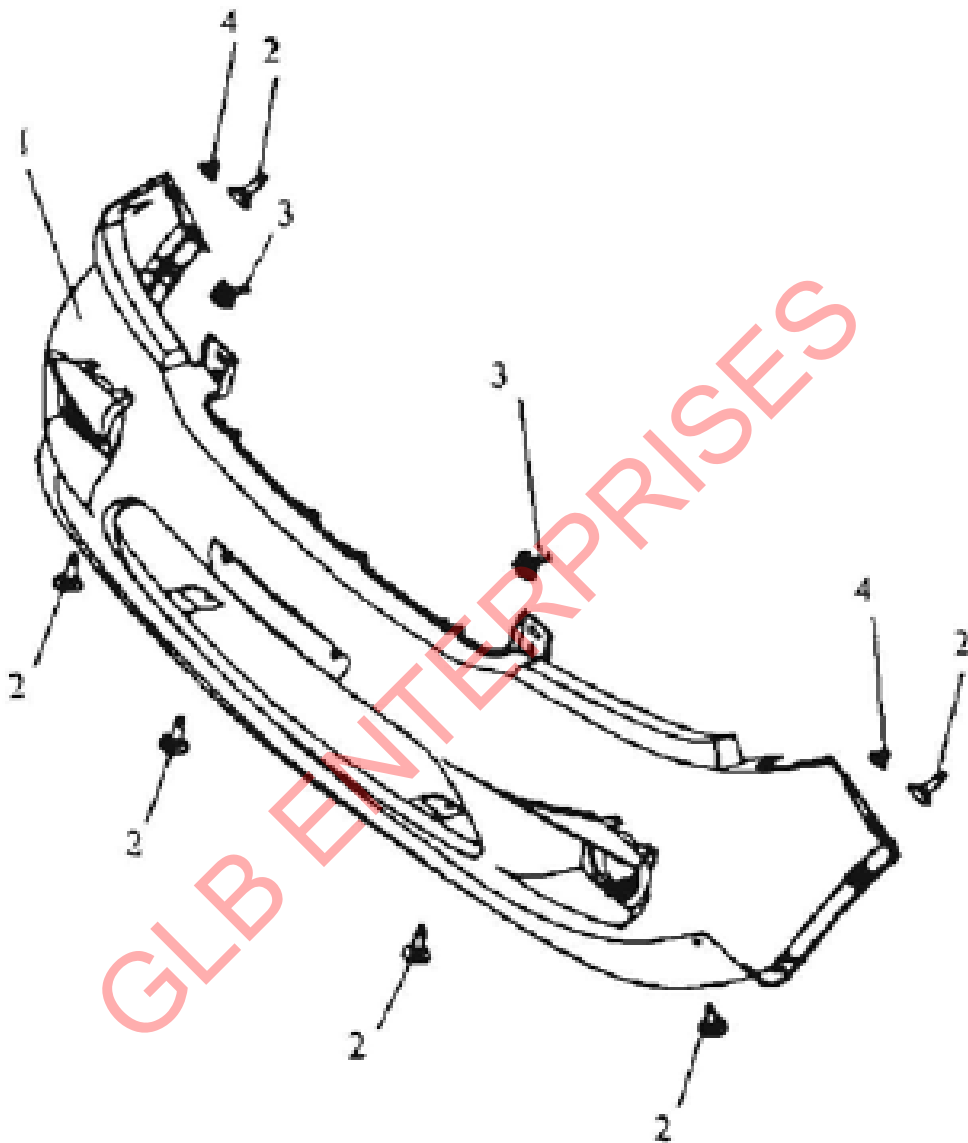


FIGURE 136 FRONT BUMPER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BUMPER	AC28030100	1	
2	SCREW	Q/2A-CJ-366-M6X18	4	
3	WASHER	Q/2A-CJ-64-M6X13	2	
4	WASHER	Q/2A-CJ-44-M6	4	

GLB ENTERPRISES

FIGURE 137 REAR BUMPER

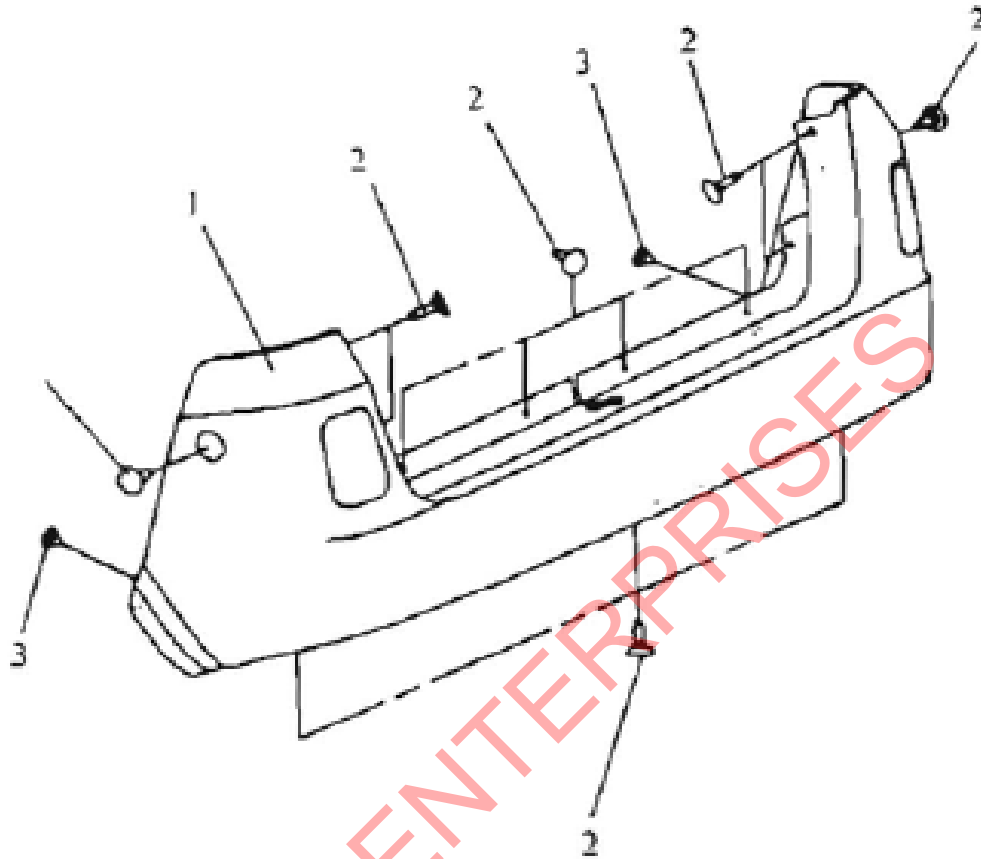


FIGURE 137 REAR BUMPER VAN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BUMPER	AC28040100	1	VAN
2	BOLT	Q/2A-CJ-22-M6X16	13	
2	WASHER	Q/2A-CJ-34-M6X20	2	

GLB ENTERPRISES

FIGURE 138 FRONT GRILL

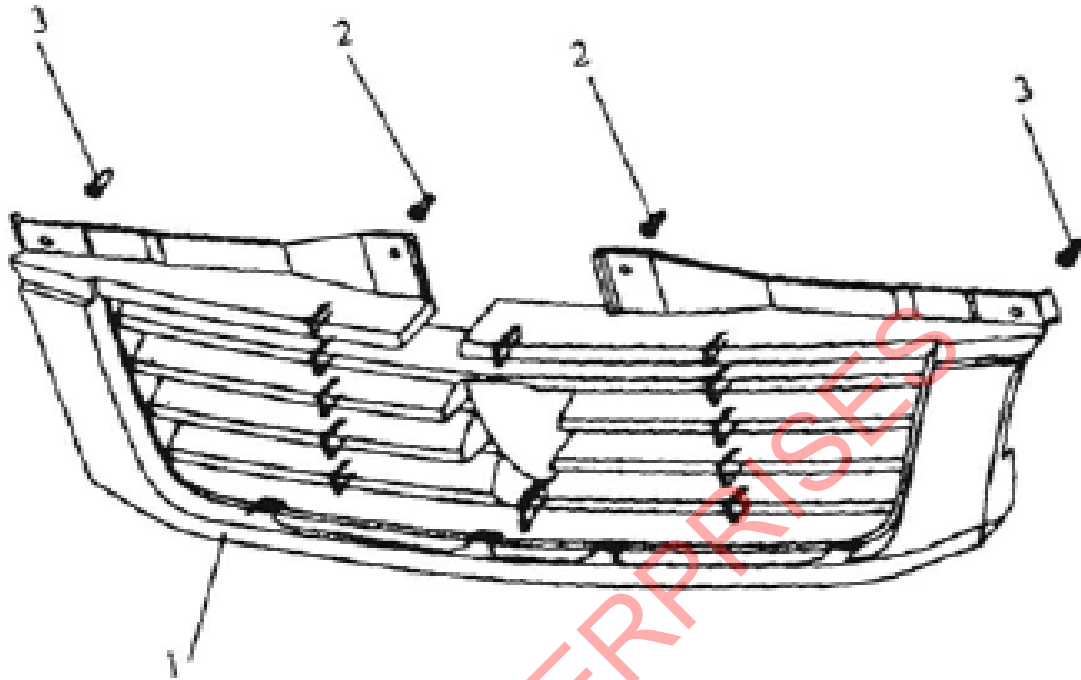


FIGURE 138 FRONT GRILL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT GRILL	AC53040100	1	
2	CLIP	Q/2A-CJ-312	2	
3	BOLT	Q/2A-CJ-107-M6X14H	2	

GLB ENTERPRISES

FIGURE 139 FRONT PAD DASH PANEL

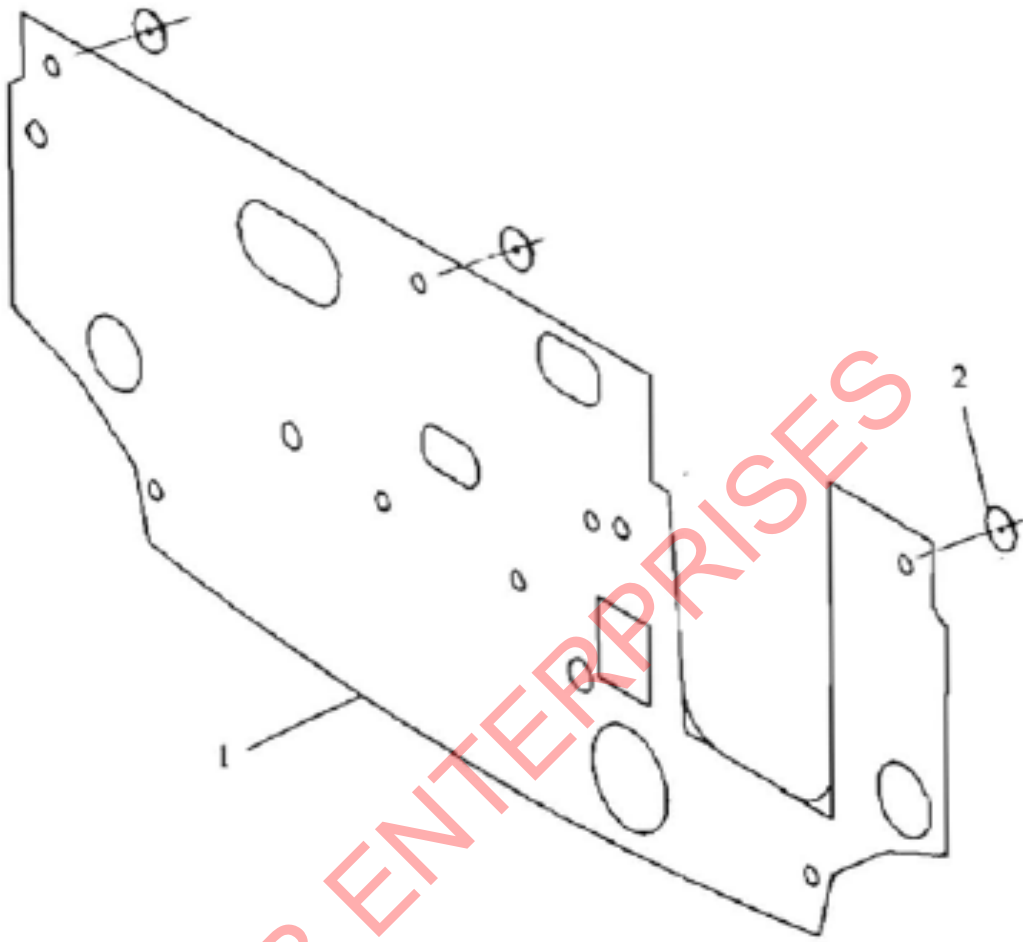


FIGURE 139 FRONT PAD DASH PANEL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT PAD DASH PANEL	AC53100010	1	
2	NUT	Q/2A-CJ-158	3	

GLB ENTERPRISES

FIGURE 140 COWL COVER

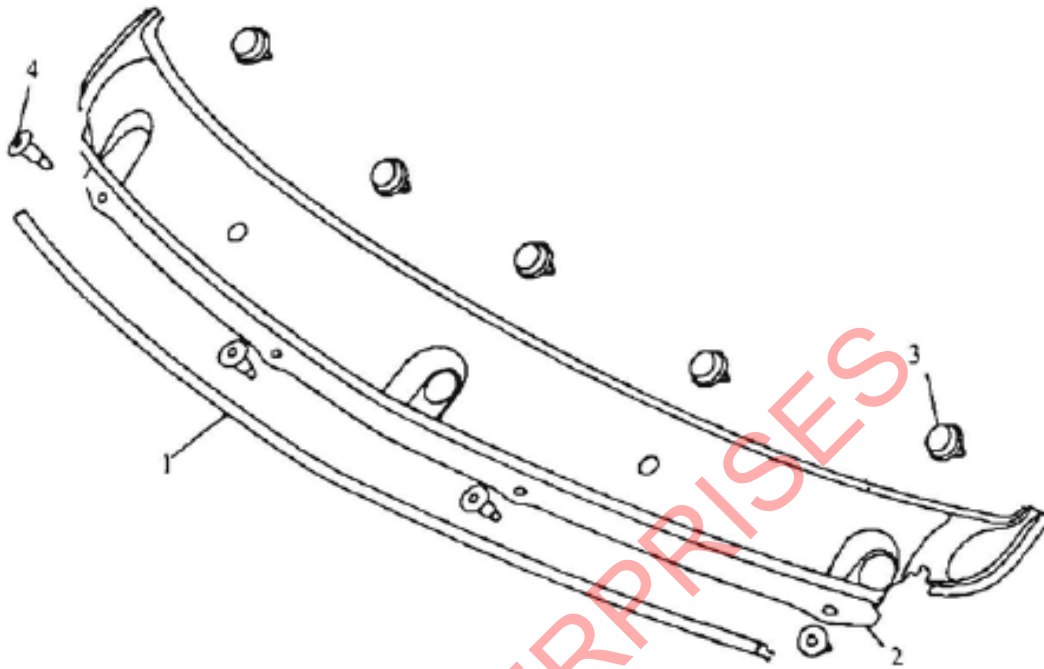


FIGURE 140 COWL COVER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	COWLING COVER SEAL	AC53000200	1	
2	COWLING COVER	AC53000100	1	
3	CLIP	Q/2A-CJ-142	5	
4	SCREW	Q/2A-CJ-305	4	

GLB ENTERPRISES

FIGURE 141 WIND SHIELD PANEL

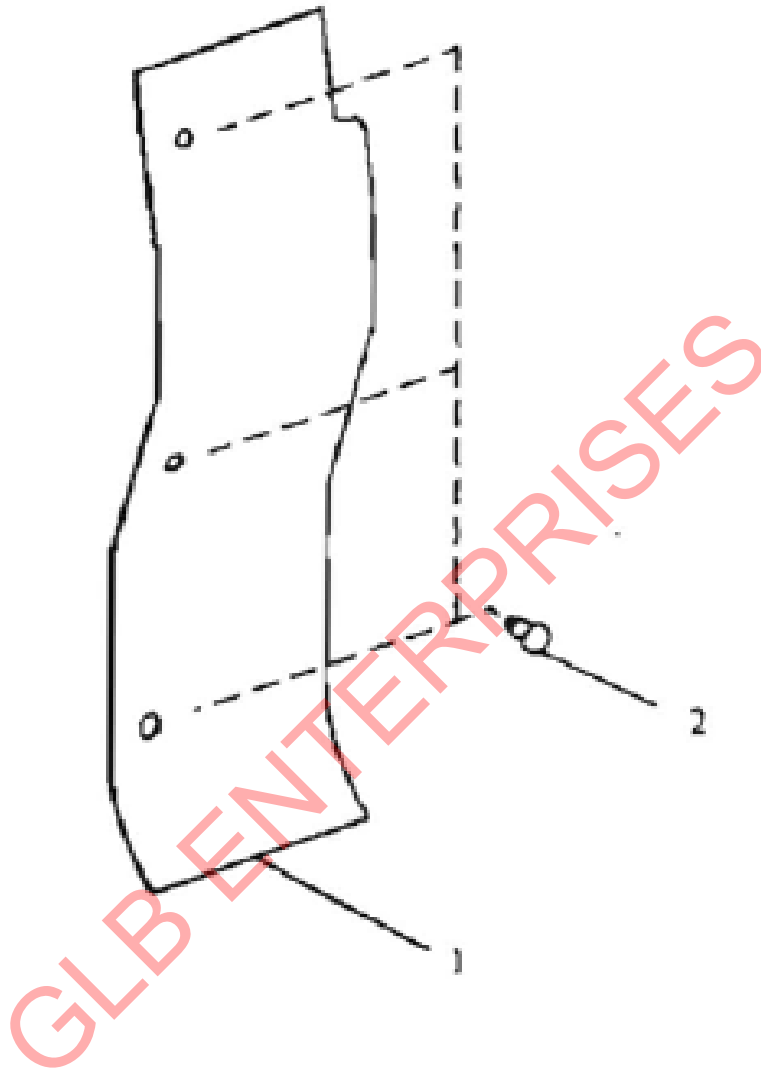


FIGURE 141 WIND SHIELD PANEL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WIND SHIELD PANEL	AC84011010	1	
2	CLIP	Q/2A-CJ-312	3	

GLB ENTERPRISES

FIGURE 142 FRONT SEATS

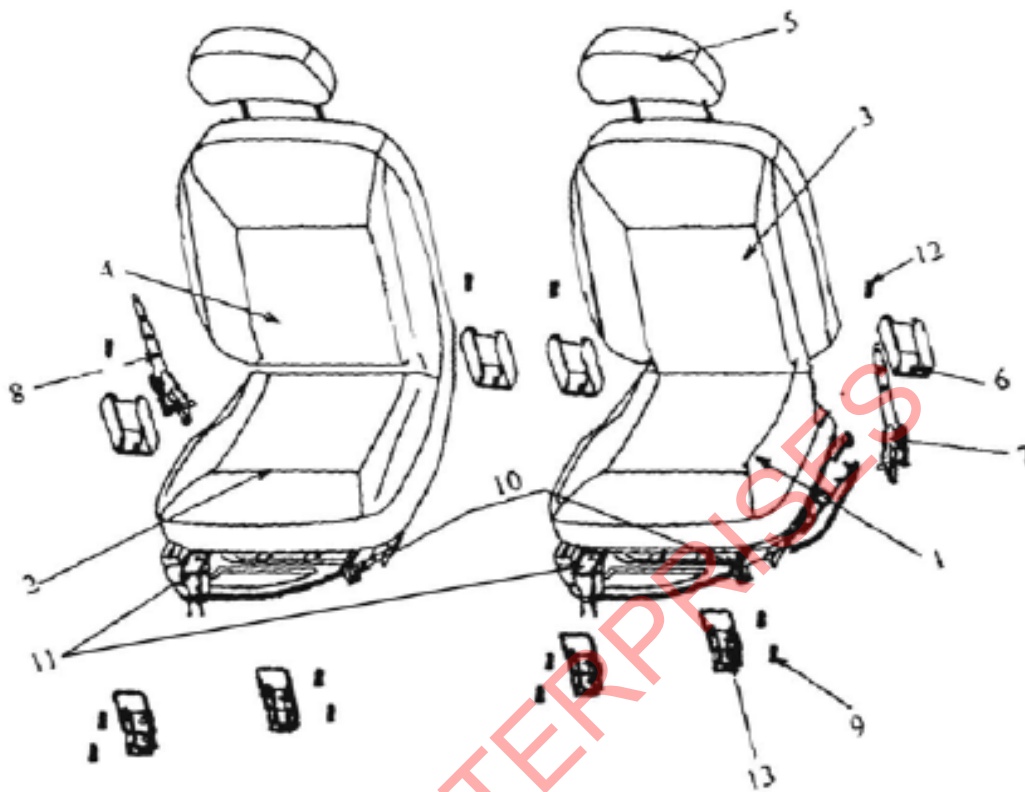


FIGURE 142 FRONT SEATS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT SEAT ASM LH	AC68000001	1	
2	FRONT SEAT ASM RH	AC68000002	1	
3	SEAT BACK ASM LH	AC68000030	1	NOT SOLD SEPERATELY
4	SEAT BACK ASM RH	AC68000040	1	NOT SOLD SEPERATELY
5	HEAD REST	AC68000090	2	
6	TRIM COVER	AC68000013	4	
7	SEAT ADJUSTER LH	AC68000050	1	
8	SEAT ADJUSTER RH	AC68000060	1	
9	BOLT	Q/2A-CJ-35A-M8X25-8.8	8	
10	SEAT GUIDE ASM LH	AC68000070	2	
11	SEAT GUIDE ASM RH	AC68000080	2	
12	BOLT	Q82A/CJ-35-M6X16-8.8	4	
13	SEAT ASM LATCH	AC68000010	4	

GLB ENTERPRISES

FIGURE 143 MIDDLE SEATS

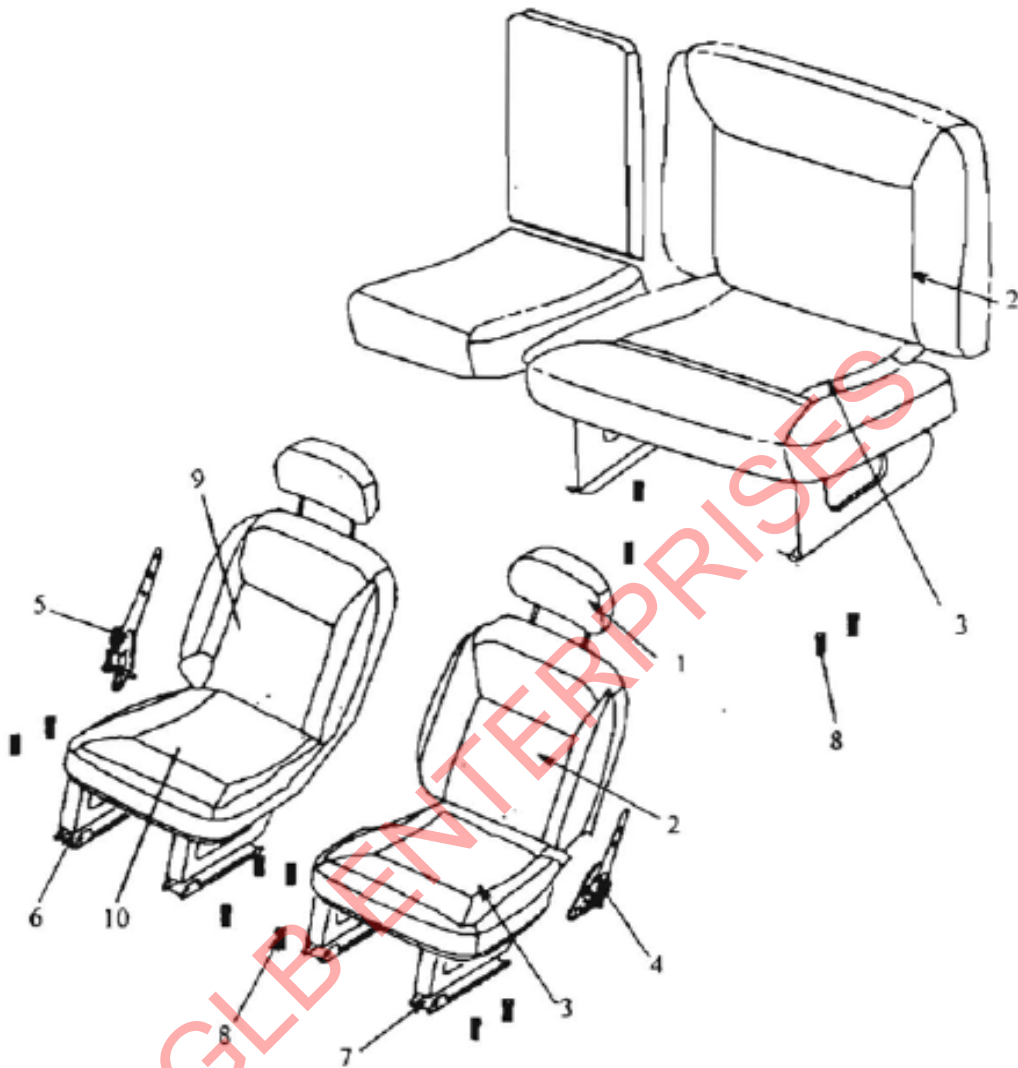


FIGURE 143 MIDDLE SEATS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD REST	AC68000090	2	
2	DRIVERS SEAT BACK ASM	AC68000030	1	
	MIDDLE SEAT BACK ASM	AC72000010	1	8 PASSENGER
3	DRIVERS SEAT PAD ASM	AC68000010	1	
	MIDDLE SEAT PAD ASM	AC72000020	1	8 PASSENGER
4	SEAT ADJUSTER LH	AC68000050	1	
5	SEAT ADJUSTER RH	AC68000060	1	
6	MIDDLE SEAT GUIDE ASM RH	AC71000002	2	
7	MIDDLE SEAT GUIDE ASM LH	AC81000001	2	
8	BOLT	Q/2A-CJ-35A-M8X25-8.8	8	
9	SEAT BACK ASM RH	AC68000040	1	
10	SEAT PAD ASM RH	AC68000020	1	

GLB ENTERPRISES

FIGURE 144 3RD ROW SEAT

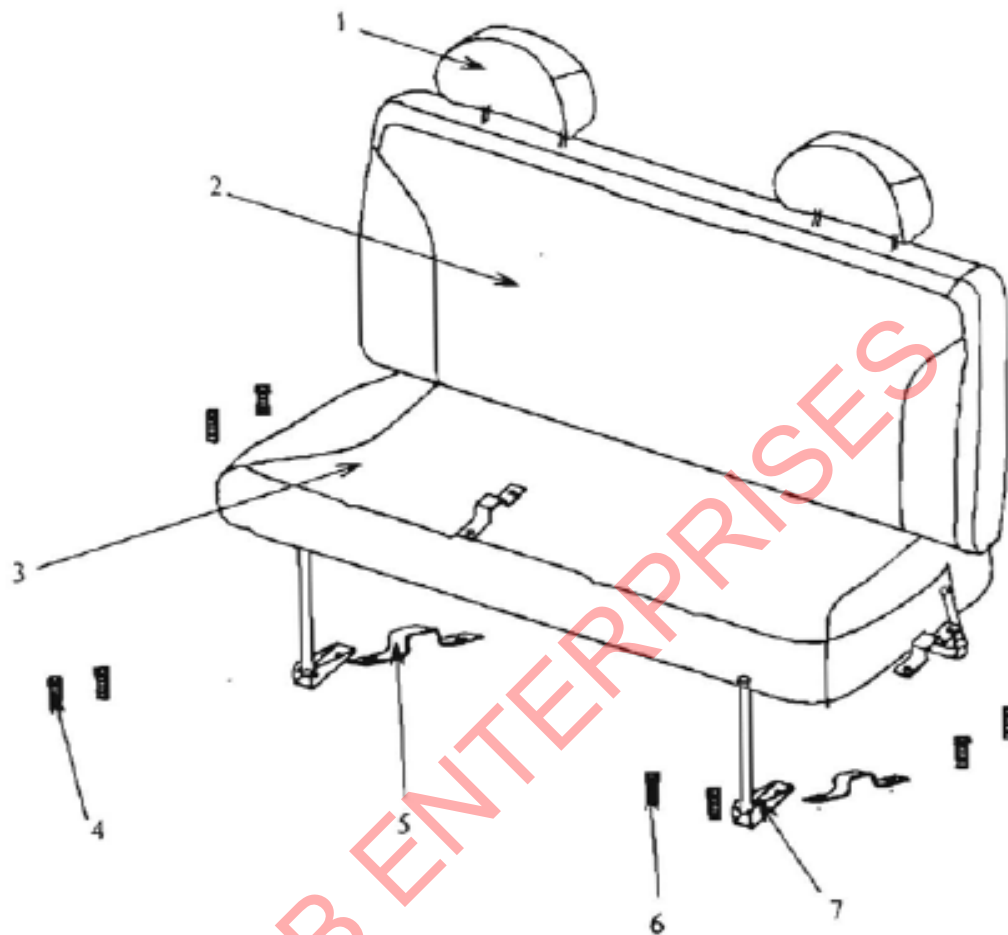


FIGURE 144 3RD ROW SEAT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD REST	AC73000050	2	
2	SEAT BACK ASM	AC73000010	1	
3	SEAT PAD ASM	AC73000020	1	
4	BOLT	Q/2A-CJ-35A-M8X25-8.8	4	
5	BRACKET	AC73000004	2	
6	BOLT	Q/2A-CJ-63-M8X25	4	
7	SEAT BRACKET ASM	AC73000030	2	

GLB ENTERPRISES

FIGURE 145 HOOD

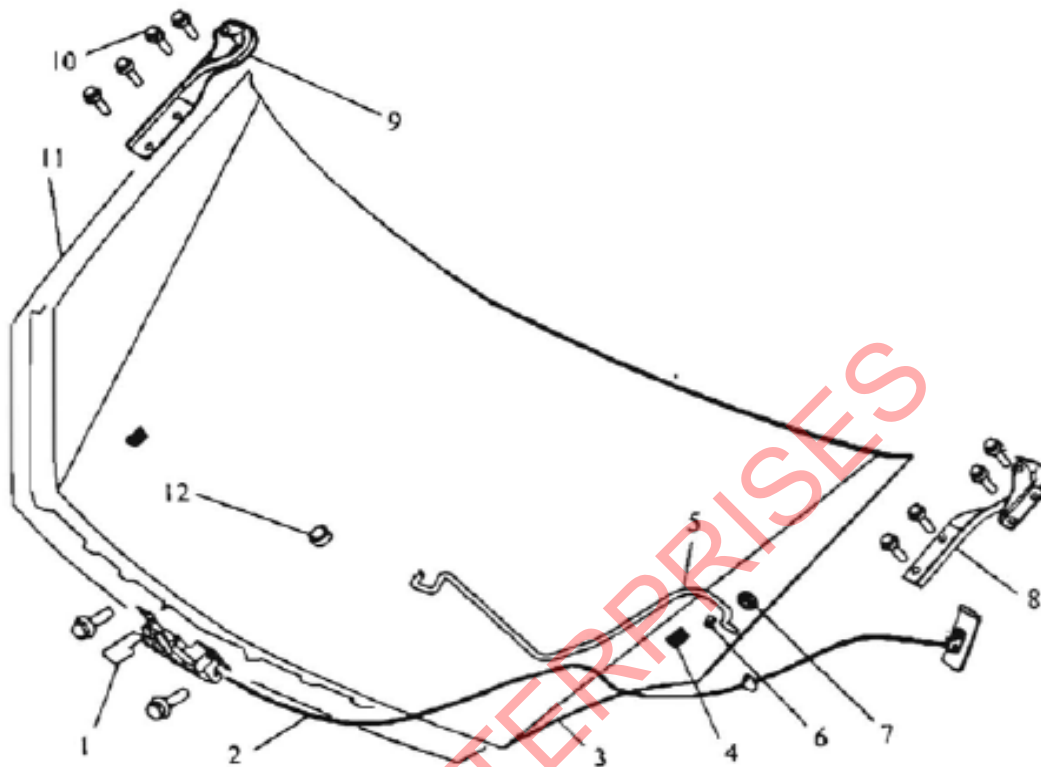


FIGURE 145 HOOD

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HOOD LOCK ASM	AC84021001	1	
	HOOD LOCK RELEASE			
2	CABLE	AC84022000	1	
3	HOOD OUTER PANEL	AC84022001	1	
4	PLUG	HFJ8402008EA	2	
5	HOOD SUPPORT BEAM	AC84020101	1	
6	CLIP	Q/2A-CJ-348	1	
7	CLIP	Q/2A-CJ-376	1	
8	HOOD HINGE ASM LH	AC84020102	1	
9	HOOD HINGE ASM RH	AC84020103	1	
10	BOLT	Q/2A-CJ-274-M6X20-8.8	10	
11	HOOD INNER PANEL	AC84020020	1	
12	PLUG	Q/2A-CJ-388	1	
13	HOOD ASM	G-AC8402001M-01	1	

GLB ENTERPRISES

FIGURE 146 CONSOLE

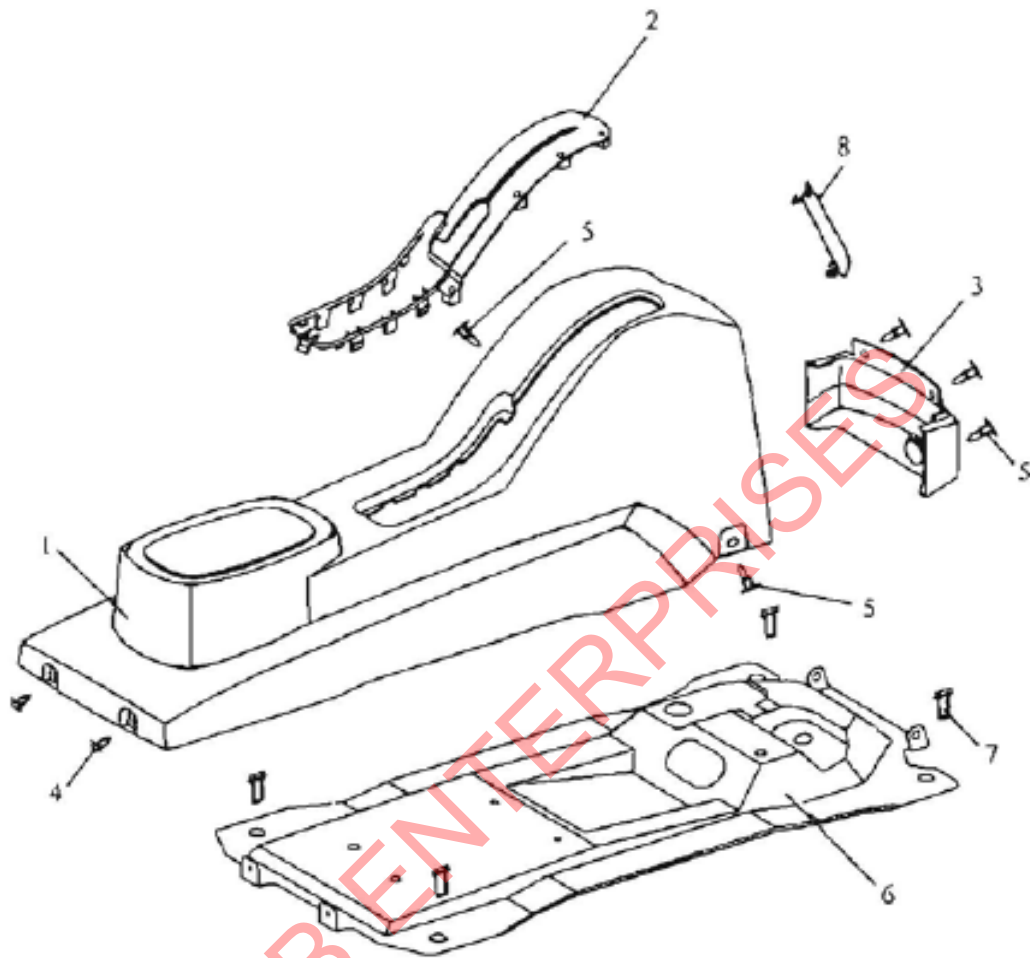


FIGURE 146 CONSOLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CONSOLE BOX	AC51000001	1	
2	CONSOLE BOX CAP	AC51000003	1	
	CONSOLE COVER BOX			
3	LOWER	AC51000007	1	
4	SCREW	Q/2A-CJ-47A-ST4.8X13	2	
5	CLIP	Q/2A-CJ-312	5	
6	COVER UPPER ASM	AC51070001	1	
7	BOLT	Q/2A-CJ-62-M8-X25	2	
8	ADJUSTING PLUG	AC51000009	1	

GLB ENTERPRISES

FIGURE 147 SPLASH BOARD (MUD FLAP)

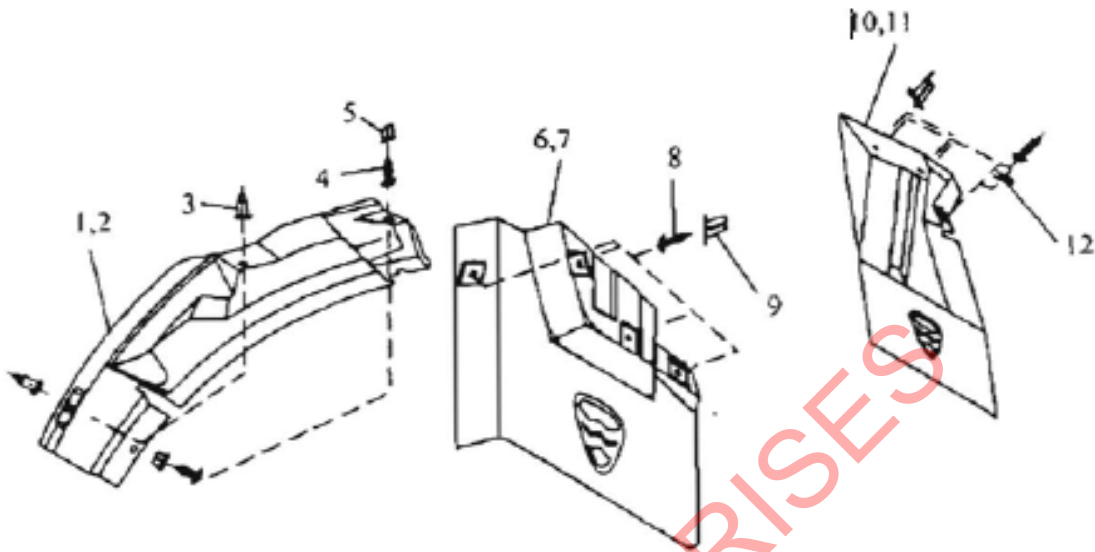


FIGURE 147 SPLASH BOARD (MUD FLAP)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT SPLASH BOARD UPPER LH	AC28023010	1	
2	FRONT SPLASH BOARD UPPER RH	AC28023020	1	
3	CLIP	Q/2A-CJ-312	4	
4	SCREW	Q/2A-CJ-104-4.2X16	4	
5	NUT	Q/2A-CJ-90A	4	
6	FRONT SPLASH BOARD BACK LH	AC28023030	1	
7	FRONT SPLASH BOARD BACK RH	AC28022020	1	
8	CLIP SPRING	Q/2A-CJ-143-5.0.8	2	

GLB ENTERPRISES

FIGURE 148 SAFETY BELT

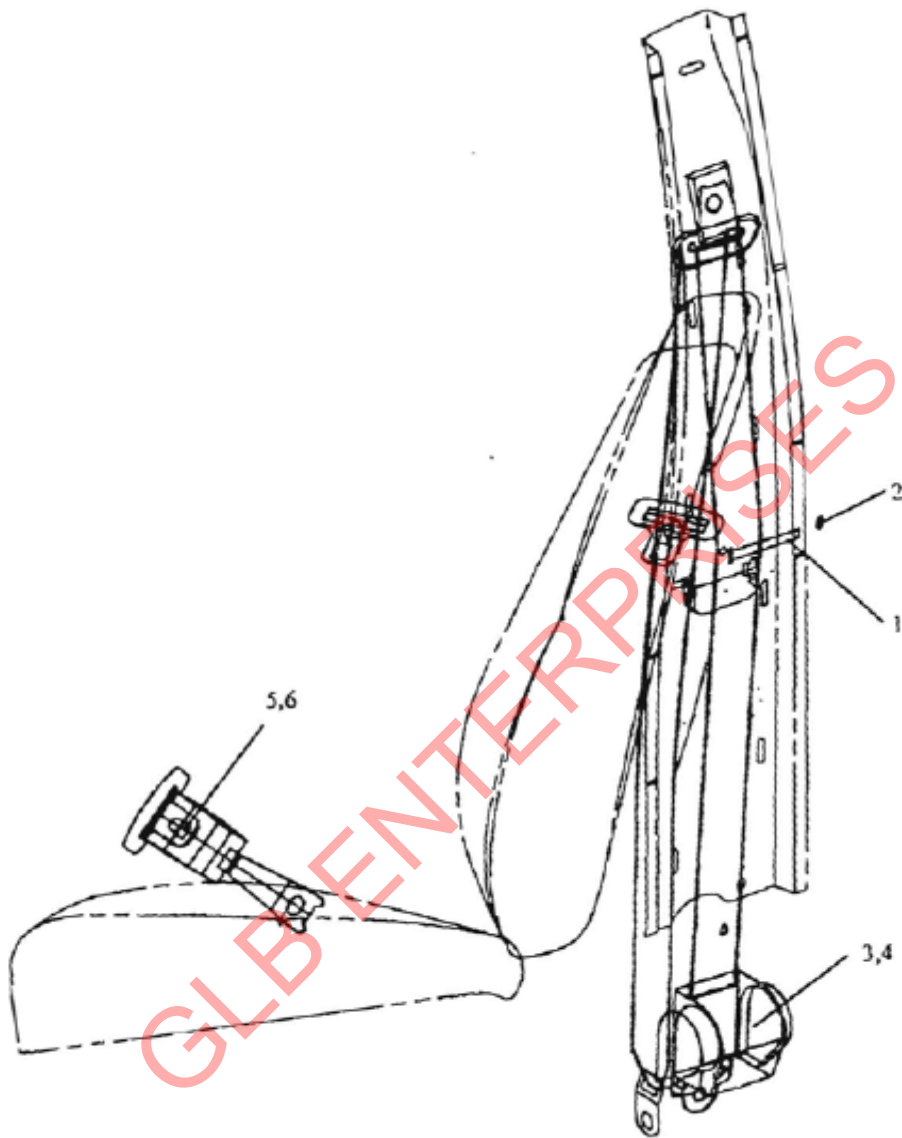


FIGURE 148 SAFETY BELT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	GUIDE AXES BELT	AB82120001	2	
2	SPRING BLOCK RING	Q/2A-CJ-110-5	2	
	FRONT SEAT BLET REEL			
3	ASM LH	AC82120100	1	
	FRONT SEAT BLET REEL			
4	ASM RH	AC82120200	1	
	SEAT BELT LATCH ASM			
5	LH	AC82120300	1	
	SEAT BELT LATCH ASM			
6	RH		1	

GLB ENTERPRISES

FIGURE 149 MIRRORS

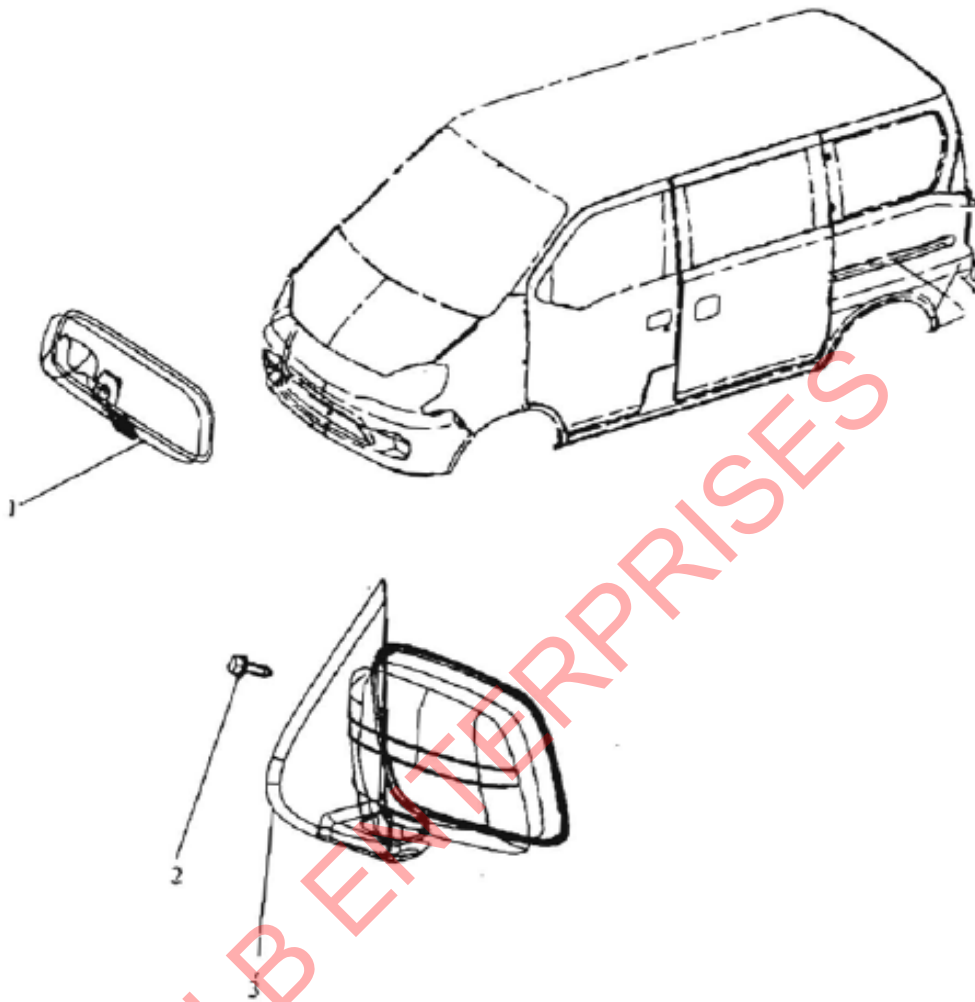


FIGURE 149 MIRRORS

NO	DESCRIPTION	PART NO.	ALL	NOTE
	INTERIOR REAR VIEW			
1	MIRROR	AC82010001	1	
2	SCREW	Q/2A-CJ-34-M6X12	6	
3	MIRROR O/S LH	AC82020001	1	
	MIRROR O/S RH	AC82020002	1	

GLB ENTERPRISES

FIGURE 150 PLUG INSTALL

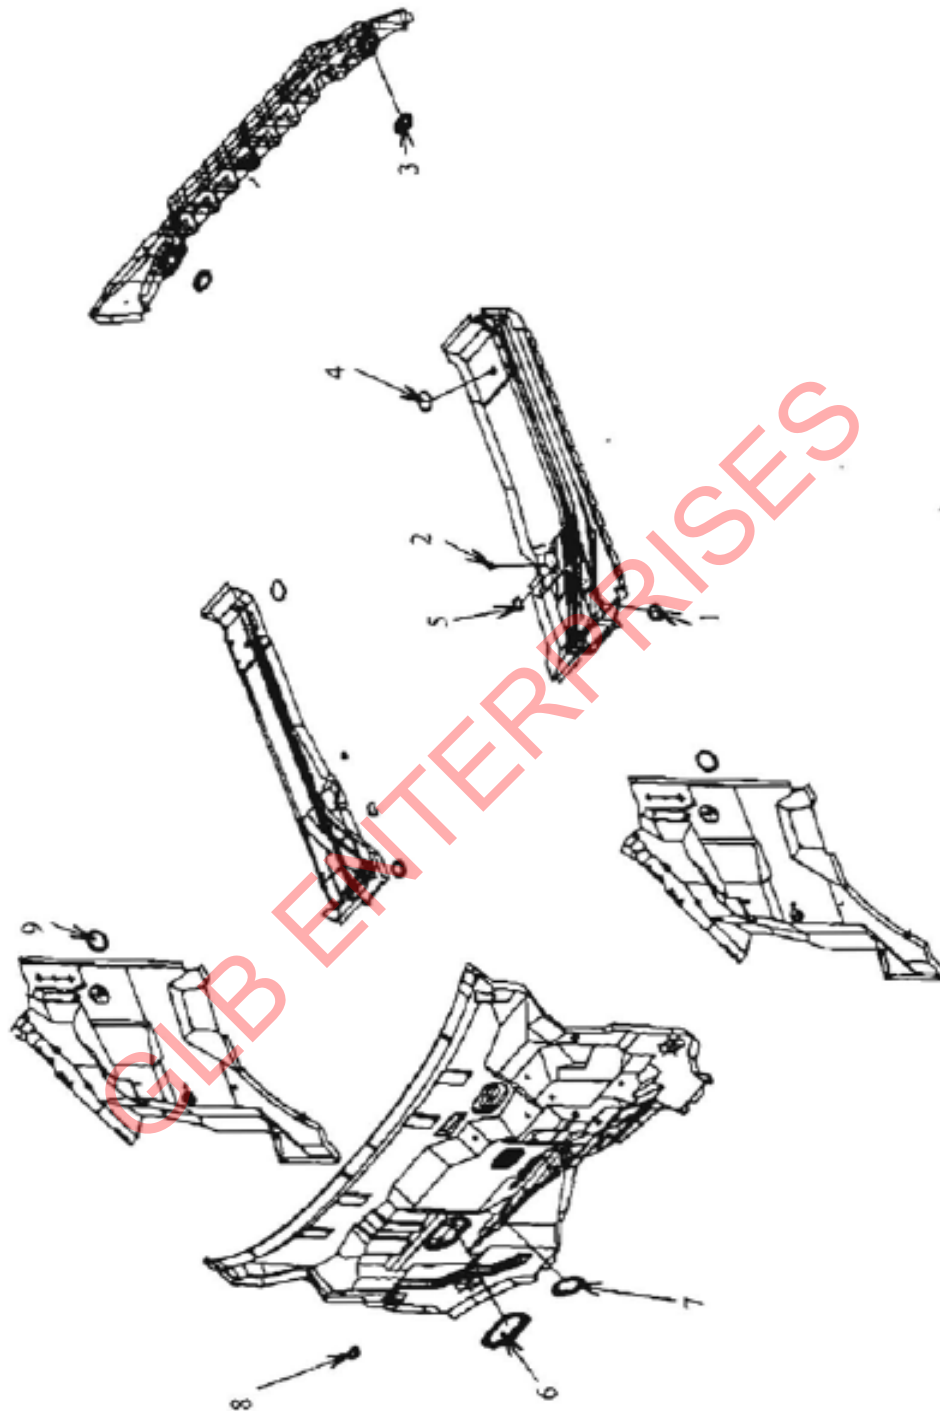


FIGURE 150 PLUG INSTALL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PLUG	HFJ5109104EA	2	
2	PAD	HFJ5400360EA	2	
3	PLUG	Q/2A-CJ-367	2	
4	PLUG	HFJ6200102EA	2	W/O MID SAFETY BELT
5	COVER	HFJ5400730EA	1	SPARE WHEEL ON FLOOR
6	PLUG	AC84009005	1	W/O AIR CONDITIONING
7	PLUG	AC84009006	1	
8	CANCEL BACK SYRINGE	Q/2A-CJ-341-2003	1	
9	PLUG	Q/2A-CJ-500-2003	2	MANUAL REGULATOR

GLB ENTERPRISES

FIGURE 151 TOW BAR

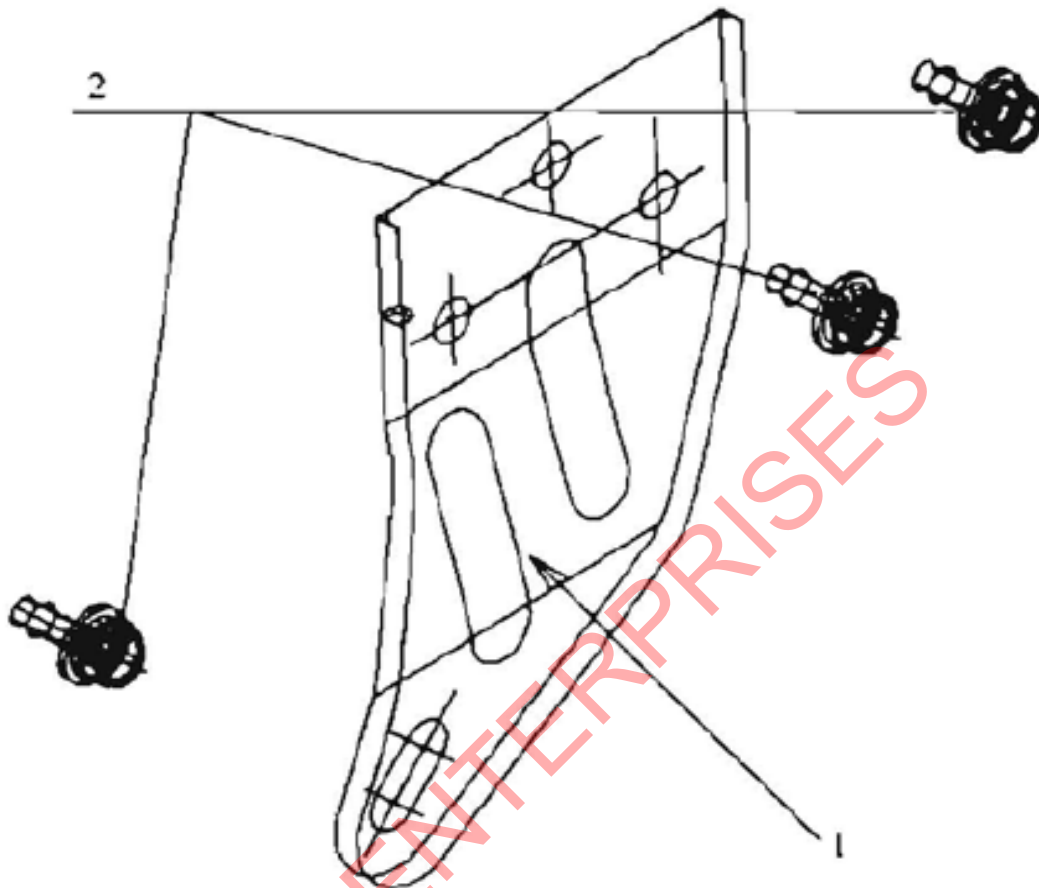


FIGURE 151 TOW BAR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TOW BAR	AC28010705	1	
2	BOLT	Q/2A-CJ-M10X1.25-8.8	3	

GLB ENTERPRISES